

coolpad

**Coolpad E570
User Manual**

A MESSAGE FROM COOLPAD

Thank you for purchasing your **Porto S E570** mobile phone! Please follow these simple - but *important* - instructions for optimal use of your new phone:

Before using your phone for the first time, please carefully read this User Guide, especially the safety information.

Note: Products or services of the vendor or carrier are subject to change within this User Guide without prior notice.

Application features and functions may vary among countries, regions or hardware specifications, and any third-party application malfunctions are the responsibility of those manufacturers.

Exercise caution when editing User Registration Settings as this may cause functional or compatibility problems for which Coolpad will not be responsible.

Most of all, we want you to thoroughly enjoy your new **Porto S E570** phone and get the most out of all of its remarkable features!

Please note that high volume can damage your ears.

Please note that absence of WiFi will use your data which could cost you amount of money according to your tariff with operator.

For more detailed information over features and safety precautions, please refer to User guide in the operating system and Safety and regulatory guide.

User guide app can be launched by tapping Porto S E570! icon on the Home screen.

For more detailed information on safety precautions, please refer to Safety and regulatory guide.

In the event of a problem, please use the included handbooks. If the problem persists, contact the vendor or visit our website www.coolpad.eu or contact us directly by email at Europe@coolpad.com for our local technical support.

TRADEMARKS AND COPYRIGHTS


Copyright © 2015 Coolpad Technologies Inc. All Rights Reserved. All materials in this document including, without limitation, the design, the text, and any and all marks (unless otherwise indicated) are the property of Coolpad Technologies, Inc. Coolpad and the Coolpad logo are registered trademarks of Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. Google, Android, Gmail, Hangouts, Google Play, YouTube and additional related marks are trademarks of Google Inc.

Note: Pictures shown are for illustration only and do not represent actual devices.

GETTING STARTED

Get off to a running start with your new **Coolpad E570!**

Device layout

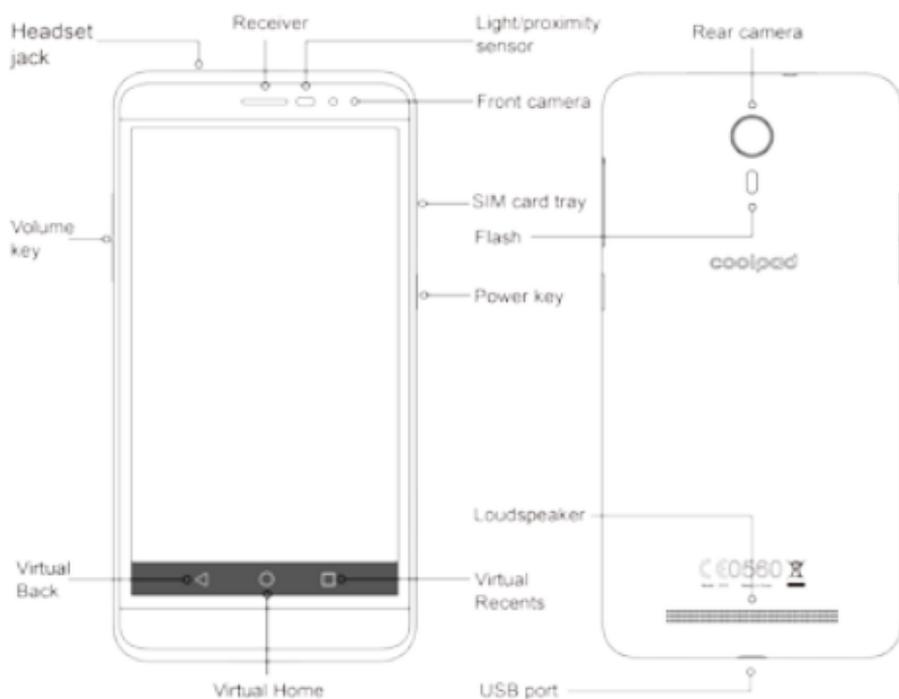

Main keys

Key	Function
 Power	<ul style="list-style-type: none">• Press and hold to turn your phone on or off.• Press to turn on or lock the screen.
 Recents	<ul style="list-style-type: none">• Tap to open the list of recent apps.
 Home	<ul style="list-style-type: none">• Tap to return to the Home screen.
 Back	<ul style="list-style-type: none">• Tap to return to the previous screen.
 Volume	<ul style="list-style-type: none">• Press to adjust the phone volume.


Charging the battery

1. Connect one end of the data cable to the USB port. This is located at the bottom of the phone.
2. Connect the other end to the travel adapter.
3. Connect the travel adapter to an electrical outlet to fully charge the phone.


Note:

- Use the travel adapter that comes with the phone; using other adapters may damage your phone.
- Charging your phone through a USB cable that is attached to a laptop takes more time than charging it with the travel adapter.
- The phone will power off automatically when the battery is too low. Charge the battery if this happens. When the battery is critically low, the charging status may not be displayed immediately (you must wait before it is displayed). Using the phone to play games or perform other activities during the charging process may cause the phone to power off due to low battery.
- The battery will gradually discharge if it is left unused for a long period of time. Before using the battery again, you must recharge it in order to power on and use your phone normally.

SIM card and Micro SD card

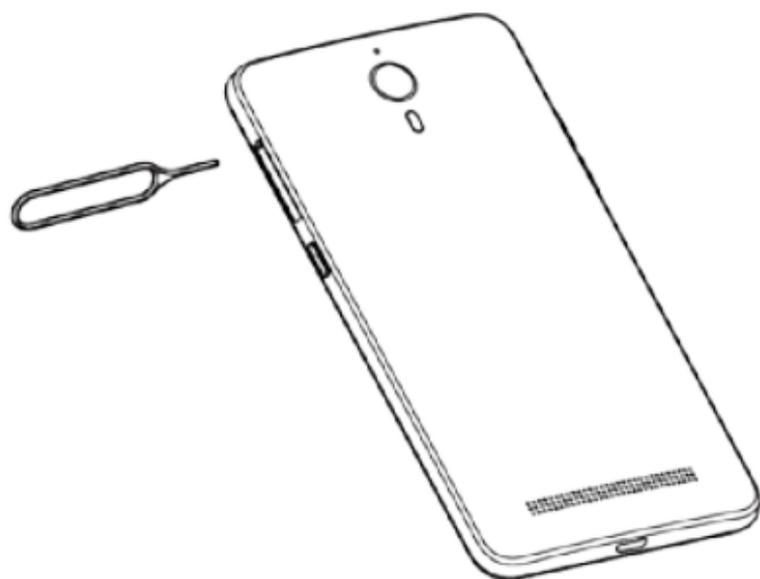

1. Insert the ejection pin into the hole to loosen the card tray.

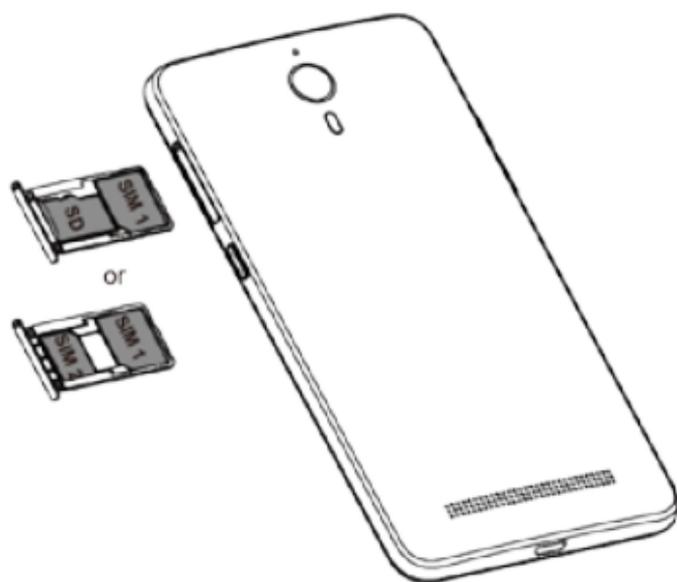

2. Pull out the card tray gently. Place the Micro SIM card on the card tray 1 and place Nano SIM card or Micro SD card on the card tray 2.

Power on/off, Restart and Aeroplane mode

The Power key is located on the upper, right-hand side of your phone.

Power on: When the phone is off, press and hold the Power key for a few seconds to turn on the phone.

Power off: When the phone is on, press and hold the Power key until the options pop up. Select Power off to turn off the phone.

Restart: When the phone is on, press and hold the Power key until the options pop up. Select Restart to restart the phone.

Airplane mode: When the phone is on, press and hold the Power key until the options pop up. Select Airplane mode and the phone will automatically disable all signal transmission.

Note: You can also tap  on the Home screen and then tap **Wireless & networks > More > Airplane mode**.

Locking/unlocking the screen

Locking the phone turns the screen off and prevents unintended operations. To lock the screen while using the phone, simply press the Power key. Also, if the phone is not used for a specified period of time, the screen turns off and automatically locks.

To unlock the screen, press the Power key to turn on the screen

and slide  up.

Note: Tap  > **Security > Screen lock > Pattern** to set the type of lock screen.

Touch screen

Tapping

To open an app or to launch other functions, tap it with your finger.




Tapping and holding

Tap and hold an item or the screen for more than 2 seconds to access available options.



Dragging

To move an item, tap and hold it and drag it to the target position.

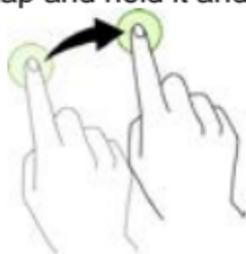

Double-tapping

Double tap on an image to zoom in. Double tap again to return.



Swiping

Swipe left or right on the Home screen to view other panels.



Spreading and pinching

Spread two fingers apart on a webpage or image to zoom in a part. Pinch to zoom out.



Home screen

Basic layout



Customizing your Home screen

The Home screen displays widgets, favorite apps, and more. To view other panels, swipe left or right.

On the Home screen, tap and hold an empty area to access the available options including changing wallpaper settings and add widgets.

- To add widgets, tap and hold an empty area on the Home screen, tap **Widgets** , tap and hold a widget, and then drag it to the Home screen.
- To move an app, tap and hold an item on the Home screen, and then drag it to a new location. To move the item to another panel, drag it to the side of the screen.
- To remove an item, tap and hold the item. Then, drag it to **Uninstall**  at the top of the screen.
- To create a folder, tap and hold an app, and then drag it over another app; drop the app when a folder frame appears around the apps; a new folder containing the selected apps will be created. To add more apps to the folder, tap and hold another app, and then drag it to the folder. To rename the folder, tap the folder and then tap the folder name.

Notifications and Quick Settings panel

Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as ongoing events.

- When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like the Wi-Fi signal, mobile carrier signal, or battery strength are on the right.
- Swipe down from the top of your phone screen to open the notification panel and view details.
- When you're finished with a notification, swipe it away. To dismiss all notifications, tap  at the bottom right of the notifications list.

Use Quick Settings to easily get to frequently used settings, like turning on aeroplane mode. To access the Quick Settings panel, swipe down from the top of your phone screen twice with one finger or once with two fingers.

To change a setting, just tap the icon:

- **Wi-Fi:**  Turn Wi-Fi on or off. To open Wi-Fi settings, tap the Wi-Fi network name.

- **Bluetooth:**  Turn Bluetooth on or off. To open Bluetooth settings, tap the word "Bluetooth".


- **Data usage:**  See cellular usage data

- **Data connection:**  Turn on or off cellular data.

- **Airplane mode:**  Turn airplane mode on or off. airplane mode means your phone won't connect to Wi-Fi or a cell signal, even if one is available.

- **Auto-rotate:**  Lock your device's orientation in portrait or landscape mode.

- **Flashlight:**  Turn the torch on or off.

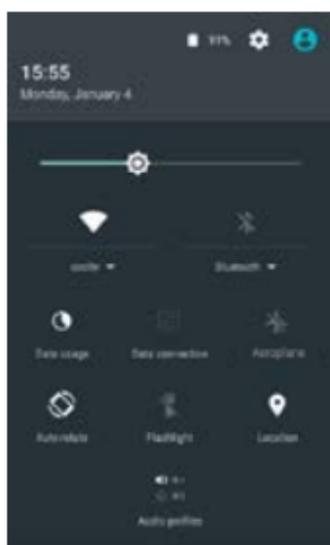

- **Location:**  Turn the location service on or off.
- **Display brightness:**  Slide to lower or increase the brightness of your screen.

Entering text

Using the text input panel



The input panel can be used to enter text. Tap the Back key to hide the input panel. Tap the text input area to open the input panel.

Switching input methods

Your phone comes with multiple text-input methods. You can choose one of them to input text.

1. To change your phone's default input method, tap  on the home screen.
2. Under **Personal**, tap **Language & input > Current keyboard**, and then select an input method.

Editing text

Tap and hold over text. Drag  or  to select the desired text. You can use the icons that appear on the top right of the screen to quickly edit the text.

- : Select all text.
- : Cut selected text.
- : Copy selected text.
- : Replace text with the text you previously cut or copied.

Taking screenshots

1. Focus on the image displayed on your phone screen.
2. Press the Power key and lower Volume key at the same time.
3. The image will be auto-saved in Photos.

APPS

Installing or uninstalling apps

To purchase and download apps, tap  to enter the Play Store.

Note: Apps can also be downloaded from web pages using the phone browser or third-party app download software.

Installing apps

Browse apps by category or tap  to search for a keyword. Select an app to view information about it. To download free apps, tap **Install**. To purchase and download apps where charges apply, tap the price and follow the on-screen instructions.

Uninstalling apps

On the home screen, tap and hold an app and then drag it to **Uninstall** at the top of the screen.

Note: Some pre-installed apps can't be uninstalled.

Phone

You can place calls from the Phone app, the Contacts app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually tap it to dial.

Making a call

1. Tap  on the Home screen.
2. Tap  to open the keypad and enter a phone number.
3. Tap  at the bottom of the screen to make a call.

Note: To avoid affecting the quality of the call, do not cover the receiver or speaker when making or answering a call.

Making a call from contacts list

1. On the Phone screen, tap **Contacts** to open the contacts list.
2. Tap a contact to make a call.

Making a call from recent calls

1. On the Phone screen, tap **Recents** to view recent calls.
2. Tap a call to make a call.

Speed dial

1. On the Phone screen, tap **Speed dial**.

2. Tap  > **Settings** > **Speed dial**.
3. Tap a number key and choose a contact from the list.
4. Tap the keypad, tap and hold the number key assigned to a contact to quickly call the contact.

Note: The number key 1 is the default key for voicemail. It can't be set as a speed-dial number.


Answering or rejecting a call

When a call comes in, there are various options available.

- To answer a call, slide  towards  on the right.
- To reject a call, slide  towards  on the left.
- To reject the call and send an SMS message to the caller,

slide  towards  on the top.

Note: When a call comes in, you can press the volume button to mute the ringtone. To create various rejection messages, tap

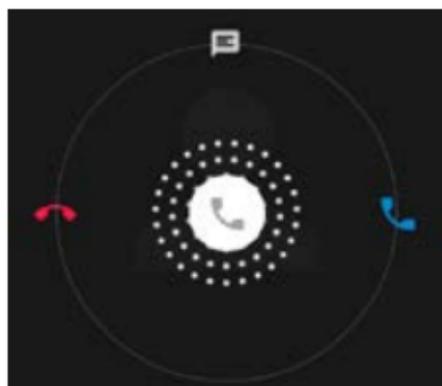

 > **Settings** >

General > **Other** > **Quick**

responses on the Phone screen to edit the messages.

During a call

During a call, you can do any of the following:

- **Speaker:** Activate the speakerphone to hear the caller on the loudspeaker (so you don't need to hold it to your ear).
- **Mute:** Turn off the microphone so that the other party cannot hear you.
- **Keypad:** Open the keypad and enter another number.
- **Hold:** Put the current call on hold.
- **Add call:** Dial a second call.
- **Start recording:** Record during a call
-  : End the current call.

Exploring recent calls

Recent calls contain your history of calls received, missed or made. It's an easy way to redial a number, return a call or add a number to your contacts.

1. Tap  to enter the Phone screen.

2. Tap **Recents** to view a list of your most recent incoming and outgoing calls.
3. Tap  and then choose **Call history** to see more calls. Arrow icons beside a call indicate the type of call, and multiple arrows indicate multiple calls:
 - Missed call 
 - Incoming call 
 - Outgoing call 

You have the following options for recent calls:

- Tap a number or contact, and then tap **Details** for more information about the call.
- Tap **Redial** to dial the number.
- Under **Details**, tap  to delete the call.
- Under **Details**, tap  > **Edit number before call**, to make changes to the call back number.

Contacts

The Contacts app easily saves all of your important contact information including contact names, numbers and email addresses.

Adding a contact

1. Tap  on the Home screen.
2. Tap  and enter the contact information.
3. Tap  to save it.

Note: To add a phone number to the contacts list from the keypad, enter the number and tap **Add to contacts**.

Managing contacts

Adding a contact to Favourites

1. On the Contacts screen, select the contact you want to add to Favourites.
2. Tap  at the top right of the contact name. The star will fill colour () to indicate that the contact has been added to Favourites.

Searching for a contact

1. On the Contacts screen, tap .
2. Enter keywords in the search box. Search results will be displayed below the search bar.

Note: You can also slide the scroll bar at the right of Contacts to quickly search for a contact.

Editing a contact

1. On the Contacts screen, select the contact you want to edit and then tap .
2. Edit relevant information and then tap  to save the contact. Alternatively, tap  > **Discard changes** to cancel your changes.

Deleting a contact

1. On the Contacts screen, select the contact you want to delete and then tap  > **Delete**.
2. Tap **OK** to confirm that you want to delete the contact.

Importing contacts from SIM card/storage

1. On the Contacts screen, tap  > **Import/export**, and select the corresponding option.
2. Select one or multiple contacts and tap **OK**.
3. On the pop-up window, tap **OK** to finish copying the contact(s).

Messaging

On the Home screen, tap  to enter the Messaging screen.

Creating a message

1. On the Messaging screen, tap .
2. Enter the recipient's number or you can tap  to select contacts.
3. Add your message. Tap  to attach media files such as photo, audio and slides.
4. Tap  to send the message.

Note: An SMS will be sent as an MMS when media files are added.

Replying to a message

1. On the Messaging screen, select the message you want to reply to.
2. Compose your message and tap  to send it.

Searching messages

1. On the Messaging screen, tap 
2. Enter message content or keywords to quickly search for the message you need.

Deleting a message

1. On the Messaging screen, tap and hold the message conversation you want to delete.
2. Tap  to delete the message conversation.

Customising message settings

On the Messaging screen, tap  > **Settings** to configure SMS, MMS, message notifications and other settings.

Email

Setting up & using Gmail


The Gmail app allows you to read and compose emails.

On the Home screen, tap  to enter the Gmail screen. Here Gmail has various uses. For instance, utilize your Gmail account for signing in to all Google apps & services including but not limited to:

- Google Play Music
- Google Play Store
- Google Drive

Getting familiar with your Email app

- On the Home screen, tap  to enter the Email screen. When using it for the first time, you need to enter your email address and password to configure an account.
- After your email account is configured, you can archive, delete, label, or perform other mail operations.
- Tap the icon on the left of a mail thread to select it.

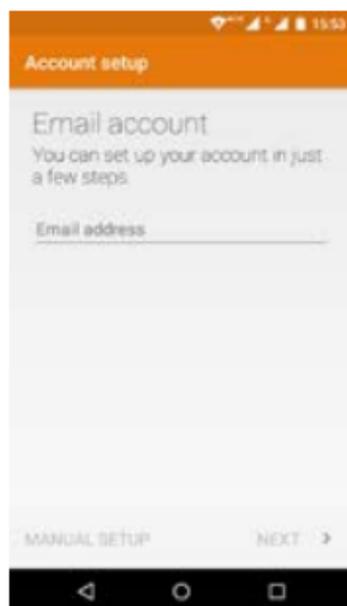

- After opening a mail, swipe to the left or right to read earlier or later mail conversations.
- Tap  at the top of your phone screen to manage your mails.
- On the Email screen, you can tap  > Settings to add a new email account.
- On the Email settings screen, tap an email account and customize your Email settings.

Chrome

On the Home screen, tap  to browse the Internet to search for information and bookmark your favourite webpages to access them conveniently.

Browsing web pages

1. Tap the address field
2. Enter the web address or a keyword to browse the web page.

Managing bookmarks

Adding a bookmark

1. Open the web page you want to bookmark.
2. Tap  > .
3. Enter the bookmark name and tap **Save** to add the bookmark.

Opening a bookmark

1. On the Chrome screen, tap  > **Bookmarks**.
2. Select the bookmark of the website you want to view.

Customising browser settings

1. On the Chrome screen, tap  > **Settings**.
2. On the Settings list, you can select menus to customise the browser.

Calendar

On the Home screen, tap  to enter the Calendar screen.

- If you have synced your Gmail account, the first time you open the Calendar app on your phone; it will show your current calendar events.
- To modify the Calendar view, tap  and choose **Schedule, Day, 3 Day, Week, or Month** from the top of the Calendar screen.
- View or edit event details by tapping an Event.



Camera

You can use your phone to shoot and share both photos and videos.

Taking a photo

1. On the Home screen, tap  to enter the Camera screen.
2. Focus on your subject by looking through your phone screen.
3. Tap  to take a photo.

Creating a video

1. On the Home screen, tap  to enter the Camera screen.
2. Tap  to start recording a video.
3. Tap  to stop when you finish recording.

Sharing a video or photo

1. On the Home screen, tap  to enter the Photos screen.
2. Select a video or photo and tap .
3. From the pop-up screen, select your desired sharing method.

Fotos

Find photos fast

When you open the Google Photos app, you'll see all the photos and videos on your device and, if you turned on "[back up & sync](#)," anything else synced to your Google Photos library.

1. Open the Google Photos app .
2. At the top left, touch the menu icon  > **Photos**.
3. You should see the photo you just took at the top. Try scrolling down to see what else is there.

Edit photos with filters

Add a filter

1. Open the Google Photos app .
2. Touch the photo you want to edit > pencil icon .
3. At the bottom, touch the photo icon .
4. Scroll through the filters at the bottom. Select a few to see how they look.

Tip: Adjust a filter's intensity by using the scale at the bottom.

5. At the bottom right, touch the checkmark .
6. At the top right, touch **SAVE**.

Share your photo with someone

1. The photo you just edited should still be on your screen. At the bottom left, touch the share icon .
2. Touch Get link.
3. Use a messaging or email app to send someone the link you just copied.

Clock

On the Home screen, tap  to enter the Clock screen. You can set alarms, check the current time in many cities around the world, set a specific duration or time an event.

Operating the alarm

On the Clock screen, tap  to switch to the Alarm tab.

1. Tap  and the time displayed to set your alarm.
2. Once your alarm is set, you may add a label to it.
3. Tick the **Vibrate** check box and choose your ringtone from the **Cesium** pop-up screen.

Calculator

On the Home screen, tap  to enter the Calculator screen. You can perform simple or complex calculations.

Swipe right or rotate the phone to landscape orientation to display the scientific calculator.

Downloads

On the Home screen, tap  to enter the Downloads screen. You can download files from Gmail or other areas.

- On the Downloads screen, tap an item to open it.
- Tap and hold an item until  appears, and then tap it to share the item through one of the many sharing methods.
- Tap and hold an item until  appears, and then tap it to delete the item.
- Tap  > **By name**, **By date modified**, or **By size** to sort the downloaded items.

YouTube

On the Home screen, tap  to enter the YouTube screen. You can watch the world's videos and keep up with your favorite YouTube channels. Sign in to access your subscriptions, playlists, uploads, purchases, history and more.

Sign in to YouTube

To sign in, go to  > **Sign in**. Select an existing account on your device, or go to **Add Account** to add a new account to your device.

Switch channels

If you have multiple channels associated with the same account, you can switch channels by signing out and signing in again. To

sign out, go to  > **Sign out**.

Watch videos

Tap a thumbnail to begin playing a video. Tap  in the video player to access additional viewing options.

- **Full screen:** To play the video in full screen, tap the full screen icon  or rotate your device horizontally.
- **Quality:** To manually adjust the video quality, tap  >  on a video.
- **Captions:** Enable captions on a video by selecting  > **CC** on a video. Not all videos may have closed captioning available.

Watch videos while browsing

Minimize the video to navigate the app without missing a single moment of the video you're currently watching. This way, you can browse suggestions, playlists, and more without pausing or stopping the video.

- **Minimize and maximize the player:** Swipe down to minimize the video player and continue navigating the app. Swipe upwards on the minimized video to maximize it again.
- **Dismiss the player:** Swipe left to right if you no longer want to view the minimized video

Playback settings

Limit cellular data usage by going

to  > **Settings** > **General** > **Limit cellular data usage**. When enabled, HD video will only stream on a Wi-Fi connection.

Google apps

Google provides entertainment, social media, and business apps. Google Play Store is all-in-one entertainment point with music, movies, books and apps on the web.

For more details, visit www.support.google.com/android.

SETTINGS

Wi-Fi

Connecting to a Wi-Fi network

1. On the Home screen, tap  to enter the Settings screen. Then, choose **Wireless & networks** > **Wi-Fi** to turn Wi-Fi on/off.
2. Drag the slider to **On** enabling your phone to scan for available Wi-Fi networks.
3. Tap the name of a desired network to connect, entering the password if necessary.

Note: Previously connected and saved networks will be automatically joined. A user can join a network and forget it, or remove it from the known networks list.

Adding a network

1. Tap  at the top right corner of the Wi-Fi screen. Then

- tap **Add network** in the pop-up window.
- Enter the SSID network name and select the correct security mode.
- Tap **Save**.

Setting advanced Wi-Fi options

On Wi-Fi screen, tap  > **Advanced**. You will be notified whenever a public network is available. If you do not want to be notified, drag the slider for **Network notification** to the left. To save your phone's data usage, your phone will remain connected to Wi-Fi when your screen sleeps.

Bluetooth

Your phone supports Bluetooth, which allows you to create a wireless connection with other compatible devices so that you can share data. Use Bluetooth to maximize awesome phone capabilities and functions.

Note: Bluetooth has a maximum reception distance of 10 metres. Keep devices connected by Bluetooth within 10 metres of each other. Obstacles like walls or other electronic equipment may interfere with Bluetooth signals.

Turning Bluetooth on/off

On the Home screen, tap  to enter the Settings screen. Then, choose **Wireless & networks** > **Bluetooth** to turn Bluetooth on/off.

Changing your phone's Bluetooth name

Your phone contains a random Bluetooth name which will be visible to other Bluetooth devices during connection attempts. You can change the random name to a more identifiable one.

- On the Bluetooth screen, tap  > **Rename this device**.
- Enter a new name and tap **Rename**.

Note: You can also change the name of the Bluetooth device as it appears on your phone. Tap  next to the connected Bluetooth device, enter a new name and tap OK to change the name.

Pairing your phone with other Bluetooth devices

You need to pair with a Bluetooth device before you can share data with it. Once a device is paired with your phone, it will

automatically connect to your phone whenever it is turned on.

1. Turn Bluetooth on and your phone will automatically scan for nearby Bluetooth devices.
2. If your phone stops scanning before other Bluetooth device is ready, tap  > **Refresh**.
3. Within the list, tap the ID of the Bluetooth device so as to pair with it.
4. Ensure that both devices show the same pairing code and tap **Pair**.

Note: If you want to unpair it, tap  next to the connected Bluetooth device and tap **Forget**.

Sending files via Bluetooth

With Bluetooth, you can share pictures, videos or music files with your family and friends.

1. In ES File Explorer application, tap and hold the file you want to send.
2. After the file has been selected, tap  > **Share**, on the options menu that pops up, select **Bluetooth**.
3. The screen will list the Bluetooth devices that have been found. Select the device you want to send the file to.

Data usage

On the Home screen, tap  to enter the Settings screen. Then, choose **Wireless & networks > Data usage >CU**.

- **Cellular data:** Set your phone to use data connections on any cellular network
- **Set cellular data limit:** Set a limit for cellular data usage.

You may limit the cellular data usage by following steps:

1. Drag the slider for **Set cellular data limit** to the right.
2. Drag the limit adjustment bar upwards or downwards to set the limit.
3. Drag the warning adjustment bar upwards or downwards to set a data usage alert level. Your phone will alert you when the warning level is reached.

Note: If you turn on Wi-Fi and the data service simultaneously, the phone will automatically use the Wi-Fi connection. If Wi-Fi is disconnected, the phone will use the data service to continue the data connection. Please note that absence of Wi-Fi will use your data which could cost you amount of money according to your tariff with operator.

Cellular networks

On the Home screen, tap  to enter the Settings screen. Under **Wireless & networks**, tap **More > Cellular networks**.

- **Data roaming:** Connect to data services when you are roaming.
- **Preferred network type:** With 4G/3G/2G available.
- **Access Point Names:** Set up access point names (APNs).

Tethering & portable hotspot

Use the device as a mobile hotspot to share the device's cellular data connection with other devices when the network connection is not available. Connections can be made via Wi-Fi, USB, or Bluetooth.

1. Tap  on the Home screen.
2. Under **Wireless & networks**, tap **More > Tethering & portable hotspot**.

Note: Using this function may incur additional data charges, depending on your data plan.

- **USB tethering:** Share your phone's cellular data connection via USB with a computer and use the computer to connect to the internet.
- **Wi-Fi hotspot:** Activate the Wi-Fi hotspot and share your phone's cellular data connection.
- **Bluetooth tethering:** Sharing your phone's data connection via Bluetooth.

Note: You can tap **Set up Wi-Fi hotspot** to set the name, security and password for the Wi-Fi hotspot. To protect your network, it is recommended that you secure it using WPA2 PSK.

Display

On the Home screen, tap  > **Device > Display** to change the brightness or font size settings and customize the wallpaper on your phone.

- **Brightness level:** Set the brightness of the display.
- **Wallpaper:** Change the background picture of the Home screen.
- **Screen timeout:** Set the screen sleep time. Your screen will automatically turn off if no operations are performed within

the time set.

- **Daydream:** When Daydream is on, your device displays photos, colours, and more while it is charging or docked. Set the daydream type or when to daydream. Tap the daydream switch to turn off this function.
- **Font size:** Set the font size according to your preference.

Sound

On the Home screen, tap  to enter the Settings screen.

Then, choose **Device > Sound & notification**. Tap  to enter the sound settings screen.

1. Drag the slider to adjust the **Alarm volume**, or **Ring volume**. You can also adjust the Ring volume by pressing the Volume key on the left side of your phone.
2. Tap **Phone ringtone**. Choose a desired ringtone for your phone.

Note: Please note that high volume can damage your ears.

Battery

On the Home screen, tap  to enter the Settings screen.

Then, choose **Device > Battery**. Here you may monitor how apps, other data and your phone system all consume battery power.

- Tap **Battery percentage**, the battery percentage icon shall appear on the status bar next to the battery level icon.

Note: The usage time left shows the time remaining before the battery power runs out. Usage time left may vary depending on your device settings and operating conditions.

- Prolong your phone battery life by turning on **Battery saver**.
1. On the Battery screen, tap  and then tap **Battery saver**.
 2. Drag the slider to **On**.

Note: Battery saver turns off automatically when your phone is charging.

Location

You can let your device access GPS, Wi-Fi networks, and Cellular networks to estimate your location. Apps that have your permission can use this information to deliver location-based services, such as the ability to check in, view commute traffic, or find nearby restaurants.

To control what location information your device can use, tap



> **Personal** > **Location**.

When the Location switch is on, you can do any of the following:

- Change the **Location mode** between **High accuracy**, **Battery saving** and **Device only**.
- View **Recent location requests**.
- Check the **Location services**.

Note: Using location access does make more demands on your battery. If you need to save battery life then you can turn it off, though when the switch is off, your device won't be able to find your precise location or share it with any apps.

Security

Setting a screen unlock pattern

You can set a screen unlock pattern. Once the screen has locked, it needs to be drawn correctly in order to unlock the screen.

- Tap  > **Personal** > **Security** > **Screen lock** > **Pattern**.
- Follow the onscreen instructions to draw the unlock pattern.
- Tap **Continue**.
- Draw the same unlock pattern again and tap **Confirm**.

Setting a screen unlock PIN

You can set a numeric PIN to unlock your phone. Once the screen has locked, it needs to be entered correctly in order to unlock the phone.

- Tap  > **Personal** > **Security** > **Screen lock** > **PIN**.
- Enter at least four-digit numbers.
- Tap **Continue**.
- Enter the same number again and tap **OK**.

Setting a screen unlock password

You can set a screen unlock password to unlock your phone.

- Tap  > **Personal** > **Security** > **Screen lock** > **Password**.
- Enter a password containing at least four characters.
- Tap **Continue**.
- Enter the same number again and tap **OK**.

Setting a screen unlock voice

You can set a screen unlock voice to unlock your phone.

- Tap  > **Personal** > **Security** > **Screen lock** > **Voice unlock**.
- Speak a command with 3-6 syllables, and then repeat 3-6 times.
- Tap **Continue**.
- Set a Pattern or Pin in case the voice unlock can't recognize you.
- Tap **OK**.

Accounts

Use the Accounts settings to add, remove, and manage your accounts, such as Exchange, Facebook, Google, Twitter and other supported accounts.

On the Home screen, tap  to enter the Settings screen. Then, choose **Personal** > **Accounts**. Under **Accounts**, you can see the accounts you already added or manage your accounts.

Adding an account

1. Tap **Add account**.
2. Select the kind of account to add.
3. Follow the onscreen instructions to enter the required information about the account.
4. Configure the account.
5. When you are finished, the account you configured is added to **Accounts**.

Backup & reset

On the Home screen, tap  > **Personal** > **Backup & reset** .

- **Back up my data:** Back up app data, Wi-Fi passwords and other settings to Google servers.
- **Backup account:** Set up or edit your Google backup account.
- **Automatic restore:** Set the device to automatically restore settings and app data from the Google server when apps are reinstalled.
- **Factory data reset:** Reset settings to the factory default values and delete all data.

Note: Before restoring factory settings, it is vital that you first back up all important data on the phone; otherwise all data will be lost after factory settings have been restored.

Date & time

On the Home screen, tap  > **System** > **Date & time**.

Automatic date & time: Use network-provided time.

Automatic time zone: Use network-provided time zone.

Set date: adjust the date manually.

Set time: adjust the time manually.

Select time zone: select the desired time zone from the list.

Scroll the list to view more time zones.

Use 24-hour format: switch between 24-hour format and 12-hour format.

Note: When your phone is using date and time settings provided automatically by the network, you cannot manually set the date, time and time zone.

System update

On the Home screen, tap  > **System** > **About phone** > **Wireless update**.

Auto check for update: Your phone will search for the latest software automatically once per 3 days. If you don't want to check for update automatically, please uncheck **Auto check for update**.

Download package via Wi-Fi: Your phone will download package automatically when Wi-Fi is available. Uncheck **Download package via Wi-Fi** to cancel download automatically.

Note: Upgrading your phone software will not affect your mobile phone data.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety information carefully to ensure that you use this wireless device in a correct and safe manner.

Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.

Address:

Coolpad Information Harbor, 2nd Mengxi Road, Hi-Tech Industrial Park (North), Nanshan District, Shenzhen, P.R.C

TECHNICAL DATA

Specs & hardware

Specifications		
Dimensions	143 x 72 x 7.6 mm	
Form factor	Bar	
Antenna	Built-in	
SIM card	Micro SIM or Nano SIM	
Network	GSM (900/1800/1900MHz) UMTS (900/2100MHz) LTE (800/1800/2100/2600MHz)	
Camera	Front 2MP + Rear 8MP	
Headset jack	Φ3.5mm CTIA standard	
Screen Parameters		
Type	Screen size	Resolution
IPS	5.0 inches	1280x720
Accessories		
Battery	Battery Type	Lithium Ion Polymer Rechargeable Battery
	Rated Capacity	2000 mAh
	Nominal Voltage	3.8 V

Note: The battery capacity is subject to update and change.

In-box contents

No.	Name	Quantity
1	Phone	1
2	Battery (built-in)	1
3	Travel Charger	1
4	USB Cable	1
5	Warranty Card	1
6	Quick Start Guide	1
7	Headphones	1

Note: The items supplied with the phone and any available accessories may vary depending on the region or service provider.

Declaration of hazardous substances

Parts Name	Toxic or hazardous substances or elements					
	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI (Cr (VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB Board and Accessories	○	○	○	○	○	○
Plastics	○	○	○	○	○	○
Metals	○	○	○	○	○	○
Battery	○	○	○	○	○	○
Other	○	○	○	○	○	○
○: indicates that the content of the toxic or hazardous substance in all homogeneous materials is within the limit of the SJ/T11363-2006 standard.						
x: indicates that the content of the toxic or hazardous substance in some homogeneous materials exceeds the limit of the SJ/T11363-2006 standard.						
 <p>The Environmentally Friendly Use Period of this product is 20 years, as shown by the symbol on the left. The Environmentally Friendly Use Period of replaceable parts, such as battery, may be different from that of the product. The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in this User Guide.</p>						

coolpad

Safety and
regulatory guide

Please read before proceeding

THE BATTERY IS NOT FULLY CHARGED WHEN YOU TAKE THE DEVICE OUT OF THE BOX.

Important health information and safety precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions.

Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

Electrical safety

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

Safety precautions for proper grounding installation

CAUTION: Connecting to improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

Safety precautions for power supply unit

- **Use the correct external power source**

A product should be operated only from the type of power source indicated on the electrical ratings label.

- **Be careful when using batteries**

This product contains a lithium-ion polymer or lithium-ion battery. In the event of improper handling of the batteries, there is a risk of a fire or burns. Do not attempt to open or repair the batteries. Do not disassemble, press, puncture, short circuit the batteries or throw them into a fire or water and do not expose the batteries to temperatures exceeding 45 °C.



WARNING: If you wish to prevent a fire or burns hazard, do not disassemble, press, puncture or short circuit the batteries or expose them to temperatures exceeding 45 °C or throw them into a fire or water. Recycle or dispose of used batteries in accordance with local directives or the reference handbook provided with the product.



- Keep the product dry and away from water or other liquids as this could result in a short circuit.
- The phone should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.
- Recommended operating ambient temperature is between 0 °C and 45 °C
- If dropped in water, make sure to turn off the mobile and send it to the local Certified Store/Repair centre immediately for repair. Do not attempt to dry it by using any heating equipment such as dryers, microwave ovens, etc.
- Prolonged phone calls, web surfing sessions and gaming may result in the phone warming up, especially when charging. This is normal phenomenon among modern smartphones.
- When charging the phone, do not use the phone close to your face when calling. Follow any other laws governing mobile phone usage.

Safety precautions for direct sunlight

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Safety in aircraft

If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

Environment restrictions

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Interference with the function of medical devices

This product may cause the malfunction of medical devices.

Hearing aids

Some digital wireless phones may interfere with some hearing aids.

In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Electrical safety

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only approved accessories.
- Do not connect with incompatible products or accessories.
- Seek professional advice when connecting a phone interface to the vehicle electrical system.
- Do not attempt to disassemble the phone or its accessory.
- Only qualified personnel must service or repair the phone or its accessory.

Place all accessories (such as SIM or USIM card, power adapter, etc.) out of children's reach to avoid choking hazards.

General precautions

You alone are responsible for how you use your phone and any consequences of its use. You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Avoid applying excessive pressure to the device
Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen.
Cracked display screens due to improper handling are not covered by the warranty.
- Always treat your phone and its accessories with care and keep them in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not drop, throw or try to bend your phone or its accessories.
- Store your phone or its accessories at temperatures between 0° C to 45° C.
- Please check local regulations for disposal of electronic products.

Damage requiring service:

- The product has been exposed to rain or liquid, dropped, subject to impact or damaged.

- There are noticeable signs of overheating.
- The product does not operate normally when you follow the ... operating instructions.
- Avoid hot areas.
- Avoid wet areas.
- Avoid using your device after a dramatic change in temperature. NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.
- Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.
- Turn down the volume before using headphones or other audio devices.
Please note that high volume can damage your ears.
- Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.
- Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.
- To minimise the risk of RSI, when Texting or playing games with your phone:
 - Do not grip the phone too tightly
 - Press the buttons lightly
- Do not touch the SIM card's metal connectors.
- This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.
- According to research, texting or talking on the phone while driving significantly increases the fatality risk

This product can be used in the following countries:								
AT	BE	BG	BIH	CH	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HR	HU	IT
LT	LU	LV	MT	NL	NO	PL	PT	RO
RS	SE	SI	SK					

SAR

This mobile device meets international directives for exposure to

radio waves.

The highest limit SAR has a value of 2.0 W/kg, the measured SAR value for this device is 1.250 W/kg

* SAR values differ in various countries, regions and testing conditions. Using accessories may result in different absorption values.

Mobile security and backup:

This device supports internet connection. Similarly to computers, it may be abused by viruses, damaging information or applications or other damaging content. Please open messages, receive connection requests, download content and accept requests for installation only from reliable sources. Please, regularly backup your information to prevent data loss; data may be lost during servicing.

Pacemakers

Persons with pacemakers:

- Must ALWAYS keep the phone at least 15 cm away from their pacemaker when the phone is turned on.
- Must not carry the phone in their breast pocket.
- Must use the ear farther away from the pacemaker to minimise possible interference. If you have any reason to suspect that interference is occurring, immediately turn off the phone.

WEEE notification



The WEEE logo (on the left) on the product or its packaging means that it must not be disposed of together with household waste. Electrical and electronic waste must be disposed of by being taken to a defined collection facility that manages the recycling of similar hazardous waste.

RoHS compliance

This product meets Directive 2011/65/EU of the European Parliament and Council from 08 July 2011 on the reduction of hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

TCCM s.r.o. hereby declares that this product conforms to the requirements and other relevant provisions of Directive 1999/5 EC. A copy of the Declaration of conformity is available at: www.coolpad.eu/support