

T Phone 3 Pro



Priručnik za korisnike
Crna Gora

O ovom uputstvu

Hvala vam što ste izabrali telefon T Phone 3 Pro. Kako bi ovaj uređaj stalno bio u optimalnom stanju, pročitajte ovo uputstvo i sačuvajte ga za ubuduće.


Sadržaj

1 Prvi koraci	3	4.3 Poruke	15
1.1 Pregled	3	4.4 Gmail	16
1.2 Podešavanje	4	4.5 Chrome	18
1.3 Početni ekran	6	4.6 Kalendar	18
1.4 Statusna traka	6	4.7 Kamera	19
2 O vašem telefonu	7	4.8 Slike	20
2.1 Uključivanje/isključivanje	7	4.9 Sat	20
2.2 Baterija	9	5 Google aplikacije	21
3 Personalizujte svoj telefon	9	6 Još aplikacija	23
3.1 Jezik	9	7 Pristupačnost	24
3.2 Datum i vreme	9	8 Bezbednost i privatnost	27
3.3 NFC	10	8.1 Zaključavanje ekrana	27
3.4 Ekran	10	8.2 Senzor otiska prsta	27
3.5 Pozadina	11	8.3 Otključavanje prepoznavanjem lica	27
3.6 Zvuk	11	8.4 Produženo otključano	27
3.7 Digitalno blagostanje i roditeljski nadzor	11	8.5 Šifrovanje i akreditivi	27
3.8 Pokreti	11	8.6 EID	26
3.9 Više korisnika	12	9 Nalog	28
3.10 Rezervna kopija i vraćanje na fabrička podešavanja	12	9.1 Informacije o nalogu	28
4 Aplikacije	13	9.2 Ažuriranje softvera	28
4.1 Pozivi	13	10 Bezbednosne i regulatorne informacije	29
4.2 Kontakti	14	11 Specifikacije	33
		12 Rešavanje problema	34

1 Prvi koraci

1.1 Pregled

Napomena: Senzor za otisak prsta nalazi se na dugmetu za uključivanje.

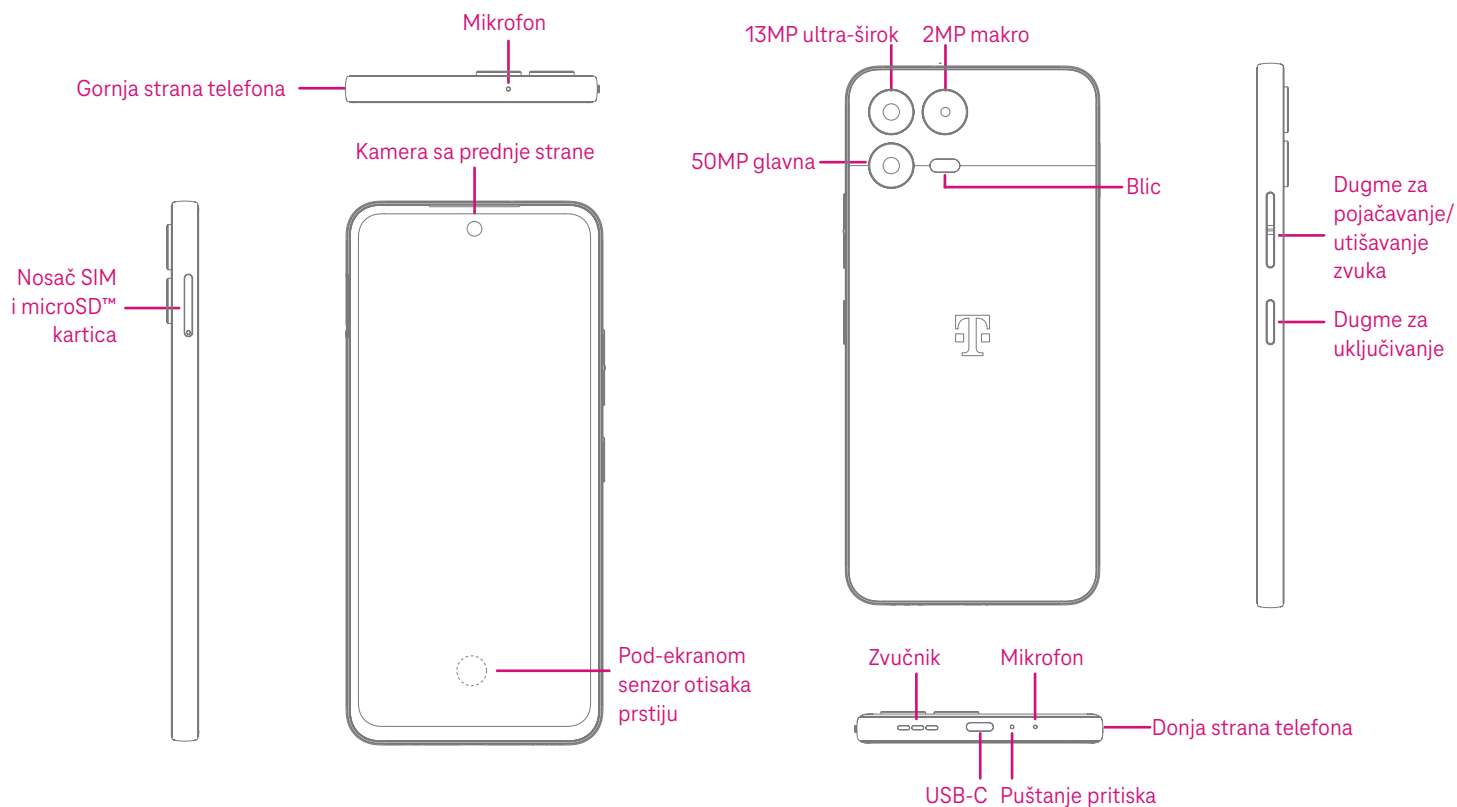

Dugme za uključivanje

- Brzo pritisnite i pustite da zaključate ili upalite ekran.
- Pritisnite i zadržite da pokrenete **Gemini**.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** da biste izabrali između **Hitan poziv**, **Zaključavanje**, **Ugasi** ili **Restartuj**.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Utišavanje zvuka** da biste napravili snimak ekrana i sačuvali ga.
- Pritisnite i zadržite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** najmanje 10 sekundi za prinudno restartovanje.
- Pritisnite dugme za **Uključivanje** dva puta da uključite **Kameru** ili **Perplexity**.

Dugme za pojačavanje/utišavanje zvuka

- Koristite dugmad za zvuk gore ili dolje da podesite jačinu zvona, jačinu tona tokom telefonskog poziva ili medija tokom slušanja muzike, gledanja videa ili puštanja sadržaja.
- Pritisnite dugme za pojačavanje/utišavanje zvuka tokom dolaznog poziva da utišate zvono.
- Dok koristite kameru, pritisnite dugmad za zvuk gore ili dolje da napravite fotografiju.

1.2 Podešavanje

Ubacivanje Nano SIM kartice

Da biste obavljali telefonske pozive preko vaše mreže morate da ubacite Nano SIM karticu.




Vaš telefon podržava samo Nano SIM kartice. Kako ne biste oštetili svoj telefon, ne pokušavajte da ubacite SIM kartice drugih vrsta kao što su Mini ili Mikro kartice.

Kako biste izvadili nosač SIM kartice, ubacite iglicu za SIM karticu koja se nalazi u pakovanju i potom lagano izvucite nosač



Ubacite ili izvadite Nano SIM karticu i microSD karticu u odgovarajuće mjesto kako je prikazano

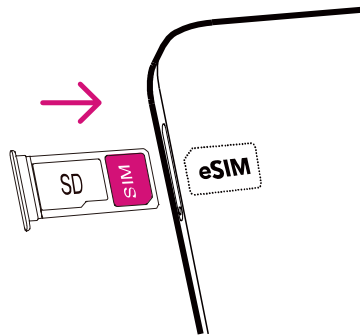

Napomena: Čak i kada SIM kartica nije ubačena, vaš telefon će se ipak uključiti i moći ćete da se povežete na Wi-Fi mrežu i koristite neke funkcije na telefonu.

Registrowanje eSIM kartice tokom prvog podešavanja uređaja ako imate QR kod za aktiviranje:

- Uključite uređaj i izaberite jezik
- Izaberite “Preuzimi eSIM”
- Povežite se na WIFI mrežu
- Izaberite “Preuzmi eSIM”, uključiće se Kamera i možete da skenirate QR kod
- Izaberite “Poveži se” tokom sljedećeg koraka da preuzmete eSIM

Registrowanje eSIM kartice nakon podešavanja uređaja ako imate QR kod za aktiviranje:

- Povežite se na WIFI mrežu ili mrežu mobilnih podataka
- Idite u **Podešavanja > Mreža i internet > SIM kartice**
- Izaberite “Preuzimi eSIM”
- Uključiće se Kamera i možete da skenirate QR kod
- Potvrdite preuzimanje
- Nakon preuzimanja idite u podešavanja i uključite SIM karticu

Brisanje eSIM kartice:

- Povežite se na WIFI mrežu ili mrežu mobilnih podataka
- Idite u **Podešavanja > Mreža i internet > SIM kartice**
- Isključite SIM karticu
- Izaberite “Izbriši SIM” i potvrdite brisanje

Podesite svoj telefon

Prvi put kada uključite telefon, trebalo bi da podesite sljedeće opcije:

- Dodirnite **English (United States)** da izaberete svoj jezik i dodirnite **Podešavanja za vid** da prilagodite funkcije pristupačnosti. Kada ste završili, dodirnite **Pokreni** na izvornom interfejsu da nastavite.
- Dodirnite **Android uređaj** ili **iPhone®** ili **iPad®** da kopirate postavke, račune i sve ostale, suprotno dodir **Preskoči**, preskači ovaj korak.
- Izaberite dostupnu Wi-Fi mrežu. Ili dodirnite **Podesi oflajn i Nastavi**.
- Podesite **Datum i vreme** da prilagodite ako je potrebno.
- Uključite  da biste telefonu dozvolili da koristi lokaciju, u suprotnom, isključite .
- Uključite  da biste dozvolili skeniranje, u suprotnom, isključite .
- Uključite  da biste dozvolili slanje korisničkih i podataka o dijagnostici, u suprotnom, isključite .
- Kliknite **Još** da nastavite i pritisnite **Prihvati**.
- Izaberite način navigacije, dodirnite **Navigacija pomoću pokreta** ili **Navigacija pomoću 3 dugmeta**.
- Podesite PIN za zaključavanje ekrana ili dodirnite **Preskoči** dva puta na ekranu da nastavite.

Magenta AI

Perplexity Asistent

Ovaj uređaj je opremljen digitalnim asistentom kompanije Perplexity, koji može da obrađuje glasovne komande, tekstualne unose, pa čak i vizuelne informacije preko kamere uređaja. Asistent, zasnovan na AI tehnologiji, vam je uvijek pri ruci i omogućava vam da komunicirate sa okolinom i sadržajem na ekranu na nove načine.

Kako pokrenuti Perplexity Asistenta:

- Kliknite dvaput na dugme za uključivanje na desnoj strani uređaja ili
- Pokrenite ga putem dugmeta  Magenta AI blizu sredine donjeg dijela zaključanog ekrana.

Da napustim asistenta, kliknite bilo gdje na gornjem polovini ekrana.


Za promjenu podešavanja:

- Idite na **Podešavanja > Sistem > Pokreti > Dupli klik na dugme za napajanje** da biste promijenili pokret dvostrukog klika na dugme za uključivanje na pokretanje kamere ili Perplexity Asistenta.
- Idite na **Podešavanja > Ekran > Zaključan ekran > Dugme Magenta AI** da biste omogućili ili onemogućili dugme Magenta AI na zaključanom ekranu uređaja.
- Za iskorištavanje punog potencijala Perplexity Asistenta (npr. Interakciju sa sadržajem na ekranu), idite na **Podešavanja > Aplikacije > Podrazumijevane aplikacije > Aplikacija digitalnog pomoćnika > Podrazumijevani digitalni pomoćnik** da izaberete **Perplexity** kao podrazumijevanog asistenta.

Kada je ovo postavljeno, pomoćnik Perplexity može biti otvoren putem dugog pritiska dugmeta za uključivanje uređaja.

1.3 Početni ekran

Radi brzog pristupa, na početni ekran možete da postavite sve stavke koje najčešće koristite (aplikacije, prečice, vidžete, foldere), a onda prevucite nagore sa dna ekrana da se vratite na Početni ekran.

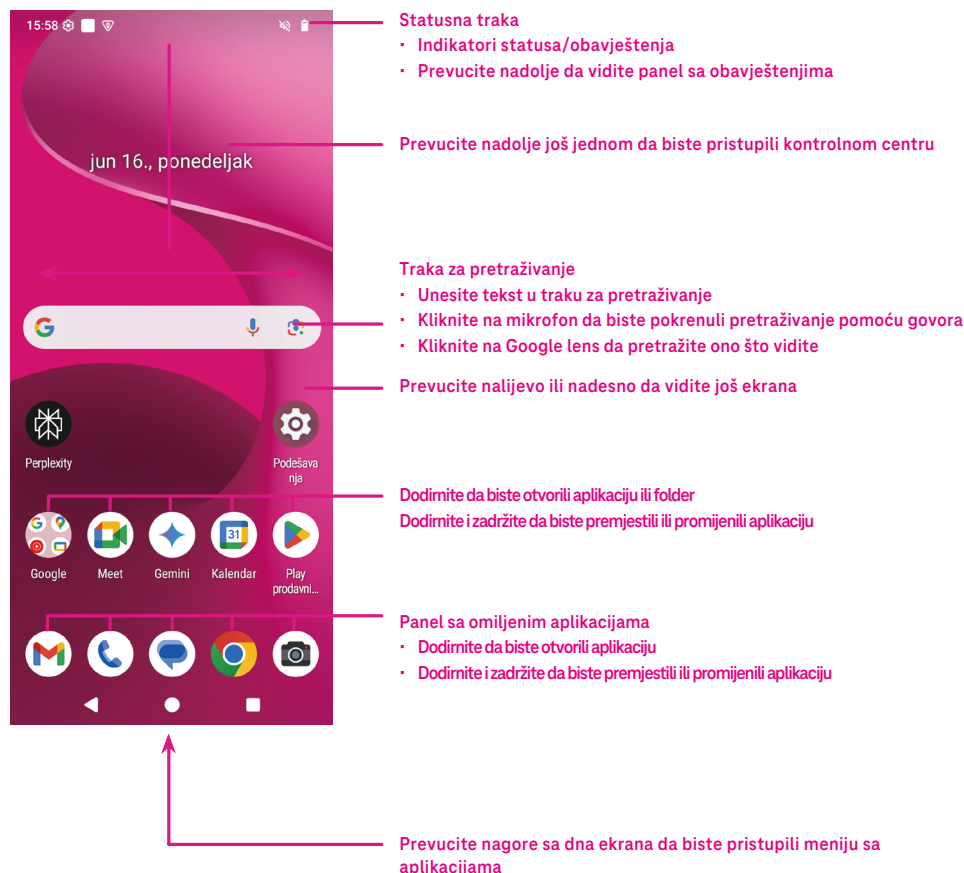

1.4 Statusna traka

Statusna traka se pojavljuje na vrhu Početnog ekrana i uključuje ikone koje označavaju status vašeg telefona i nova obavještenja.

Ikona	Status	Ikona	Status
	Wi-Fi® aktivan		Baterija (potpuno napunjena)
	Mreža (pun signal)		Nova poruka
	5G usluga podataka		Nećujni režim
	Način rada u avionu		Ne uznemiravaj
	Alarm		Nova Gmail poruka
	Baterija (puni se)		Snimač ekrana
	Bluetooth		NFC omogućen

2 O vašem telefonu

2.1 Uključivanje/isključivanje


Da biste uključili uređaj, zadržite dugme za Uključivanje dok se telefon ne uključi. Otključajte svoj telefon (koristeći ništa, prevlačenje, šablon, PIN, lozinku, otisak prsta ili prepoznavanje lica) ako je potrebno. Kada je otključan, prikazaće se Početni ekran.

Ako ne znate svoj PIN kod ili ste ga zaboravili, kontaktirajte Korisničku podršku. Radi bezbjednosti, nemojte da čuvate svoj PIN kod u telefonu.

Da biste isključili uređaj, pritisnite dugme za **Uključivanje** i dugme za **Pojačavanje zvuka** dok se ne pojave opcije, a potom izaberite **Isključi**.

Punjenje

Prikopčajte mali kraj kabla za punjenje u priključak za punjenje i uključite punjač u utičnicu.

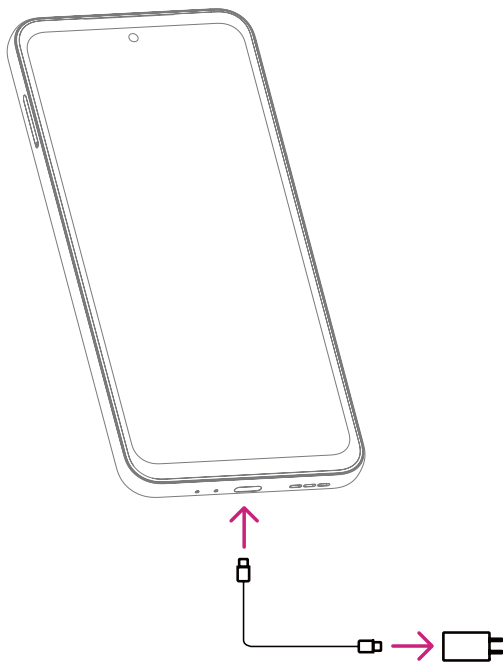

- Prikopčajte USB-C kabal u priključak za punjenje kako je prikazano.
- Uključite punjač u utičnicu.

Napomena: Molimo vas da koristite USB-C kabal koji se nalazi u kutiji.

Punjač se prodaje odvojeno. Korišćenjem pogrešnog kabla i punjača možete da oštetite priključak za punjenje ili smanjite učinak baterije.

Punjenje bežičnim punjačem

Postavite bežični punjač

- Pronađite odgovarajuće mjesto za svoj bežični punjač. Trebalo bi da ga postavite za ravnu, stabilnu površinu.

Povežite punjač

- Uključite bežični punjač u izvor električne energije koristeći kabal i adapter. Provjerite da li kabal prima napajanje.

Namjestite svoj uređaj

- Stavite svoj uređaj na bežični punjač. Kontakte za punjenje na uređaju poravnajte sa onima na punjaču radi optimalne efikasnosti punjenja.

Indikator punjenja


- Na mnogim bežičnim punjačima postoje LED indikatori koji pokazuju da li je vaš uređaj poravnat kako treba i da li se puni. Za konkretna značenja indikatora pogledajte uputstvo za upotrebu svog punjača.

Status punjenja

- Vaš uređaj bi trebalo da počne sa punjenjem odmah čim ga stavite na punjač. Status punjenja možete da provjerite na ekranu svog uređaja.

Završavanje punjenja

- Uređaj skinite sa bežičnog punjača kada je u potpunosti napunjen.

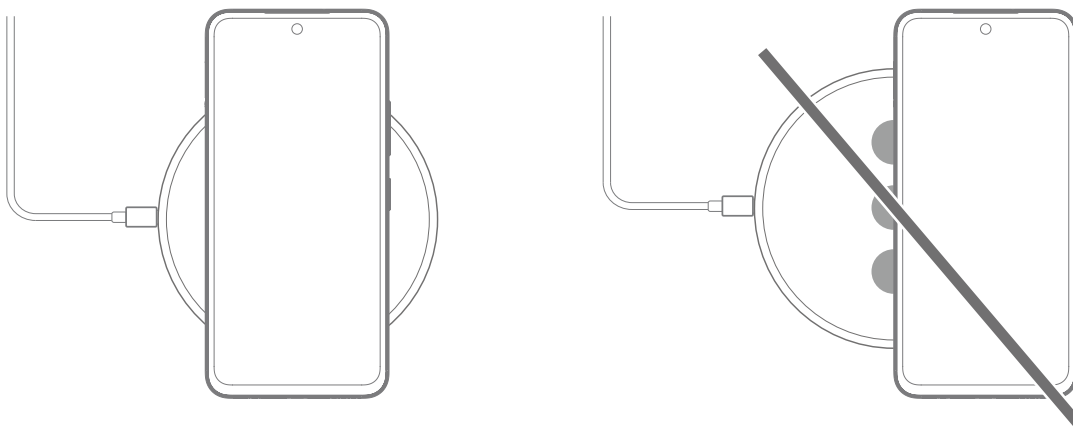

Napomena: Vodite računa da se uređaj za bežično punjenje ne isporučuje u pakovanju te ćete uređaj za bežično punjenje morati da kupite posebno. Provjerite da li je punjač kompatibilan sa zahtjevima i standardima za punjenje vašeg uređaja.

Važne napomene za bežično punjenje

Efikasnost punjenja

- Bežično punjenje može biti nešto sporije od žičnog punjenja, u zavisnosti od punjača i uređaja.

Udaljenost punjenja

- Da bi punjenje bilo efikasno, vodite računa da nema prepreka između vašeg uređaja i bežičnog punjača.

Pozicioniranje uređaja

- Pravilno poravnanje vašeg uređaja na punjaču je neophodno za efikasno punjenje.

Temperatura

- Izbjegavajte izlaganje uređaja i punjača ekstremnim temperaturam jer to može uticati na performanse punjenja.

Kompatibilnost uređaja

- Provjerite je li vaš uređaj kompatibilan sa bežičnim punjačem koji ste kupili.

Diskusija garancije za wireless punjenje

Molim vas, primijetite da se wireless punjenje uređaja ne uključuje u kutiju sa vašom kupovinom. - Bilo kakvog wireless punjenja koje dobijete odvojeno je pod proizvođačkom nalogu i uslovima. . Nismo odgovorni za bilo kakve probleme ili oštećenja vezane sa upotrebom trećih stranih wireless punjenja. - Budite sigurni da pregledate garanciju i termine od strane proizvođača punjenja za podršku i naslov.

Po daljnju pomoć ili pitanja vezane sa wireless punjenjem uređaja, molim vas da se obratite proizvođaču vašeg

wireless punjenje.

2.2 Baterija

Aktivirajte ova prilagođavanja kako bi životni vijek baterije bio optimalan.

Uključite režim uštede baterije

- Idite na **Podešavanja > Baterija > Ušteda baterije**.
- Uključite **Koristi Uštedu baterije** da aktivirate režim uštede baterije.

Napomena: Režim uštede baterije neće biti aktiviran tokom punjenja.

Smanjite jačinu osvijetljenosti ekrana

- Idite na **Podešavanja > Ekran > Nivo osvetljenosti**.
- Smanjite osvijetljenost prevlačenjem  ulijevo.

Vremensko ograničenje ekrana

- Idite na **Podešavanja > Ekran > Gašenje ekrana**.
- Izaberite trajanje vremenskog ograničenja ekrana.

3 Personalizujte svoj telefon

3.1 Jezik

Izaberite između više jezika koje vaš telefon podržava.

- Idite u **Podešavanja > Sistem > Jezici > Jezici sistema**.
- Dodirnite **+ Dodaj jezik** da izaberete jezik iz liste.
- Dodirnite i zadržite  pored jezika koji želite i prevucite ga na vrh liste.

3.2 Datum i vreme

Idite na **Podešavanja > Sistem > Datum i vrijeme**.

Podesite vrijeme automatski

Uključite  da koristite vrijeme koje pruža mreža.

Ako izaberete Isključeno, možete ručno da podesite datum i vrijeme:

- Dodirnite **Datum** da otvorite dijalog u kojem možete ručno da podesite datum.
- Dodirnite **Vreme** da otvorite dijalog u kojem možete ručno da podesite vrijeme.

Podesite automatski

Uključite  da omogućite vremensku zonu koju pruža mreža. Možete i da uključite opciju **Koristi lokaciju** za podešavanje vremenske zone da dozvolite da se vrijeme na telefonu poklapa sa lokalnim vremenom.

Ako je Automatska vremenska zona isključena, vremensku zonu možete ručno da podesite:

- Dodirnite **Vremenska zona** da ručno izaberete region i vremensku zonu.

Koristite lokalno zadato

- Uključite  da omogućite lokalno zadato.

- Ako je isključena opcija **Koristi podrazumijevanu vrijednost za lokalitet**, možete da uključite  da omogućite **Koristi 24-časovni format**.

3.3 NFC

NFC omogućava bezbjedne transakcije bez kontakta, omogućavajući pametne telefone da prenose šifrovane plaće. Da uključite, idite na **Podešavanja > Povezani uređaji > Podešavanja veze > NFC** > uključite  da biste aktivirali.

3.4 Ekran

Prilagodite podešavanja ekrana i pozadina kako bi vam iskustvo bilo optimalno.

Idite na **Podešavanja > Ekran** da promijenite sljedeća podešavanja.

Zaključan ekran

Prilagodite šta se prikazuje na vašem zaključanom ekranu.

Tamna tema

U tamnoj temi se koristi crna pozadina i to pomaže da baterija duže traje na nekim ekranima.

Noćno svetlo

U ovom režimu boja vašeg ekrana dobija žutu nijansu. Time se olakšava gledanje u ekran ili čitanje pri slabom svjetlu i može da vam pomogne da lakše zaspate.

Kontrast boja

Veći kontrast ističe tekst, dugmad i ikone. Izaberite kontrast koji vam izgleda najbolje.

Automatsko rotiranje ekrana

Izaberite da li će se ekran automatski okretati ili ne.

Napomena: Korišćenjem vašeg uređaja u pejzažnom položaju dok nosite polarizovane naočare za sunce može blokirati svjetlo na ekranu.

Skinite polarizovane naočare za sunce ili uređaj koristite u portretnom položaju kako bi nastavili sa upotrebom.

Tečni prikaz

Automatski podiže učestalost osvežavanja do 120 Hz za određeni sadržaj. Povećava potrošnju baterije.

Čuvar ekrana

Čuvar ekrana je automatski aktivan kada se uređaj puni, pokazuje prilagodljive vizuele za poboljšanu korisnost.

Podigni za aktivaciju

Podignite uređaj da se odmah probudi, dozvoljavajući brz pristup obavijestima ili vremenu bez pritiskanja dugmića.

3.5 Pozadina

- Dodirnite Fotografije kako biste izabrali između fotografija sačuvanih na vašem uređaju.
- Dodirnite **Podešavanja > Pozadina i stil** da promijenite pozadinu svog zaključanog i/ili početnog ekrana koristeći unaprijed dodate fotografije.

3.6 Zvuk

Podešavanje jačine zvuka

- Pritisnite dugmad za pojačavanje/utišavanje zvuka koja se nalaze sa desne strane uređaja kako biste podesili jačinu zvuka za medije, poziv, zvono, obavještenja i alarm.
- Takođe možete da odete na **Podešavanja > Zvuk i vibriranje** kako biste podesili jačinu zvuka za medije, pozive, zvono, obavještenja i alarme.

Podešavanje tonova

Idite na **Podešavanja > Zvuk i vibriranje > Zvuk zvona telefona**.

Podešavanje ostalih zvukova

Svi drugi zvukovi koji su u vezi sa tastaturom telefona, zaključavanjem ekrana, punjenjem i dodirivanjem i kliktanjem mogu da se podese na sljedeći način:

Idite na **Podešavanja > Zvuk i vibriranje**.

3.7 Digitalno blagostanje i roditeljski nadzor

- Idite na **Podešavanja** i dodirnite **Digitalno blagostanje i roditeljski nadzor** da saznate koliko vremena ste proveli na telefonu pa čak i u svakoj aplikaciji. Možete da prilagodite vremensko ograničenje za korišćenje telefona.
- Pored toga, roditelji mogu da ograniče vrijeme korišćenja telefona za svoju djecu i da kontrolišu njihove navike pregledanja.

3.8 Pokreti

Kretanje kroz sistem možete da promijenite tako što ćete otići u **Podešavanja > Sistem > Pokreti > Režim navigacije** i onda da izaberete jednu vrstu kretanja.

Navigacija pomoću pokreta

Dodirnite **Navigacija pomoću pokreta** da uključite različite pristupe različitim interfejsima prevlačenjem preko ekrana.

- Idite na interfejs nedavno korišćenih aplikacija: prevucite nagore sa dna ekrana i zadržite.
- Idite na početni ekran: prevucite nagore sa dna ekrana.
- Idite nazad: prevucite ili sa lijeve ili desne ivice ekrana.

Navigacija pomoću 3 dugmeta

Dodirnite **Navigacija pomoću 3 dugmeta** da prikazete sljedeću dugmad u dnu ekrana.

■ Dugme za nedavno korišćene aplikacije

- Dodirnite da biste vidjeli nedavno korišćene aplikacije. Prevucite nagore na ekranu da sklonite konkretan umanjeni prikaz iz liste ili prevucite skroz nalijevo i dodirnite **Obriši sve** da sklonite sve umanjene prikaze iz liste.
- Pritiskom na Nedavno korišćene aplikacije takođe se omogućava pristup **Snimak ekrana**. Dodirnite **Snimak ekrana** da odmah napravite snimak onoga što je na ekranu.

● Dugme za Početni ekran

- Dok ste u bilo kojoj aplikaciji ili ekranu, dodirnite da se vratite na Početni ekran.
- Dodirnite i zadržite da pokrenete Gemini pomoću kog možete da potražite informacije na internetu, otvorite aplikacije na svom telefonu ili da pošaljete poruke.

◀ Dugme za kretanje nazad

Dodirnite da biste se vratili na prethodni ekran ili da biste zatvorili polje za dijalog, meni sa opcijama ili panel sa obavještenjima.

3.9 Više korisnika

Svoj telefon možete da podijelite sa drugim korisnicima tako što ćete otići u Podešavanja > Sistem > Više korisnika i uključiti . Vidjećete sljedeće ponuđene opcije.

- Vi (Vlasnik): Dodirnite i možete podesiti podatke o svom profilu.
- Dodaj korisnika: Dodirnite da kreirate novog gosta i dovršite ostala podešavanja.
- Dodaj gosta: Dodirnite da dodate novog korisnika i dozvolite mu da podesi svoj prostor.

Napomena: Dodirnite Dodaj korisnike sa zaključanog ekrana da dozvolite dodavanje korisnika na zaključanom ekranu.

3.10 Rezervna kopija i vraćanje na fabrička podešavanja

- Da prebacite podatke sa svog telefona na drugi, idite u **Podešavanja > Sistem > Rezervna kopija**, a onda morate da kliknete na Dodaj nalog da podesite svoj nalog za rezervnu kopiju.
- Da izbrišete sve podatke sa svog uređaja, idite u **Podešavanja > Sistem > Opcije za resetovanje > Obriši sve podatke (fabrička podešavanja) > Obriši sve podatke > Obriši sve podatke**.

4 Aplikacije

4.1 Pozivi

Pozivanje

- Da obavite poziv, dodirnite **Telefon**  .
- Prijedlozi brojeva telefona se prikazuju dok kucate brojeve na brojčaniku.
- Unesite željeni broj putem brojčanika i dodirnite  da uputite poziv. Takođe možete da izaberete kontakt iz **Omiljeni**  , **Nedavno**  , **Kontakti**  , **dodirom na kartice**.
- Broj koji unesete može da se sačuva u Kontakte dodirom na **Napravi novi kontakt**.
- Ako pogriješite, pogrešne cifre možete da obrišete dodirom na .
- Da završite poziv, dodirnite .

Međunarodni pozivi

Da obavite međunarodni poziv, dodirnite i zadržite  da unesete +, potom unesite međunarodni pozivni broj poslije kog slijedi cijeli broj telefona i onda dodirnite  .

Pozivanje brojeva za hitne slučajeve

Ako je vaš telefon u dometu mreže, unesite broj za hitne slučajeve i dodirnite  .

Javljanje na pozive ili odbijanje poziva



Kada primate poziv:

- Prevucite  nagore da se javite.
- Prevucite  nadolje da odbijete.
- Dodirnite  **Poruka** da odbijete poziv slanjem unaprijed određene poruke.
- Da isključite zvuk zvona dolaznog poziva, pritisnite dugme za pojačavanje/utišavanje zvuka.

Glasovna pošta

Govorna pošta funkcioniše poput telefonske sekretarice za propuštene pozive.

- Da biste pristupili govornoj pošti, dodirnite i zadržite 1.
- Da odredite svoj broj govorne pošte: dodirnite **Telefon**  i idite u meni  > **Podešavanja** > **Govorna pošta** > **Napredna podešavanja** > **Podešavanje** > **Broj govorne pošte**.

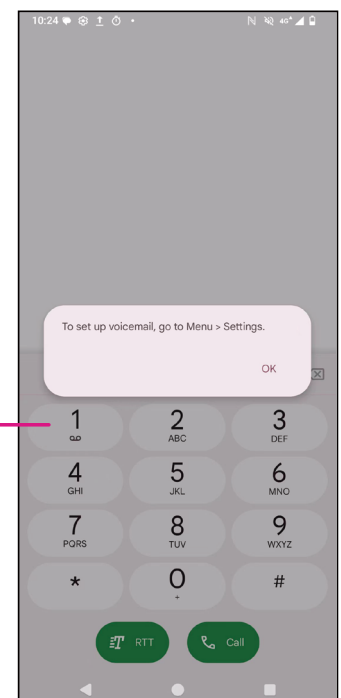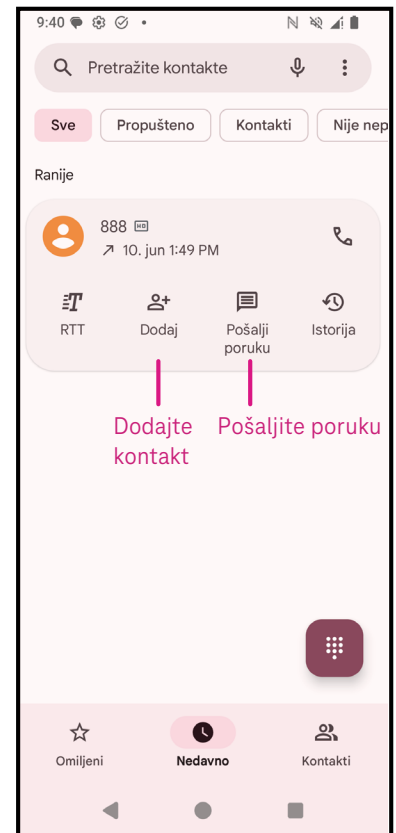

- Ako primite glasovnu poštu,  pojavljuje se na statusnoj traci. Otvorite panel sa obavještenjima i dodirnite **Govorna pošta**.

Tekst u realnom vremenu (RTT)

RTT pomaže pozivatelju koji su gluvi, imaju problema sa sluhom, imaju invaliditet govora, ili je potrebno više od samog glasa.

- Dodirnite **Telefon**  i otidite u  > **Podešavanja** > **Pristupačnost** > **Tekst u realnom vremenu (RTT)** da postavimo tekst u realnog vremena (RTT).
- Nakon što je omogućilo RTT, pokazaće pozivač interfejs  kliknući na to aktivira se polje za unos teksta u toku poziva.

4.2 Kontakti

Kontakti omogućavaju brz i lak pristup kontaktu kojeg želite da kontaktirate.

Da biste pristupili ovoj funkciji, dodirnite Kontakti  u meniju Aplikacije.

Možete da pregledate i kreirate kontakte na svom telefonu i da ih sinhronizujete sa Gmail kontaktima ili drugim aplikacijama na internetu ili na svom telefonu.



Dodavanje kontakta

- Dodirnite  na listi kontakata da kreirate novi kontakt.
- Unesite ime kontakta i druge podatke o kontaktu. Prevlačenjem ekrana gore i dole možete da se prebacite sa jednog polja na drugo.
- Kada završite, dodirnite **Sačuvaj**.
- Da izađete bez čuvanja, možete da dodirnete  i onda da dodirnete **Odbaci**.

Uređivanje vaših kontakata


Dodirnite  na ekranu sa pojedinostima o kontaktu da biste uredili.

Kada završite, dodirnite **Sačuvaj**.

Dodavanje/izbacivanje iz Omiljenih

Dodirnite kontakt da pogledate pojedinosti, a onda dodirnite  da dodate kontakt u omiljene.

Dodirnite  ponovo da uklonite kontakt iz omiljenih.

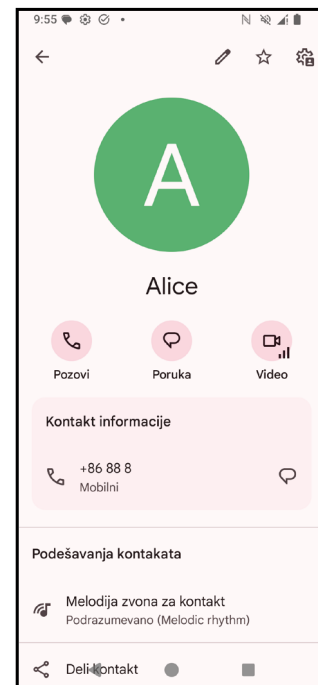

Dodaj do etikete

- Dodirni  da dodamo etiketu za grupiranje kontakata.

Brisanje kontakta

Na ekranu sa listom kontakata:

- Dodirnite i zadržite kontakt koji želite da izbrisete, a onda dodirnite  i **Izbriši** da biste izbrisali.
- Označite kvadratić svih kontakata, a onda dodirnite  i **Izbriši** da biste izbrisali sve kontakte.

Na ekranu sa detaljima kontakata:

- Dodirnite  a potom izaberite **Izbriši**. Izaberite **Izbriši** kada se od vas zatraži da potvrdite.



Kontakt koji ste izbrisali će se takođe izbrisati iz drugih aplikacija na telefonu ili internetu sljedeći put kada sinhronizujete svoj telefon.

Dijeljenje kontakta

Možete da podijelite pojedinačni kontakt sa drugima slanjem vCard kontakta putem Poruka, Gmail-a i Bluetoothom. Izaberite kontakt koji želite da podijelite, dodirnite kontakt i zadržite ga, a onda dodirnite .

Dostupne opcije

Iz liste kontakata možete da izvršite dodatna podešavanja dodirom na **Organizujte**.

Organizujte

Melodija zvona za kontakte

Dodirnite da postavite ringtone za specifične kontakte.

Upravljač SIM-om

Ispitite se da odaberete kontakte koje želite da **Uvezi** ili prisluškujete  da brišete.

Uvezi/Izvezi

Izaberite račune da uvezi/izvezi.

Blokirani brojevi

Ovdje dodajte brojeve tako da od njih ne primate pozive ili tekstualne poruke.

Podešavanja:

- Informacije o vama
- Nalozi
- Sortiraj prema
- Format imena
- Tema
- Podrazumevani nalog za nove kontakte
- Ime i prezime - fonetski

Dodirnite da podesite svoj profil.

Dodirnite da dodate nalog i konfigurišete odgovarajuće informacije.

Dodirnite da poredate listu po imenu ili prezimenu.

Dodirnite da izaberete da li će se prvo prikazati ime ili prezime.

Dodirnite da promijenite u svijetlu ili tamnu temu.

Dodirnite da izaberete podrazumijevano mjesto za čuvanje novog kontakta.

Dodirnite da izaberete da se prikaže ili sakrije fonetsko ime.

4.3 Poruke

Koristite aplikaciju za poruke  da šaljete i primate tekstualne (SMS) ili multimedijalne (MMS) poruke.

Pisanje poruka

Na ekranu sa listom poruka dodirnite  **Započni časkanje** da napišete tekstualne/multimedijalne poruke.

Slanje tekstualnih poruka

- Unesite ime, broj telefona ili adresu e-pošte primaoca u polje **Kome** ili dodirnite  **Napravi grupu** da dodate primaoca.

- Dodirnite polje **Tekstualna poruka** da unesete tekst poruke.
- Dodirnite 😊 da pristupite emotikonima.
- Kada ste završili, dodirnite ➤ da pošaljete tekstualnu poruku.

SMS poruka duža od 160 karaktera naplaćuje se kao više SMS poruka. Brojač se nalazi sa desne strane polja za tekst da vas podsjeti koliko karaktera može da se unese u jednoj poruci.



Posebna slova (sa akcentima) takođe povećavaju veličinu SMS poruke te se primaocu možda pošalje više SMS poruka.


Slanje multimedijalnih poruka

MMS vam omogućava da pošaljete video snimke, fotografije, audio zapise i vCard na druge kompatibilne mobilne telefone i adrese e-pošte.

- Unesite broj telefona primaoca u polje **Kome**.
- Dodirnite polje **Tekstualna poruka** da unesete tekst poruke.
- Dodirnite ⊕ da ubacite emotikon, svoju lokaciju, kontakt ili dokument; Dodirnite 📎 da izaberete fotografiju ili video.
- Kada ste završili, dodirnite ➤ da pošaljete multimedijalnu poruku.

Otkucajte tekstualnu poruku

Ubacite emotikone

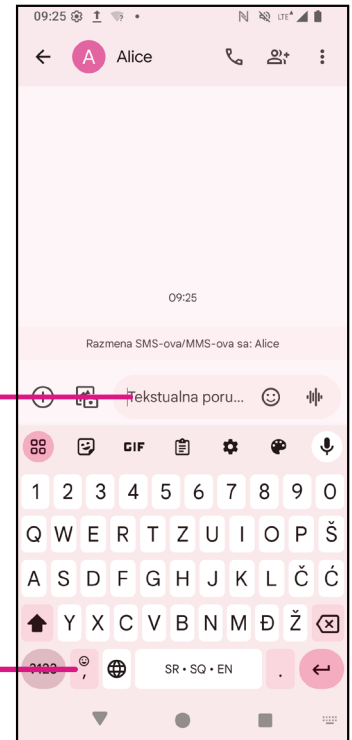

Upravljanje porukama

Kada primite poruku, 🗨️ će se pojaviti na Statusnoj traci kao obavještenje. Povucite nadolje Statusnu traku da otvorite Panel sa obavještenjima, dodirnite novu poruku da je otvorite i pročitate. Takođe možete da otvorite aplikaciju za poruke i dodirnete poruku da je otvorite.

Poruke se prikazuju u vidu razgovora.

Dodirnite poruku da otvorite ekran za sastavljanje poruka:

- Dodirnite 📞 da pozovete taj broj.
- Dodirnite ⋮ da sačuvate taj broj u kontakte ili pogledate detalje o kontaktu ako je taj broj već sačuvan.
- Da odgovorite na poruku, unesite tekst. Kada ste završili, dodirnite ➤.
- Ako poruku dodirnete i zadržite, biće dostupne sljedeće opcije: 📋 Kopiraj tekst, 🗑️ Izbriši, ☆ Označi poruku zvjezdicom, 🗨️ Dijeli ili Pogledajte detalje.

4.4 Gmail

 
Podešavanje Gmail-a


Da podesite svoj nalog za e-poštu, prevucite nagore na početnom ekranu i potom izaberite Gmail.

- Izaberite + da dodate adresu e-pošte.
- Postupak za podešavanje e-pošte će vas voditi kroz korake da podesite svoj nalog za e-poštu.
- Izaberite vrstu naloga za e-poštu koji imate i unesite adresu e-pošte i lozinku za nalog koji želite da podesite.

- Ako vaš mobilni operater u uređaju ne omogućava nalog koji ste unijeli, dodirnite **Drugo** i unesite adresu e-pošte, dodirnite **SLJEDEĆE** da izaberete vrstu naloga i unesete lozinku za svoju e-poštu, potom tačno unesite server i port u interfejsu Podešavanja dolaznog servera i u interfejsu Podešavanja odlaznog servera. Dodirnite **Završi** da dovršite podešavanje.
- Da dodate još jednu nalog za e-poštu, kliknite **+ Dodaj imejl adresu**. Izaberite Drugo iz opcija za podešavanje e-pošte. Ili možete da dodirnete ime naloga u gornjem desnom uglu i izaberete **Dodaj još jedan nalog** da primijenite ovu funkciju (ovo nije dostupno ako se niste prijavili u Google).

Slanje e-pošte

- Dodirnite  na ekranu Prijemno sanduče.
- Unesite adresu(e) e-pošte primaoca(laca) u polje **Kome**.
- Ako je potrebno, dodirnite  > **Kopija/Skr. kop** da poruci dodate kopiju ili skrivenu kopiju.
- Unesite naslov i sadržaj poruke.
- Dodirnite  da dodate prilog.
- Ako ne želite odmah da pošaljete e-poštu možete da dodirnete  i **Sačuvaj nedovršenu poruku** ili dodirnete dugme Nazad da sačuvate kopiju.
- Dodirnite  da pošaljete.
- Ako ne želite da pošaljete ili sačuvate e-poštu, možete da dodirnete  i da onda izaberete **Odbaci**.
- Da dodate potpis koji će se nalaziti u svim vašim porukama e-pošte, dodirnite  i izaberite **Podešavanja**, a onda izaberite nalog za koji želite da kreirate ili izmijenite potpis, dodirnite **Potpis za mobilne uređaje** da biste uredili.

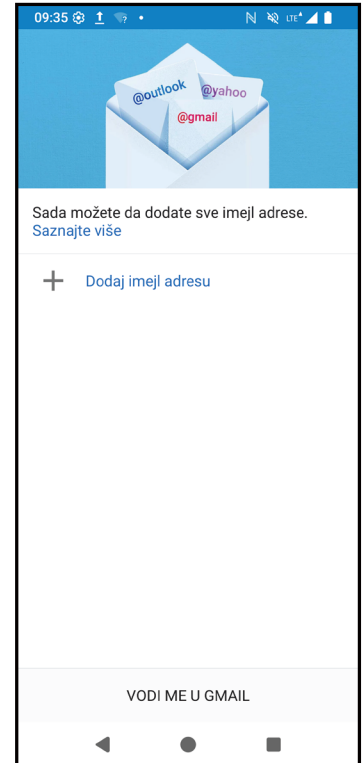

Napomena: Ako vidite grešku “pogrešna lozinka” pri podešavanju Gmail naloga u aplikaciji Gmail, razmotrite sljedeću opciju:

Opcija: Generišite lozinku za aplikaciju

Lozinka za aplikaciju je pristupni kod od 16 cifara kojom se aplikaciji ili uređaju daje dozvola da pristupi vašem Google nalogu. Ako koristite verifikaciju u 2 koraka i vidite grešku “pogrešna lozinka” kada pokušate da pristupite svom Google nalogu, lozinka za aplikaciju bi mogla da riješi problem.

Da generišete lozinku za aplikaciju.

- Posjetite stranicu za lozinku za vašu aplikaciju <https://myaccount.google.com/security/signinoptions/two-step-verification>. Može se od vas zatražiti da se prijavite na svoj Google nalog.
- Vratite se nazad na interfejs bezbjednosti, prevucite nadolje da izaberete **Lozinke aplikacija**.
- Podesite sljedeće opcije: **Izaberi aplikaciju; Izaberi uređaj**.
- Izaberite **Generiši**.
- Slijedite uputstva da unesete lozinku za aplikaciju (kod od 16 karaktera u žutom polju) na vašem uređaju.
- Izaberite **ZAVRŠI/GOTOVO**.
- Kada ste završili, više nećete ponovo vidjeti kod za lozinku za aplikaciju. Međutim, vidjećete listu aplikacija i uređaja za koje ste kreirali lozinke za aplikaciju.

4.5 Chrome

Uživajte u surfovanju internetom koristeći pregledač Chrome.

Da biste pristupili ovoj funkciji, dodirnite Chrome  na Početnom ekranu.


4.6 Kalendar

Kako biste vodili računa o važnim sastancima, okupljanjima i drugom, možete da koristite Kalendar.

Da pristupite ovoj funkciji, prevucite nagore na Početnom ekranu, a onda dodirnite **Kalendar**.

Pregledanje kalendara

Kalendar se može prikazati po prikazima Raspored, Dan, 3 dana, Nedelja ili Mesec. Dodirnite  i izaberite željeni prikaz kalendara.

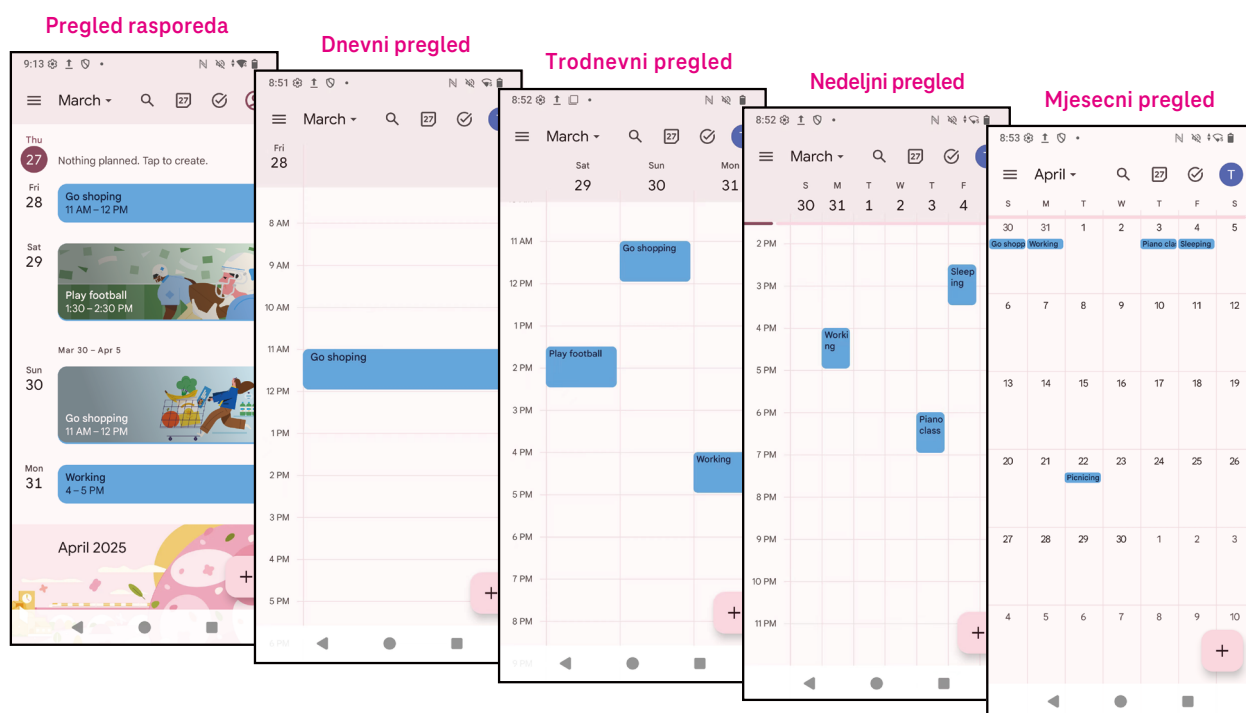

Kreiranje novog događaja

Nove događaje možete da dodate u bilo kom prikazu Kalendara.

- Dodirnite .
- Popunite sve neophodne informacije za taj novi događaj. Ako je u pitanju cjelodnevni događaj, možete da uključite  na Cijeli dan.
- Pozovite goste na taj događaj. Unesite adrese e-pošte odvojene zarezima između gostiju koje želite da pozovete na događaj. Gosti će dobiti pozivnicu iz Kalendara i E-pošte.
- Kada ste završili, dodirnite **Sačuvaj** gore na ekranu.

Da brzo kreirate događaj u prikazima Dan, 3 dana ili Sedmica, dodirnite prazno mjesto da izaberete ciljano područje koje će onda promijeniti u , a onda dodirnite ikonu da kreirate novi događaj.

Brisanje ili uređivanje događaja

- Da izbrisete ili uredite događaj, dodirnite događaj da uđete u ekran sa pojedinostima, a onda dodirnite  da uredite događaj.
- Dodirnite  i Izbrisi da uklonite događaj, ili Dupliraj da kopirate događaj.

Podsjetnik za događaje

Ako je za događaj podešen podsjetnik, predstojeći događaj će se pojaviti na početnom ekranu.

- Dodirnite naziv događaja da vidite listu obavještenja od Kalendara.

4.7 Kamera

Pristupanje kameri

Na početnom ekranu dodirnite **Kamera**.

Snimanje fotografije

- Kadrirajte objekat ili pejzaž u tražilu, a onda dodirnite ekran da fokusirate ako je potrebno.
- Dodirnite  da snimate fotografiju koja će se automatski sačuvati.
- Da snimate uzastopne fotografije, dodirnite i zadržite .

1 Izaberite opcije za način rada sa Blicem: **Isključeno, Automatski, Uključeno, Uvek**

2 Izaberite odbrojanje

3 Izaberite režim HDR da izaberete režim HDR: **Isključeno, Automatski**

4 Izaberite filter

5 Izaberite veličinu snimka

6 Pristupite za više opcija

7 Prebačite sa prednje na glavnu kameru

8 Snimate fotografiju

9 Pregledajte fotografije/video snimke koje ste snimili


AI optimizator snimka

Možete da pristupite još opcija da izaberete AI optimizatoru snimka, što je nova funkcija.

- Automatski bira najbolja podešavanja kamere kao što su boja, kontrast i osvijetljenost kako bi prizor izgledao živopisnije.

Snimanje video snimka

- Dodirnite VIDEO da uđete u Video režim.
- Dodirnite  u sredini ekrana da počnete video snimanje.
- Možete takođe da dodirnete  da snimate fotografiju tokom video snimanja.
- Dodirnite  da zaustavite snimanje.
- Dodirnite  da nastavite snimanje
- Dodirnite  da zaustavite snimanje. Video snimak će se automatski sačuvati.

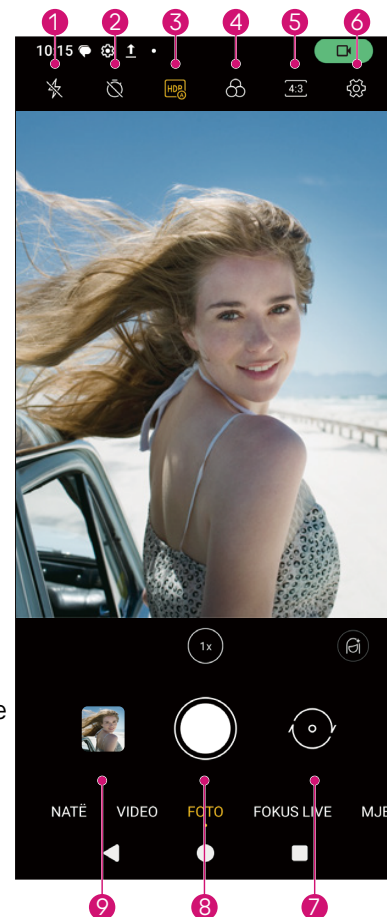

Pregledanje, Uređivanje i Dijeljenje

- Dodirnite , a onda izaberite način poput Poruke da podijelite fotografiju ili video snimak.
- Dodirnite  da uredite fotografiju ili video.
- Dodirnite  da potražite ono što vidite pomoću aplikacije Google Lens.
- Dodirnite  da izbrišete.
- Dodirnite  da se vratite na režim Kamere.

4.8 Slike

Aplikacija Fotografije služi kao media plejer pomoću kog pregledate fotografije i puštate video snimke.

Fotografije i video snimci se prikazuju po momentima i albumima u aplikaciji Fotografije.

- Direktno dodirnite fotografiju/video snimak da pregledate ili pustite.
- Prevucite lijevo/desno da pregledate prethodnu ili sljedeću fotografiju/video snimak.

Rad sa fotografijama

Fotografije možete da uredite tako što ćete ih rotirati ili izrezati, dijeleći ih sa prijateljima, postavljenjem za fotografiju kontakta ili kao pozadinu, itd.

- Pronađite fotografiju na kojoj želite da radite i dodirnite fotografiju u pregledu preko cijelog ekrana.
 - Dodirnite  da podijelite fotografiju ili dodirnite  da fotografiju izbrišete.
- Dodirnite  i izaberite **Koristi kao** da fotografiju postavite kao fotografiju kontakta ili kao pozadinu.

Dodirnite  da uđete u ekran za uređivanje.

✦ **Predlozi** Izaberite Poboljšaj, Toplo ili Hladno da podesite boju fotografije.

Obreži Izaberite između , , , i Resetuj.

Podesi Upravljač Svetlina, Kontrast i još toga.

Filteri Izaberite između različitih kao što su Vivid, West, Palma i još toga.

Oznake Personalizujte svoju fotografiju crtanjem po njoj ili dodavanjem riječi na nju.

4.9 Sat

Da pristupite Satu, prevucite nagore na Početnom ekranu, a onda dodirnite **Sat**.

Podešavanje vremena u svijetu

- Dodirnite  na ekranu sata.
- Dodirnite  da dodate vremensku zonu.



Podešavanje alarma

Dodirnite  na ekranu sata.

Uključite  da omogućite postojeći alarm ili dodirnite  da dodate novi alarm. Pojaviće se sljedeće opcije:

	Dodaj oznaku	Dodirnite da odredite naziv alarma.
	Pauziraj alarm	Dodirnite da izaberete datum kada će alarm biti pauziran.
	Podrazumevano (Magenta_Voyage)	Dodirnite da izaberete zvuk zvona za alarm.
	Vibracija	Označite kvadratić da aktivirate vibraciju.
	Rutinski zadaci Google pomoćnika	Dodirnite da uđete u Rutinske zadatke Google pomoćnika.
Odbaci		Dodirnite da odbacite alarm.
	Izbriši	Dodirnite da izbrišete alarm.

Podešavanje tajmera

- Dodirnite  na ekranu sata.
- Unesite vrijeme po redoslijedu sekunde, minute, sati.
- Dodirnite  da započnete Odbrojavanje.
- Dodirnite  da dodate još jedan tajmer u panelu.
- Dodirnite  da završite Odbrojavanje.
- Dodirnite  da započnete Odbrojavanje.
- Dodirnite  da izbrišete odbrojavanje trenutnog tajmera.

Podešavanje štoperice

- Dodirnite  na ekranu sata.
- Dodirnite  da pokrenete štopericu.
- Dodirnite  da se prikaže lista rekorda prema ažuriranom vremenu.
- Dodirnite  da zaustavite štopericu.
- Dodirnite  da uklonite sve nove štoperice.

Spavanje

Odredite vrijeme spavanja kako biste utišali svoj telefon i izabrali da slušate umirujuće zvukove. Odredite vrijeme buđenja da ponovo primete obavještenja.

5 Google aplikacije

Google aplikacije su unaprijed instalirane na vašem telefonu radi unapređenja efikasnosti rada i da pruže prijatno korisničko iskustvo. Ovo uputstvo ukratko predstavlja te aplikacije. Za detaljne karakteristike i korisničke priručnike, pogledajte odgovarajuće internet stranice ili uvod dat u tim aplikacijama.

Registrujte se pomoću Google naloga da uživate u punoj funkcionalnosti.



Google

Vaše omiljene stranice, istorija pregledanja i podešavanja na svim uređajima na kojima je pregledač instaliran mogu se sinhronizovati preko vašeg Google naloga.



Gmail

Kao servis preko interneta za e-poštu kompanije Google, Gmail je konfigurisan kada prvi put podesite svoj telefon. Pomoću ove aplikacije možete da šaljete i primete e-poštu, upravljate e-porukama i oznaka, da ih arhivirate i još toga. E-pošta se može automatski sinhronizovati sa vašim Gmail nalogom.



Mape

Google Mape nude satelitski prikaz, ulične mape, panoramski prikaz ulica od 360°, uslove u saobraćaju u realnom vremenu i planiranje putanje kada putujete pješke, automobilom ili javnim prevozom. Koristeći ovu aplikaciju možete da pronađete svoju lokaciju, potražite neko mjesto i dobijete prijedloge isplaniranih putanja za vaša putovanja.



YouTube

YouTube je internet aplikacija za dijeljenje video snimaka na kojoj korisnici mogu da postavljaju, pregledaju i podijele video snimke. Dostupni sadržaj podrazumijeva video klipove, TV klipove, muzičke spotove i drugi sadržaj kao što su video blogovi, kratki originalni video snimci i obrazovni video snimci. Aplikacije podržava funkciju striminga koja vam omogućava da počnete da gledate video snimak skoro u isto vrijeme kad se oni počnu preuzimati sa interneta.



Disk

Servis za čuvanje datoteka i sinhronizaciju koji je kreirao Google i koji korisnicima omogućava da čuvaju datoteke u oblaku, da dijele i uređuju datoteke. Datoteke na Disku se bezbjedno čuvaju i može im se pristupiti sa bilo kog uređaja prijavljivanjem na Google nalog. Datoteke i folderi se mogu privatno dijeliti sa drugim korisnicima Google naloga.



Meet

Ovo je mobilna aplikacija za video razgovore koja korisnicima omogućava da upute video pozive ljudima iz svoje liste kontakata nakon što su njihovi brojevi telefona potvrđeni.



Slike

Google Fotografije čuva i pravi rezervnu kopiju vaših fotografija i video snimaka. Takođe automatski analizira fotografije i organizuje ih po grupama tako da možete lako da pronađete fotografije koje su vam potrebne.



Google TV

Google TV je pametna TV platforma i aplikacija koju je razvila Google, dizajnirana da radi i poboljša način na koji korisnici otkrivaju, organizuju i uživaju u sajmu komunikacije. “ Pošao je 2020. kao nasljednik Android TV, kombinuje live TV, streaming usluge, i personalizovane preporuke u

univerzitetu interfejsu, nudi iskustvo zabave bez smisla.



Google One

Google One je skladište oblaka i služba članstva koja je razvijena od Google, na abonentu dizajniran da unaprjeđuje iskustvo vašeg ekosistema preko Google-a dok nudi proširenu skladište, ekskluzivne karakteristike, i najveća podrška.) Počelo je 2018, zamijenio starije Google Drive skladište i pružava dodatne koristi izvan prostora oblaka.



Home

Dom je centralni kontrolni hub koji je razvijen od Google da upravlja i automatski kontroliše pametne kućne uređaje, uključujući Google Nest proizvode, gadove treće strane i usluge. Originalno dizajniran da se postavimo Google kućni govornici, raspršio se na sveobuhvatnu platformu za stvaranje povezanog, kontrolirani pametni domaći ekosistem.



Nadi uređaj

Nađite uređaj je zvanična aplikacija koju je Google razvila da pomogne korisnicima da nađu, bezbjedno, ili izbriše njihove izgubljene Android smartphones, tablete, nositelji (npr., pametnjakovi), ili ostala povezana uređaja. služi kao kritični alat za čuvanje ličnih podataka i osiguranje oporavka uređaja.



YT Music

YT Music Downloader je program kompanije Windows koji pojednostavljuje preuzimanje video snimaka i muzike sa YouTube-a. YT Music Downloader vam omogućava da preuzmete video snimke i/ili audio snimke sa YouTube-a. Program je usmjeren na muziku tako da možete da sačuvate muzičke spotove (ili bilo koje video snimke) ili konvertujete te video snimke samo u muzički zapis i aplikacija će ih automatski sačuvati u MP3 formatu. Kada mu date odgovarajući YouTube link, program vrlo brzo konvertuje i čuva te stavke kao datoteku i kada završi imate pristup toj muzici bez povezivanja na internet kao i na bilo kojem drugom uređaju na koji te datoteke prebacite.

6 Još aplikacija

Prevucite nagore sa dna ekrana da biste pristupili tim drugim aplikacijama.



Play prodavnica

Služi kao zvanična prodavnica aplikacija za operativni sistem Android i omogućava korisnicima da pregledaju i preuzimaju aplikacije i igre. Aplikacije su ili besplatne ili se naplaćuju.



Files

Aplikacija Files prikazuje sve podatke sačuvane na telefonu, uključujući i spoljašnju SD karticu i internu memoriju, kao što su aplikacije, medijske datoteke preuzete sa Google Play prodavnice, YouTube-a ili drugih mjesta; video zapise, fotografije ili audio snimke koje ste snimili; ostale podatke poslate preko Bluetooth-a, USB kabelom, itd.

7 Pristupačnost

Transkripcija uživo

Transkripcija uživi prikazuje govor kao tekst na ekranu, pa možete lakše da učestvujete u razgovorima koji se odvijaju oko vas.

- Idite na **Podešavanja > Pristupačnost > Transkripcija uživo** da namjestite ovu funkciju.
- Dozvolite **Prečica za: Transkripcija uživo** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Obaveštenja o zvukovima

Dobijajte obaveštenja o važnim zvukovima u okruženju, na primer, kada se oglasi alarm za dim ili beba plače.

- Idite na **Podešavanja > Pristupačnost > Obaveštenja o zvukovima** da namjestite ovu funkciju.
- Dozvolite **Prečica za: Obaveštenja o zvukovima** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Voice Access

Pristup glasom omogućava da kontrolišete Android uređaj bez upotrebe ruku. Glasovnim komandama možete da otvarate aplikacije, dodirujete dugmad, skrolujete, kucate i drugo. Trenutno su dostupne na engleskom, italijanskom, nemačkom, francuskom i španskom.

- Idite na **Podešavanja > Pristupačnost > Voice Access** da namjestite ovu funkciju.
- Dozvolite **Prečica za: Voice Access** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

TalkBack

TalkBack vam daje govorne povratne informacije da biste mogli da koristite uređaj bez gledanja u ekran. TalkBack može da bude koristan osobama kojima je teško da vide ekran.

- Idite na **Podešavanja > Pristupačnost > TalkBack** da namjestite ovu funkciju.
- Dozvolite **Prečica za: TalkBack** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Izaberite za govor

Dodirnite određene stavke na ekranu da biste čuli njih ili njihov opis.

- Idite na **Podešavanja > Pristupačnost > Izaberite za govor** da namjestite ovu funkciju.
- Dozvolite **Prečica za: Izaberite za govor** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Veličina prikaza i tekst

Prikažite veličinu pisma, pokažite veličinu, podebljani tekst i postavke visokih kontrasta da poboljšate čitljivost i optimiziraju sposobnost vizuelnog pristupa.

- Idite na **Podešavanja > Pristupačnost > Veličina prikaza i tekst** da namjestite ovu funkciju.
- Takođe možete otići na **Podešavanja > Ekran > Veličina prikaza i tekst** da postavi ovu funkciju.

Boja i pokret

Ova karakteristika pomaže korisnicima da prilagođavaju vizuelne elemente i efekte pokreta na njihov uređaj da poboljšaju udobnost i smanje distrakcije i poboljšavanje pristupnosti onima koji imaju osjetljivost vizuelne i pokreta. Opcije uključuju omogućavanje boje ispravljanje, inverzija boja, tamna tema i uklanjanje animacija.

- Idite na **Podešavanja > Pristupačnost > Boja i pokret** da namjestite ovu funkciju.

Dodatno zatamni

Ekstra Dim dozvoljava da svjetlost ekrana bude smanjena ispod minimalnog nivoa, poboljšava udobnost u prostorijama niskog svjetlosnog okruženja i smanjuje napetost oka.

- Idite na **Podešavanja > Pristupačnost > Dodatno zatamni** da namjestite ovu funkciju.
- Dozvolite **Prečica za dodatno zatamnjivanje** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Uvećanje

Brzo uvećajte ekran da bi sadržaj bio veći.

- Idite na **Podešavanja > Pristupačnost > Uvećanje** da namjestite ovu funkciju.
- Dozvolite **Prečica za uvećanje** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Meni Pristupačnost

Meni Pristupačnost pruža veliki meni na ekranu za kontrolu uređaja. Možete da zaključate uređaj, kontrolišete jačinu zvuka i osvetljenost, pravite snimke ekrana i drugo.

- Idite na **Podešavanja > Pristupačnost > Meni Pristupačnost** da namjestite ovu funkciju.
- Dozvolite **Prečica za: Meni Pristupačnost** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Pristup pomoću prekidača

Prekidači mogu da vam pomognu da kontrolišete Android uređaj ako vam je teško da ostvarite direktnu interakciju sa dodirnim ekranom. Prekidač može eksterno da se poveže sa uređajem, poput tastature ili velikog dugmeta.

- Idite na **Podešavanja > Pristupačnost > Pristup pomoću prekidača** da namjestite ovu funkciju.
- Dozvolite **Prečica za: Pristup pomoću prekidača** da pokaže dugme na desnoj strani ekrana, koja dozvoli odmah počnete sa jednim snimkom

Kontrole vremenskih odrednica

Vremenski kontroli dopušta da korisnici prilagode odgovor na dodir i držanje, vrijeme za akciju (vrijeme pristupnosti), i autoklik (vrijeme primjene), prilagođavanje patinga interakcije za poboljšanje pristupnosti.

- Idite na **Podešavanja > Pristupačnost > Kontrole vremenskih odrednica** da namjestite ovu funkciju.

Sistemske kontrole

Sistemni kontroli dozvoljava da korisnici prilagođavaju način navigacije, dugme struje završava poziv i auto-rotiraju ekran, poboljšavaju uređaja sa korisnošću i prilagodljivošću.

- Idite na **Podešavanja > Pristupačnost > Sistemske kontrole** da namjestite ovu funkciju.

Vibriranje i haptika

Vibracija i Haptika omogućavaju prilagodbu intenzitete vibracije i snage taktičkih odnosa, pružajući haptične znakove da bi pomogli korisnicima sa vizuelnim i auditivnim oštećenjima intuitivno shvatili interakciju i potvrdu.

- Idite na **Podešavanja > Pristupačnost > Vibriranje i haptika** da namjestite ovu funkciju.

Titl uživo

Titl uživo otkriva govor na uređaju i automatski generiše titl.

- Idite na **Podešavanja > Pristupačnost > Titl uživo** da namjestite ovu funkciju.

Podešavanja titla

Prilagodite veličinu i stil titlova da bi bili lakši za čitanje.

- Idite na **Podešavanja > Pristupačnost > Podešavanja titla** da namjestite ovu funkciju.

Zvučni opis

Audio opis obezbjeđuje glas naracije sadržaja na ekranu za korisnike koji su uticali na vizuelno oštećene, opisuje ključno vizuelne informacije koje se ne direktno konektuju suportanih filmova i pokazuju.

- Idite na **Podešavanja > Pristupačnost > Zvučni opis** da omogućate ovu funkciju.

Treperujuća obaveštenja

Svetlo na kameri ili ekran treperi kada primite obaveštenje ili kada se aktiviraju alarmi

- Idite na **Podešavanja > Pristupačnost > Treperuća obaveštenja** da namjestite ovu funkciju.

Slušni aparati

Podesite slušne aparate koji imaju ASHA i LE Audio kohlearne implante i uređaje za pojačavanje zvuka i upravljajte njima.

- Idite na **Podešavanja > Pristupačnost > Slušni aparati** da namjestite ovu funkciju.
- Takođe možete otići na **Telefon**   **> Podešavanja > Pristupačnost > Slušni aparati** za čuvanje da uključite kompatibilnost pomoći čuvanja.

Prilagođavanje zvuka

Podešavanje zvuka dozvoljava da korisnici prilagođavaju postavke zvuka kao što su mono-zvuk i audio-ravnotežu za optimalna iskustva slušanja.

- Idite na **Podešavanja > Pristupačnost > Prilagođavanje zvuka** da namjestite ovu funkciju.

Prečice za pristupačnost

Brzo pristupite funkcijama pristupačnosti s bilo kojeg ekrana.

- Idite na **Podešavanja > Pristupačnost > Prečice za pristupačnost** da namjestite ovu funkciju.

Pretvaranje teksta u govor

Pretvaranje teksta u govor pretvara tekst na ekranu u izgovoreni audio za potrebe pristupačnosti, omogućavajući prilagođavanje glasovnog mehanizma, jezik i govorni parametri poput brzine/zaštite.

- Idite na **Podešavanja > Pristupačnost > Pretvaranje teksta u govor** da namjestite ovu funkciju.

8 Bezbednost i privatnost

8.1 Zaključavanje ekrana

Na Početnom ekranu pristupite **Podešavanja** u kontrolnom centru ili iz spiska pretrage aplikacija. Idite u **Bezbednost i privatnost** > **Otključavanje uređaja** > **Zaključavanje ekrana**.

Zaključavanje ekrana vam omogućava da obezbijedite svoj telefon da ga ne koriste drugi bez vaše dozvole. Uključite sljedeće bezbjednosne opcije: Šablon, PIN ili lozinka. Ko god da uključi vaš telefon, tražiće mu se da otključa ekran kako bi pristupio uređaju. Vaš uređaj može da otključa bilo ko ako izaberete Nijedan ili Prevlačenje.

8.2 Senzor otiska prsta

Koristite otisak svog prsta da otključate ekran.

Pristupite **Podešavanja** > **Bezbednost i privatnost** > **Otključavanje uređaja** > **Otisak prsta i otključavanje licem** da aktivirate ovu funkciju.

Napomena: morate da podesite šablon, PIN ili lozinku prije korišćenja senzora otiska prsta.

8.3 Otključavanje prepoznavanjem lica

Pristupite **Podešavanja** > **Bezbednost i privatnost** > **Otključavanje uređaja** > **Otisak prsta i otključavanje licem** da aktivirate ovu funkciju.

Otključavanje prepoznavanjem lica vam omogućava da otključate svoj uređaj pomoću podataka o vašem licu. Podesite ih prateći korake na ekranu. Vodite računa da ste licem okrenuti prema ekranu kada koristite prepoznavanje lica.

Napomena: morate da podesite šablon, PIN ili lozinku prije korišćenja otključavanja prepoznavanjem lica.

8.4 Produženo otključano

Po podrazumijevanim podešavanjima ova funkcija nije uključena; morate da podesite zaključavanje ekrana da biste je uključili. Ako je pametno zaključavanje uključeno, vaš uređaj ostaje zaključan kada se bezbjedno nalazi kod vas.

8.5 Šifrovanje i akreditivi

Pod Više bezbjednosti i privatnosti dodirnite da vidite status enkripcije vašeg telefona i stavke o akreditivima. Možete da izmijenite i izbrišete sve sačuvane akreditive.


8.6 EID

EID (Ugrađeni identifikacioni dokument (engl. Embedded Identity Document)), poznat i kao eUICCID, je identifikacioni broj eSIM kartice vašeg T Phone 3 Pro i sastoji se od 32 cifre. EID možete da pronađete u podacima za vaš uređaj na pakovanju telefona.

Da EID pronađete putem menija vašeg T Phone 3 Pro slijedite sljedeće korake:

- Idite na početni ekran. Da otvorite meni, povucite nagore na ekranu.

- Izaberite **Podešavanja**.
- Skrolujte nadole. Izaberite **O telefonu**.
- Skrolujte nadole. Izaberite **EID**.
- Pod **EID**, prikazaće se **EID**. Vratite se na početni ekran.

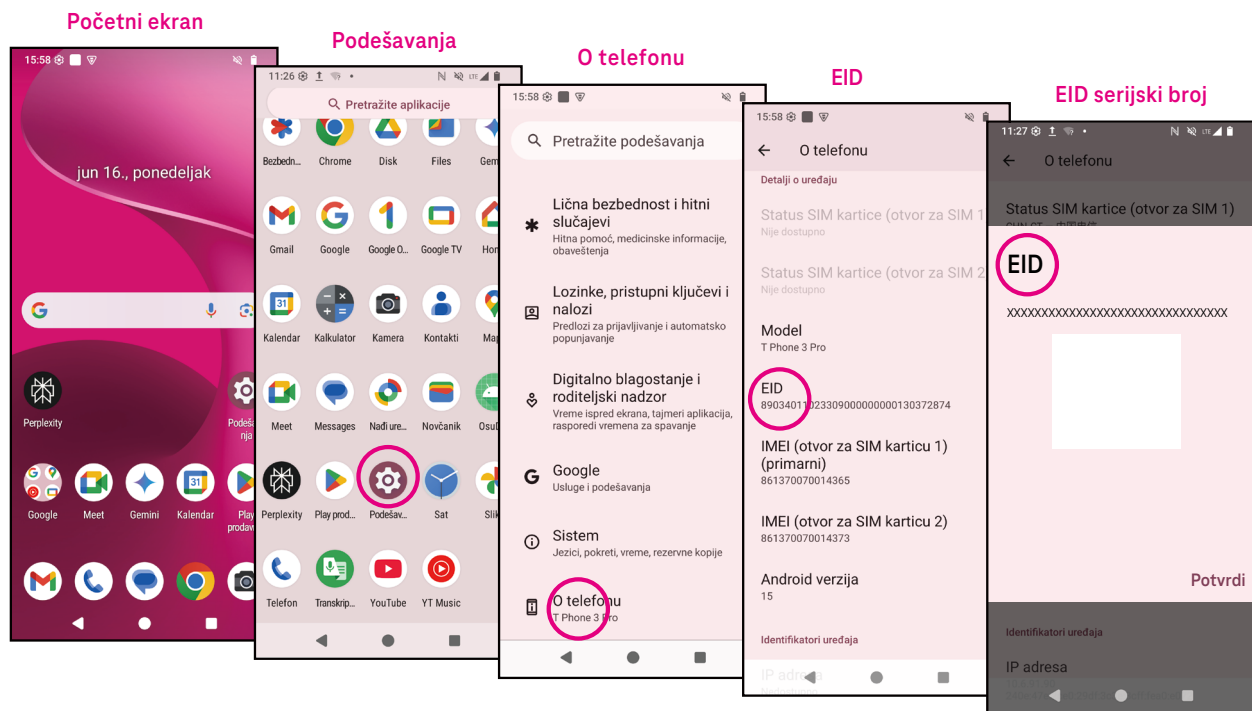

9 Nalog

9.1 Informacije o nalogu

Informacijama o nalogu možete takođe da pristupite preko svog telefona.

- Idite na **Podešavanja > O telefonu**.

9.2 Ažuriranje softvera

Da pristupite Ažuriranju softvera, slijedite korake ispod:

- Povežite vaš uređaj na Wi-Fi mrežu i vodite računa da je veza za prenos podataka jaka.
- Vodite računa da je baterija u potpunosti napunjena prije nego što počnete sa ažuriranjem softvera. Trenutni nivo baterije vašeg uređaja možete da pronađete na vašem uređaju pod **Podešavanja > Baterija**.
- Idite na **Podešavanja > Sistem > Ažuriranja sistema**.
- Ako želite da ažurirate sistem, dodirnite **Potraži ažuriranje** i kada se to završi, na vašem telefonu će biti najnovija verzija softvera.

10 Bezbjednosne i regulatorne informacije

Pročitajte ovo poglavlje prije korišćenja svog mobilnog uređaja.

Bezbjednost i upotreba

Proizvođač se odriče bilo kakve odgovornosti za štetu koja je mogla nastati kao posljedica nepravilne upotrebe ili upotrebe suprotne uputstvima iz ovog priručnika. Korišćenje povezanih uređaja predmet je Uslova i odredbi kompanije T-Mobile.

Bezbjednost u saobraćaju

Uvijek se pridržavajte lokalnih zakona i propisa kojima se uređuje korišćenje bežičnih mobilnih uređaja i njihovih dodataka u područjima gdje se vozite. Korišćenje mobilnog uređaja tokom vožnje može da bude zabranjeno ili ograničeno u pojedinom područjima.

Uslovi korišćenja

Ne zaboravite da se pridržavate pravila lokalnih organa za korišćenje mobilnih uređaja u letilicama.

Upozorenja u vezi sa rukovanjem

Svoj mobilni uređaj koristite samo u skladu sa lokalnim zakonima i propisima i pridržavajte se svih obavještenja istaknutih na javnim mjestima.

Pročitajte i slijedite uputstva proizvođača vašeg ugradnog medicinskog uređaja. Ako imate bilo kakvih pitanja u vezi sa korišćenjem svog mobilnog uređaja zajedno sa ugradnim medicinskim uređajima, obratite se svom ljekaru.

- Preporučuje se odgovarajući nadzor kada djeca koriste vaš mobilni uređaj.
- Ne pokušavajte da rastavite svoj mobilni uređaj. Garancija prestaje da važi ako rastavite svoj mobilni uređaj.
- Uvijek pažljivo rukujte svojim mobilnim uređajem i držite ga na čistom mjestu bez prašine.
- Ne dopustite da vaš mobilni uređaj bude izložen nepovoljnim vremenskim ili uslovima u životnoj sredini (vlaga, vlažan vazduh, kiša, prodor tečnosti, prašine, morskog vazduha, itd.). Opseg radne temperature koju preporučuje proizvođač je od 0°C (32°F) do +40°C (104°F)

Napomena: Maksimalna vrijednost zavisi od stanja uređaja, materijala u njegovoj okolini i od boje i teksture kućišta.

- Na temperaturi preko 40°C (104°F) čitljivost na ekranu mobilnog uređaja može da bude smanjena, ali to je privremeno i nije ništa ozbiljno.
- Ne otvarajte i ne pokušavajte da ofarbate ili popravite svoj mobilni uređaj.
- Nemojte da ga ispuštate, bacate ili pokušate da savijete svoj mobilni uređaj.
- Mobilni uređaj nemojte da koristite ako je ekran oštećen, napukao ili je polomljen kako biste izbjegli povredu.
- Koristite samo baterije, punjače i dodatnu opremu koje preporučuje proizvođač uređaja i njegova povezana lica, koji su kompatibilni sa vašim modelom mobilnog uređaja. Proizvođač uređaja i njegova povezana lica odriču se odgovornosti za štetu koja je nastala korištenjem drugih punjača ili baterija.

Provjerite lokalne zakone i propise koji su na snazi u mjestu gdje živite kako biste saznali koji je najbolji način za odlaganje vašeg mobilnog uređaja.



ZAŠTITIE SVOJ SLUH

Kako biste spriječili eventualno oštećenje sluha, ne slušajte na visokim nivoima jačine zvuka u dužem vremenskom periodu. Budite oprezni dok držite svoj uređaj blizu uva kada koristite zvučnik.

Privatnost

Vodite računa morate da poštujete zakone i propise svoje države ili drugih države(a) u kojoj ćete koristiti svoj mobilni uređaj za fotografisanje i snimanje zvukova svojim mobilnim uređajem. U skladu sa tim zakonima i propisima, može da bude strogo zabranjeno da snimate fotografije i/ii da snimate glasove drugih ljudi ili bilo koje druge lične atribute i da ih puštate i distribuišete, jer to može da se smatra narušavanjem privatnosti.

Isključiva je odgovornost korisnika da obezbijedi prethodno odobrenje, ako je potrebno, za snimanje privatnih ili povjerljivih razgovora ili fotografisanje drugih osoba; proizvođač, prodavac ili dobavljač vašeg mobilnog uređaja (uključujući operatera) se odriču svake odgovornosti koja može nastati zbog nepravilne upotrebe mobilnog uređaja.

Pravne informacije

Kako bismo vam omogućili bolji pristup ovim važnim informacijama, ovim materijalima se može pristupiti iz menija Podešavanja na vašem telefonu. Pogledajte ove materijale prije korišćenja svog mobilnog uređaja. Kako biste pristupili ovim materijalima na vašem mobilnom uređaju, prevucite nagore na početnom ekranu i dodirnite **Podešavanja > O telefonu > Pravne informacije** i izaberite temu.

Regulatorni podaci (e-oznaka)

Vaš mobilni uređaj koristi elektronsku oznaku (e-oznaku) koja sadrži regulatorne informacije o vašem uređaju. Da biste vidjeli regulatorne informacije za ovaj uređaj na uređaju, prevucite nagore na početnom ekranu, a zatim dodirnite **Podešavanja > O telefonu > Regulatorne oznake**.



Ovaj pametni telefon je testiran i klasifikovan za upotrebu sa slušnim aparatima za neke od bežičnih tehnologija koje pametni telefon koristi. Međutim, u ovom pametnom telefonu se mogu koristiti i druge bežične tehnologije koje nisu testirane za upotrebu sa slušnim aparatima. Važno je da temeljno i na različitim lokacijama isprobate različite funkcije svog pametnog telefona da biste utvrdili da li čujete bilo kakvu ometajuću buku kada koristite ovaj pametni telefon sa slušnim aparatom ili kohlearnim implantom. Konsultujte se sa svojim provajderom bežičnih usluga o njegovim pravilima za vraćanje i zamjene, kao i za informacije o kompatibilnosti slušnih aparata.

Na vašem uređaju postoji radio odašiljač i prijemnik. Dizajniran je i proizveden tako da ne prekoračuje ograničenja za izlaganje radio frekvenciji (RF) koje je odredio CONFORMITE EUROPEENNE (CE). Ograničenja za izlaganje RF koje je odredio CE za bežične mobilne uređaje koriste mjernu jedinicu koja se zove specifična stopa apsorpcije (SAR), koja predstavlja mjeru za količinu RF energije koju apsorbuje tijelo tokom korišćenja mobilnog uređaja. CE ograničenje za javno izlaganje mobilnim telefonima je nivo SAR od 2,0 vata po kilogramu (2,0W/kg). A najveća SAR vrijednost za ovaj uređaj kada je testiran blizu glave bila je 0,94 W/kg* (10 g), kada je testiran blizu tijela je 1,40 W/kg* (10 g), a kada je testiran blizu ekstremiteta je 2,99 W/kg* (10 g).

Ovaj uređaj ispunjava CE ograničenja za izlaganje radijaciji koja su određena za nekontrolisanu okolinu. Kako bi se obezbijedilo poštovanje smjernica o izlaganju RF, uređaj se mora koristiti najmanje 5 mm od tijela.

Da biste vidjeli dodatne SAR informacije na svom telefonu, prevucite nagore na početnom ekranu, potom dodirnite **Podešavanja > O telefonu > Pravne informacije > RF Izloženost**.

Baterija i dodatna oprema

Preduzmite sljedeće mjere predostrožnosti za korištenje baterije:

- Ne pokušavajte otvoriti bateriju (zbog rizika od otrovnih isparenja i opekotina).
- Ne rastavljajte ili izazivajte kratak spoj u bateriji.
- Nemojte spaljivati ili odlagati iskorištenu bateriju u kućno smeće niti je čuvati na temperaturama iznad 35°C.
- Nemojte rastavljati ili otvarati, drobiti, savijati ili deformisati, bušiti ili sjeći.
- Nemojte modifikovati ili prepravljati, pokušavati da ubacite strane predmete u bateriju, potapati je ili je izlagati vodi ili drugim tečnostima, izlagati vatri, eksploziji ili drugim opasnostima.

Da optimiziram bateriju čitav život i učinkovitost:

- izbjegavajte ekstremnu toplotu i često brzo punjenje. Produžila izloženost visokoj temperaturi ili ponovno brzo punjenje ubrzava degradaciju. Priorizirajte standardno optužbe za dugoročno zdravlje.
- Ugasi nepotrebne wireless veze. Isključi inaktivni Wi-Fi/Bluetooth da smanjite struju.
- Aktivirajte adaptivno punjenje. Aktivirajte putem **Podešavanja > Baterija > Prilagodljiva baterija** da bi inteligentno prilagodila punjenje obrasci.
- Idite u **Podešavanja > Baterija > Informacije o bateriji** da bi vidjeli zdravlje baterije, cikluse punog punjenja/ otpuštanja, datum proizvodnje i datum prvog upotrebe.

Proizvodi na kojima postoji simbol ispod moraju se odnijeti na mjesta za prikupljanje po isteku njihovog radnog vijeka:



- Opštinski centri za odlaganje otpada sa posebnim kantama za ovu vrstu opreme.
- Kante za prikupljanje na mjestima prodaje.


Da saznate na koji način možete da reciklirate svoj mobilni uređaj, posjetite internet stranicu CTIA na adresi www.ctia.org/news/how-to-recycle-your-mobile-device.

OPREZ: AKO BATERIJU ZAMIJENITE POGREŠNOM VRSTOM, UREĐAJ MOŽE DA EKSPLODIRA. ISKORIŠTENE BATERIJE ODLOŽITE U SKLADU SA UPUTSTVIMA.



Informacije o recikliranju

Pozovite korisničku podršku za recikliranje na broj telefona 1-855-368-0829 radi uputstava o recikliranju ili jednostavno spomenite ovo: U Sjedinjenom Državama o CTIA programu recikliranja možete više da saznate na adresi <http://www.recyclewirelessphones.com>.

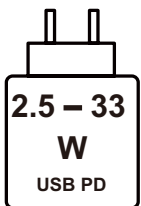

- Snaga koju šalje punjač mora da bude između minimalno 2,5 vati koju zahtijeva radio oprema i maksimalno 33 vati kako bi ostvario maksimalnu brzinu punjenja.
- Ovaj uređaj podržava USB PD brzo punjenje.

Punjači

Zbog razloga životne sredine ovaj paket ne uključuje punjenje. Koristite samo sertifikovani USB Type-C punjač kompatibilna sa uređajem. Nepojmljivi optužbi mogu uzrokovati oštećenje ili uticati na učinke.

Zbog različitih električnih specifikacija koje se primjenjuju, punjač koji ste kupili u jednoj državi možda neće raditi u drugoj državi. Trebalo bi da ih koristite samo u ovu svrhu.

Ovim uređajem bi trebalo rukovati samo sa preporučenim punjačem(punjačima).

Putni punjač: Ulaz: 100 - 240V~ 50/60Hz 0.9A

Izlaz: PD3.0: 5V 3A or 9V 3A, 11V 3A, PPS: 5~11V 3A

Licence



Logotip microSD zaštitni je znak SD-3C, LLC.



Oznake u vidu riječi i logotipa Bluetooth® vlasništvo su kompanije Bluetooth SIG, Inc. i svako korištenje tih oznaka od strane proizvođača uređaja i njegovih povezanih lica je pod licencom. Ostali zaštitni znaci i trgovački nazivi pripadaju njihovim vlasnicima.



Logotip Wi-Fi je sertifikaciona oznaka Wi-Fi Alijanse.

11 Specifikacije

Radio standard	Frekvencija	Izlazna snaga
GSM	B3	30.0dBm+/-1dB
	B8	33.0dBm+/-1dB
WCDMA	B1	24.0dBm+/-1dB
	B8	24.0dBm+/-1dB
LTE	B1	24.0dBm+/-1dB
	B3	24.0dBm+/-1dB
	B7	23.0dBm+/-1dB
	B8	24.0dBm+/-1dB
	B20	24.0dBm+/-1dB
	B28	24.0dBm+/-1dB
	B38	26.0dBm+/-1dB
	B40	24.0dBm+/-1dB
	B41	26.0dBm+/-1dB
NR	N1	24.0dBm+/-1dB
	N3	24.0dBm+/-1dB
	N7	23.0dBm+/-1dB
	N28	24.0dBm+/-1dB
	N38	26.0dBm+/-1dB
	N41	26.0dBm+/-1dB
	N75	RX
	N77	26.0dBm+/-1dB
	N78	26.0dBm+/-1dB
WIFI CH0		
2.4G WiFi	2412MHz-2472MHz	18.0dBm+/2dB
5G WiFi	5150MHz-5250MHz	18.5dBm+1.5/-2dB
	5250-5350MHz, 5470MHz-5725MHz	18.5dBm+1.5/-2dB
	5725MHz-5850MHz	17.0dBm+/-2dB
6G WiFi	5925MHz-6425MHz	15.0dBm+/-2dB
B T	2402MHz-2480MHz	13.5dBm+/-3dB
NFC	13.56MHz	42 dBuA/m @ 10 m
WIFI CH1		
2.4G WiFi	2412MHz-2472MHz	18.0dBm+1.5/-2dB

Radio standard	Frekvencija	Izlazna snaga
5G WiFi	5150MHz-5250MHz	17.0dBm+1.5/-2dB
	5250-5350MHz, 5470MHz-5725MHz	17.0dBm+1.5/-2dB
	5725MHz-5850MHz	17.0dBm+1.5/-2dB
6G WiFi	5925MHz-6425MHz	15.0dBm+1.5/-2dB

Frekvencijski raspon: 5150 - 5250 MHz:

Upotreba u zatvorenom: Samo u zgradama. Ugradnja i korišćenje u drumskim vozilima i vozovima nije dozvoljena. Ograničena upotreba na otvorenom: Ako se koristi na otvorenom, oprema ne smije biti pričvršćena na fiksnu instalaciju ili na vanjsku karoseriju drumskih vozila, fiksnu infrastrukturu ili fiksnu spoljašnju antenu. Upotreba na sistemima bespilotnih letilica (UAS) ograničena je na raspon 5170 - 5250 MHz.

Frekvencijski raspon: 5250 - 5350 MHz:

Upotreba u zatvorenom: Samo u zgradama. Ugradnja i korišćenje u drumskim vozilima, vozovima i letelicama nije dozvoljena. Upotreba na otvorenom nije dozvoljena. Rukovanje WAS/RLAN instalacijama u velikim letelicama (isključujući helikoptere sa više motora) dozvoljena je do 31. decembra 2028. godine.

Frekvencijski raspon: 5470 - 5725 MHz:

Ugradnja i upotreba u drumskim vozilima, vozovima i letelicama i upotreba za bespilotne letilice (UAS) nisu dozvoljene. Rukovanje WAS/RLAN instalacijama u velikim letelicama (isključujući helikoptere sa više motora), osim u rasponu 5600 - 5650 MHz, dozvoljena je do 31. decembra 2028. godine.

12 Rješavanje problema

Razmotrite neke od ovih uobičajenih problema i rješenja za njih.

Moj telefon ne prima dolazne pozive

- Provjerite da li je telefon uključen i spojite se na mrežu.
- Provjerite da li je mreža preopterećena ili je nedostupna.
- Provjeriti status vašeg paketa usluga.
- Provjerite da li ste uključili prosljeđivanje dolaznih poziva.
- Provjerite da li ste zabranili određene pozive.
- Provjerite da li je vaš telefon u režimu rada u avionu.

Prilikom primanja poziva ne prikazuje se ime/broj pozivaoca na ekranu

- Ako pozivalac nije u vašoj listi kontakata, imate opciju da mu dodijelite ime.
- Pozivalac je možda sakrio svoje ime ili broj.

Ne mogu da pronađem svoje kontakte

- Provjerite da li je vaša SIM kartica polomljena.
- Provjerite da li je vaša SIM kartica pravilno ubačena.

- Uvezite u telefon sve kontakte sačuvane na SIM kartici.

Kvalitet zvuka tokom poziva je loš

- Podesite jačinu zvuka tokom poziva pritiskom na dugme za pojačavanje/utišavanje zvuka.
- Provjerite jačinu signala mreže. Premjestite se na lokaciju sa jačim signalom.
- Provjerite da li su prijemnik, priključak ili zvučnik na vašem telefonu čisti.

Ne mogu da koristim funkcije opisane u ovom priručniku

- Provjerite da li vaš paket usluga podrazumijeva ovu uslugu.
- Provjerite da li su za ovu funkciju potrebni dodatni uređaji.

Ne mogu da pozovem broj kada ga izaberem iz liste svojih kontakata

- Provjerite jeste li pravilno unijeli broj za taj kontakt.
- Provjerite da li ste izabrali pozivni broj zemlje kada upućujete međunarodne pozive.

Moj telefon ne može da se poveže na mrežu ili je prikazano “Nema mreže”

- Pokušajte da se povežete na mrežu tako što ćete se premjestiti na drugu fizičku lokaciju.
- Uvjerite se da je signal mreže dostupan na mjestu gdje se nalazite.
- Provjerite da li je vaša SIM kartica ispravna.
- Provjerite da li su podešavanja vašeg telefona u režimu rada u avionu.
- Ako ste udaljeni od svoje T-Mobile mreže, možda ćete morati uključiti roming u podešavanjima telefona da biste se povezali na drugu mrežu. Može doći do troškova za roming.

Moj telefon ne može da se poveže na internet

- Provjerite da li je internet usluga Mobilnih podaci dostupna u okviru vašeg plana mobilnih usluga.
- Provjerite podešavanja na telefonu. Provjerite da su Mobilni podaci uključeni ili da ste povezani na Wi-Fi.
- Uvjerite se da ste na mjestu gdje imate signal mreže za mobilne podatke ili Wi-Fi vezu sa internetom.
- Pokušajte da se povežete kasnije ili na nekoj drugoj lokaciji.

Neispravna SIM kartica

- Provjerite da li je SIM kartica pravilno ubačena (vidite “Ubacivanje Nano SIM kartice”).
- Provjerite da li čip na vašoj SIM kartici oštećen.
- Provjerite da li se usluga povezana sa vašom SIM karticom poklapa sa mrežom na kojoj ste.

Moj telefon ne upućuje odlazne pozive

- Provjerite da li ste pozvali ispravan broj i da ste dodirnuli Pozovi na svom telefonu.
- Za međunarodne pozive, provjerite pozivne brojeve zemlje i područja.
- Provjerite da li je vaš telefon povezan sa mrežom i da mreža nije preopterećena ili nedostupna.
- Provjeriti status vašeg paketa usluga.

- Provjerite da li ste zabranili odlazne pozive.

Moj telefon ne može da se uključi

- Ako telefon ne može da se uključi, puniti ga najmanje 10 minuta kako biste obezbijedili potrebnu minimalnu napunjenost baterije. Potom ga ponovo uključite.

Moj telefon ne reaguje nekoliko minuta

- Ako vaš telefon ne reaguje, isključite svoj telefon tako što ćete pritisnuti i zadržati dugme za uključivanje sve dok se telefon ne isključi i pokrene ponovo.

Moj telefon se sam isključuje

- Ako se vaš telefon sam isključuje, provjerite da li je dugme za uključivanje pritisnuto slučajno.
- Provjerite nivo napunjenosti baterije.
- Ako i dalje nije uspjelo, vratite telefon na fabrička podešavanja pomoću opcija za resetovanje u podešavanjima telefona. Vodite računa da napravite rezervnu kopiju svojih podataka.

Moj telefon ne može da se puni pravilno

- Provjerite je li baterija potpuno ispražnjena; ako je baterija bila prazna dugo vremena, može proći oko 10 minuta da se na ekranu prikaže indikator punjenja baterije.
- Provjerite da li se baterija puni pod normalnim uslovima (0°C (32°F) do 45°C (113°F)).

Ne mogu da dodam kontakt

- Provjerite je li lista kontakata na SIM kartici puna; obrišite neke unose ili sačuvajte unose na telefon.

Pozivaoci ne mogu da ostave poruke na mojoj govornoj pošti

- Pozovite svog mrežnog operatera da provjerite dostupnost usluge.
- Podesite svoju govornu poštu tako da vaši pozivaoci mogu da ostave poruku.

Ne mogu da pristupim svojoj govornoj pošti

- Provjerite je li T-Mobile broj za govornu poštu pravilno unesen u “Broj za govornu poštu”.
- Pokušajte kasnije ako je mreža zauzeta.

Ne mogu da šaljem niti primam MMS

- Provjerite memoriju telefona jer je možda puna.
- Kontaktirajte korisničku podršku da provjerite dostupnost usluge i podešavanja za MMS.
- Potvrdite sa korisničkom podrškom broj servisnog centra ili MMS profil.
- Servisni centar je možda preopterećen. Pokušajte ponovo kasnije.
- Pokrenite novi niz poruka. Vaš niz poruka je možda dosegao svoj limit.

Zaključan PIN SIM kartice

- Kontaktirajte korisničku podršku kako biste dobili PUK (Personal Unblocking Key) kod.

Ne mogu svoj telefon da povežem sa računarom

- Instalirajte aplikaciju Smart Suite.
- Provjerite da li su USB dražveri pravilno instalirani.
- Otvorite panel sa obavještenjima da provjerite je li uključen Smart Suite Agent.
- Provjerite da li ste označili kvadratić USB debugging.
- Provjerite da li vaš računar ispunjava uslove za instaliranje aplikacije Smart Suite.
- Provjerite da li koristite pravi kabal koji je došao u kutiji.

Ne mogu da preuzimam datoteke

- Provjerite ima li dovoljno memorije na telefonu za preuzimanje.
- Izaberite microSD karticu kao lokaciju za čuvanje preuzetih datoteka.
- Provjeriti status vašeg paketa usluga.

Drugi ne mogu da prepoznaju telefon preko Bluetooth-a

- Provjerite je li Bluetooth uključen i da li je vaš telefon vidljiv za druge korisnike.
- Provjerite jesu li ta dva uređaja u dometu za pronalaženje preko Bluetooth-a.

Baterija se prebrzo prazni

- Vodite računa da ste ispoštovali puno vrijeme za punjenje baterije (minimalno 2,3 sata).
- Nakon djelimičnog punjenja, indikator napunjenosti baterije možda neće biti precizan.
- Sačekajte najmanje 10 minuta nakon što se ga isključili sa punjača da dobijete preciznu indikaciju.
- Podesite osvijetljenost ekrana po potrebi.
- Podesite interval za automatsko provjeravanje e-pošte na što je duže moguće.
- Ažurirajte vijesti i informacije o vremenu ručno ili povećajte interval za automatsko provjeravanje.
- Izadite iz aplikacije koje rade u pozadini ako se ne koriste duži vremenski period.
- Isključite Bluetooth, Wi-Fi, ili GPS kada se ne koriste.

Telefon se ugrije nakon dužih poziva, igranja igrica, surfovanja internetom ili uključenih drugih zahtjevnih aplikacija

- To grijanje je normalna posljedica toga što procesor obrađuje veliki broj podataka. Prekidanjem gore navedenih radnji će se vaš telefon vratiti na normalnu temperaturu.

Kada se izvrši resetovanje na fabrička podešavanja, ne mogu da koristim telefon bez unošenja akreditiva za Google nalog

- Nakon resetovanja morate da unesete ispravne akreditive za Google nalog koji su korišćeni na ovom telefonu.
- Ako ste zaboravili svoje akreditive za Google nalog, dovršite postupak vraćanja za Google nalog.

Telefon ne zvoni kada stigne dolazni poziv ili poruka

- Provjerite da li je aktiviran režim Ne uznemiravaj (idite na **Podešavanja > Zvuk i vibriranje > Ne uznemiravaj**).
- Pritisnite dugme za pojačavanje/utišavanje zvuka da podesite jačinu zvuka.

T Phone 3 Pro



User Manual
English

About this manual

Thank you for choosing the T Phone 3 Pro. In order to maintain your device in optimal condition, please read this manual and keep it for future reference.


Table of content

1 Getting Started	3	4.4 Gmail	16
1.1 Overview.....	3	4.5 Chrome.....	17
1.2 Set up	4	4.6 Calendar.....	17
1.3 Home screen.....	6	4.7 Camera.....	19
1.4 Status bar	6	4.8 Photos	20
2 About your phone	7	4.9 Clock.....	20
2.1 Power on/off.....	7	5 Google applications	21
2.2 Battery.....	9	6 More applications	23
3 Personalize your phone	9	7 Accessibility	23
3.1 Language	9	8 Security & privacy	26
3.2 Date & time	9	8.1 Screen lock	26
3.3 NFC.....	10	8.2 Fingerprint sensor	26
3.4 Display.....	10	8.3 Face Unlock	27
3.5 Wallpaper.....	10	8.4 Extend Unlock.....	27
3.6 Sound	11	8.5 Encryption & credentials	27
3.7 Digital Wellbeing & parental controls.....	11	8.6 EID.....	27
3.8 Gestures.....	11	9 Account	28
3.9 Multiple users.....	12	9.1 Account information.....	28
3.10 Backup & Factory Reset.....	12	9.2 Software update.....	28
4 Applications	12	10 Safety & regulatory information	28
4.1 Call.....	12	11 Specification	32
4.2 Contacts.....	13	12 Troubleshooting	33
4.3 Messages.....	15		

1 Getting Started

1.1 Overview

Note: The fingerprint sensor is located on the power key.

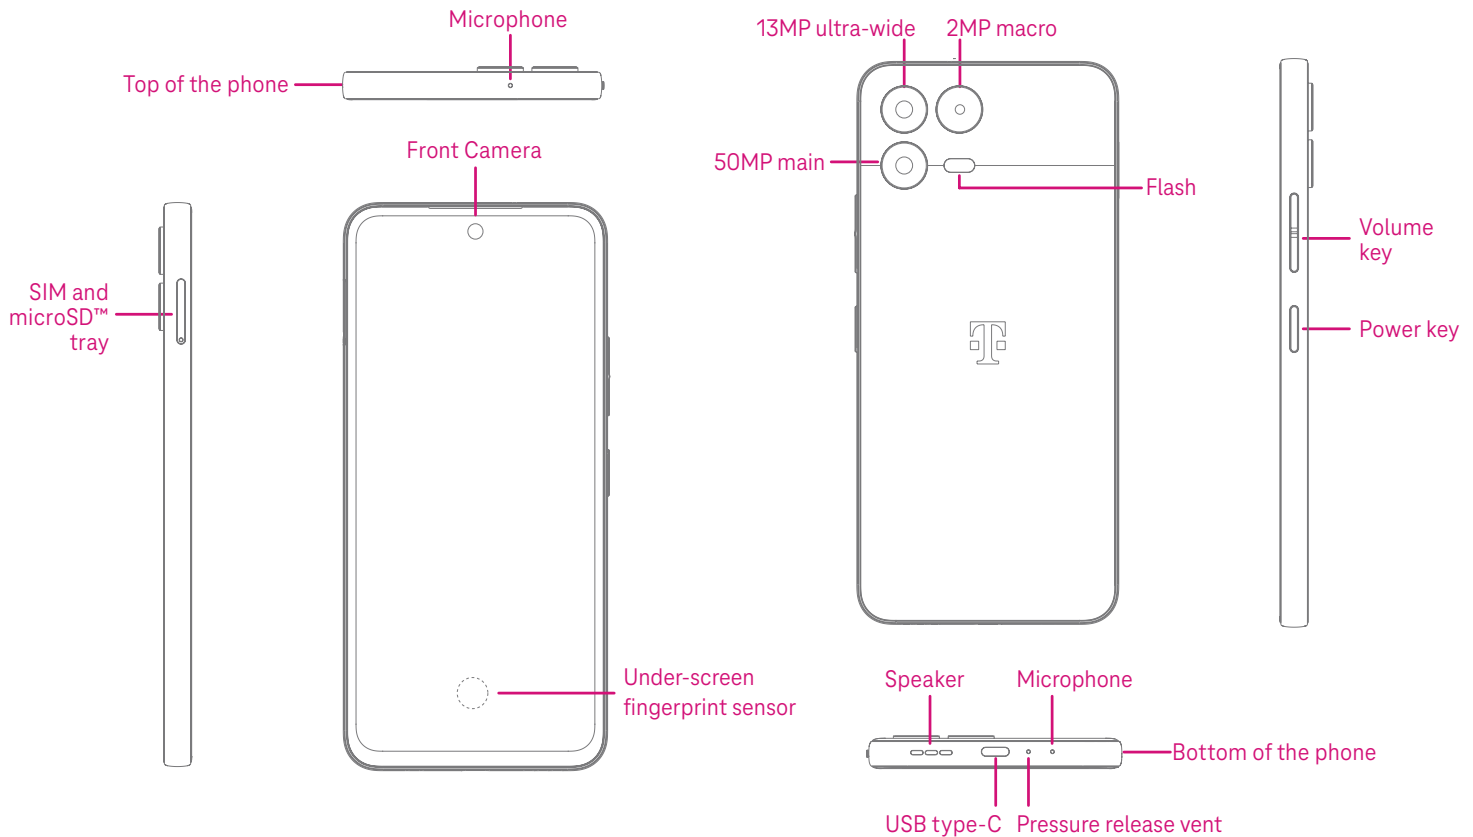

Power key

- Press and release quickly to lock or light up the screen.
- Press and hold to launch **Gemini**.
- Press and hold the **Power** key and **Volume up** key to select from **Emergency**, **Lockdown**, **Power off** or **Restart**.
- Press and hold the **Power** key and **Volume down** key to take a screenshot and save it.
- Press and hold the **Power** key and **Volume up** key for at least 10 seconds to force reboot.
- Press the **Power** key twice to access the **Camera** or **Perplexity**.

Volume key

- Use the Volume up or down keys to adjust the ringtone volume, the call volume during a phone call, or the media volume while listening to music, watching a video, or streaming content.
- Press the Volume key during an incoming call to mute the ringtone.
- While using the Camera, press the Volume up or down key to take a photo.


1.2 Set up

Inserting Nano SIM card

You must insert your Nano SIM card to make phone calls using your network.



Your phone only supports Nano SIM cards. In order to avoid damaging your phone, do not attempt to insert other SIM types, such as Mini or Micro cards.

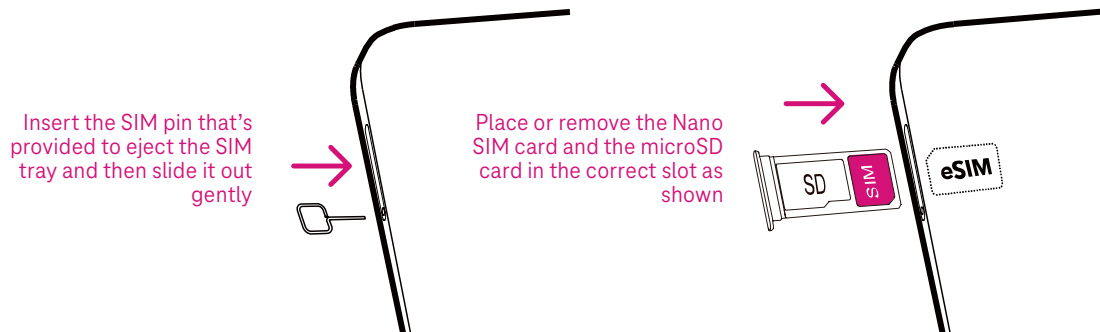

Note: Even if no SIM card is installed, your phone will still power on and you will be able to connect to a Wi-Fi network and use some of the phone's features.

Register an eSIM during initial device setup if you got a QR activation code:

- Turn on the device and select language.
- Select “Download eSIM”.
- Connect to WIFI.
- Select “Download eSIM”, Camera will start and you can scan the QR code.
- Select “Connect” in next step to Download the eSIM.

Register an eSIM after device setup if you got a QR activation code:

- Connect to WIFI or mobile data.
- Goto **Settings > Network & Internet > SIMs**.
- Select “Set up an eSIM”.
- Camera will start and you can scan the QR code.
- Confirm Download.
- After download go to settings and turn on SIM.

Delete an eSIM:

- Connect to WIFI or mobile data.
- Goto **Settings > Network & Internet > SIMs**.
- Turn off SIM.
- Select “Erase SIM” and confirm deletion.

Set up your phone

The first time you power on the phone, you should set the following options:

- Touch **English (United States)** to choose your language, and touch **Vision settings** to customize accessibility features. When finished, touch **Start** on original interface to go on.
- Touch **Android device** or **iPhone®** or **iPad®** to copy settings, accounts, and more, otherwise touch **Skip** to skip this step.
- Select an available Wi-Fi network. Or touch **Set up offline** and **Continue**.
- Set a **Date & time** to adjust if needed.
- Toggle  to allow the phone to use location, otherwise toggle off .
- Toggle  to allow scanning, otherwise toggle off .
- Toggle  to allow to send usage and diagnostic data, otherwise toggle off .
- Click **More** to continue, and press **Accept**.
- Select a navigation mode, touch **Gesture navigation** or **3-button navigation**.
- Set a PIN for screen lock, otherwise touch **Skip** on the screen twice to continue.

Magenta AI

Perplexity Assistant

This device is equipped with a digital assistant from Perplexity, which can process voice commands, text inputs, and even visual information through the device's camera. Based on AI technology, help is always at your fingertips and allows you to interact with your surroundings and on-screen content in novel ways.

To open Perplexity Assistant:

- Double click the Power key on the right side of the device, or
- Open it via the Magenta AI button near the bottom  center of your lockscreen.

To leave the assistant, click anywhere on the upper half of the screen.


To change Settings:

- Go to **Settings > System > Gestures > Double click power button** to change the gesture of double click Power button to open Camera or Perplexity Assistant.
- Go to **Settings > Display > Lock Screen > Magenta AI Button** to enable or disable Magenta AI Button on the device lockscreen.
- To make use of the full potential of the Perplexity Assistant (e.g. interact with on screen content), go to **Settings > Apps > Default Apps > Digital assistant app > Default digital assistant app** to choose **Perplexity** as default assistant.

When this is set, the Perplexity Assistant can be open via long press the Power key.

1.3 Home screen

You can bring all of the items that you use most frequently (applications, shortcuts, widgets, folders) to your Home screen for quick access, then swipe up from the bottom of the screen to return to the Home screen.

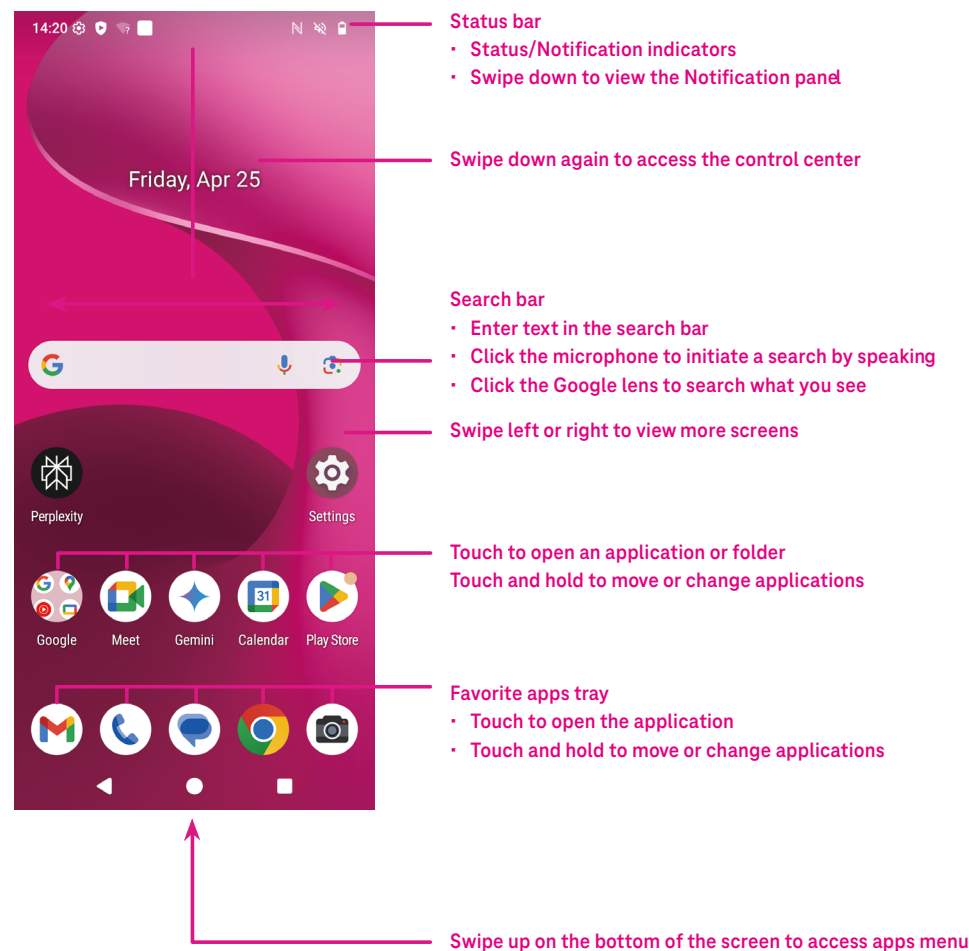

1.4 Status bar

The Status bar appears at the top of your Home screen and includes icons indicating your phone’s status and new notification alerts.

Icon	Status	Icon	Status
	Wi-Fi® active		Battery (fully charged)
	Network (Full signal)		New message
	5G data service		Silent mode
	Airplane mode		Do Not Disturb
	Alarm		New Gmail message
	Battery (charging)		Screen record
	Bluetooth		NFC enabled

2 About your phone

2.1 Power on/off


To turn the device on, hold down the **Power** key until the phone powers on. Unlock your phone (using None, Swipe, Pattern, PIN, Password, Fingerprint or Face key) if necessary. Once unlocked, the Home screen is displayed.

If you don't know your PIN code or if you have forgotten it, contact Customer Care. For safety, please do not store PIN code in your phone.

To power the device off, press the **Power** key and **Volume up** key until options appear, then select **Power off**.

Charging

Insert the small end of the charging cable into the charge port and plug the charger into an electrical outlet.

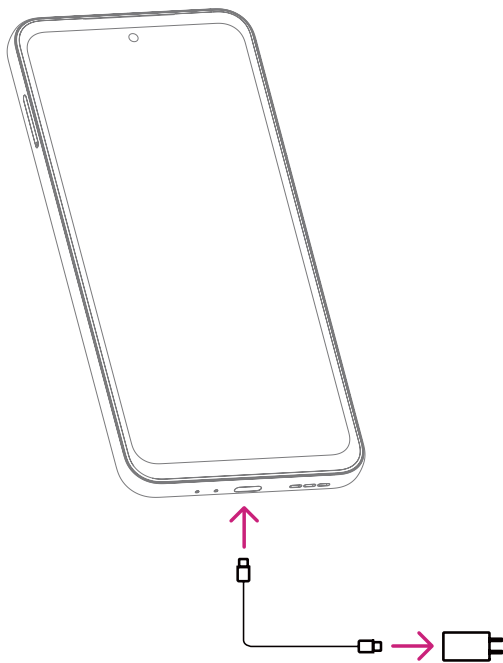

- Insert the USB type-C cable into the charge port as shown.
- Connect charger to power outlet.

Note: Please use the USB type-C cable included in the box.

Wall charger sold separately. Using the wrong cable and charger may damage the charging port or reduce battery performance.

Charging with a wireless charger

Place the Wireless Charger

- Find a suitable location for your wireless charger. It should be placed on a flat, stable surface.

Connect the Charger

- Plug the wireless charger into a power source using the cable and adapter. Make sure the charger is receiving power.

Position Your Device

- Place your device on the wireless charger. Align the charging coils of your device with those of the charger for optimal charging efficiency.

Charging Indicator


- Many wireless chargers have LED indicators to show when your device is properly aligned and charging. Refer to your charger's user manual for specific indicator meanings.

Charging Status

- Your device should start charging automatically once placed on the charger. You can check the charging status on your device's screen.

Complete Charging

- Once your device is fully charged, remove it from the wireless charger.

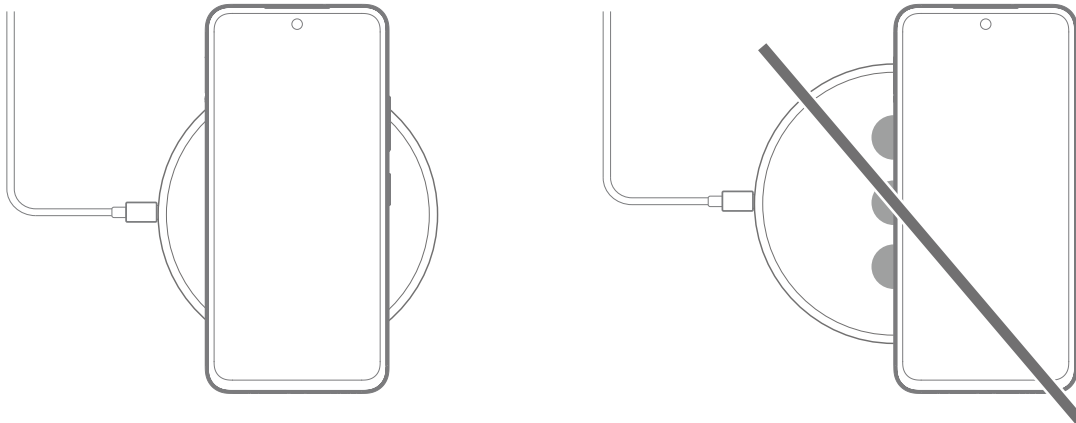

Note: Please note that the wireless charging device is not included in the box, and you will need to purchase a wireless charging device separately. Ensure that the charger is compatible with your device's charging requirements and standards(e.g., Qi-compatible for most smartphones or we can provide our battery charging spec).

Important Notes for wireless Charging

Charging Efficiency

- Wireless charging may be slightly slower than wired charging, depending on the charger and device.

Charging Distance

- Ensure there are no obstructions between your device and the wireless charger for efficient charging.

Device Positioning

- Proper alignment of your device on the charger is essential for effective charging.

Temperature

- Avoid exposing your device and charger to extreme temperatures, as it may affect charging performance.

Device Compatibility

- Verify that your device is compatible with the wireless charger you purchase.

Warranty Disclaimer for wireless Charging

Please note that the wireless charging device is not included in the box with your purchase. Any wireless charger you acquire separately is subject to the manufacturer's warranty and terms of service. We are not responsible for any issues or damages related to the use of third-party wireless chargers. Be sure to review the warranty and terms provided by the charger's manufacturer for support and coverage.

For further assistance or inquiries regarding wireless charging device, please refer to the manufacturer of your wireless charger.

2.2 Battery

Make these adjustments to optimize your battery life.

Turn on power saving mode

- Go to **Settings > Battery > Battery Saver**.
- Turn on **Use Battery Saver** to activate the battery saving mode.

Note: The Battery Saver mode will not be activated in charging mode.

Lower screen brightness

- Go to **Settings > Display > Brightness level**.
- Lower the brightness by sliding  to the left.

Screen timeout

- Go to **Settings > Display > Screen timeout**.
- Select the screen timeout duration.

3 Personalize your phone

3.1 Language

Choose from multiple languages supported on your device.

- Go to **Settings > System > Languages > System Languages**.
- Touch **+ Add a language** to select a language from the list.
- Touch and hold  next to your desired language and drag it to the top of the list.

3.2 Date & time

Go to **Settings > System > Date & time**.

Set time automatically

Turn on  to use network-provided time.

If choose off, you can manually set the date and time:

- Touch **Date** to open a dialog in which you can manually set the date.
- Touch **Time** to open a dialog in which you can manually set the time.

Set automatically

Turn on  to enable the network-provided time zone. And you can turn on **Use location** to set time zone to allow phone time to be matched with local time.

If Automatic time zone is turned off, you can manually set the time zone:

- Touch **Time zone** to select the region and time zone manually.

Use locale default

- Turn on  to enable locale default.
- If **Use locale default** is off, you can turn on  to enable the **Use 24-hour format**.

3.3 NFC

NFC facilitates secure contactless transactions by enabling smartphones to transmit encrypted payment.

To enable, go to **Settings > Connected devices > Connection preferences > NFC** > Toggle on  to activate.

3.4 Display

Make adjustments to the display settings and wallpapers to optimize your experience.

Go to **Settings > Display** to alter the following settings.

Lock screen

Customize what displays on your lock screen.

Dark theme

Dark theme uses a black background and help keep battery alive longer on some screens.

Night Light

This mode tints your screen amber. This makes it easier to look at your screen or read in dim light, and may help you fall asleep more easily.

Color contrast

Higer contrast makes text,buttons, and icons stand out more. Choose the contrast that looks best to you.

Auto-rotate screen

Select whether the screen rotates automatically or not.

Note: Using your device in landscape mode while wearing polarized sunglasses may cut light from the screen. Take your polarized sunglasses off or use your device in portrait orientation to continue use.

Smooth display

Automatically raises the refresh rate up to 120Hz for some content. Increases battery usage.

Screen saver

The screen saver automatically activates when the device is docked and charging, displaying customizable visuals for enhanced usability.

Lift to wake

Lift the device to wake the screen instantly, allowing quick access to notifications or time without pressing buttons.

3.5 Wallpaper

- Touch Photos to select from images that are stored on your device.
- Touch **Settings > Wallpaper & style** to change a wallpaper for your lock screen and/or homescreen from pre-loaded images.

3.6 Sound

Adjusting volume

- Press the volume keys that are located on the right side of the device to adjust the Media, Call, Ring, Notification and Alarm volume.
- You can also go to **Settings > Sound & vibration** to adjust the volume for Media, Call, Ring, Notification and Alarm volume.

Adjusting tones

Go to **Settings > Sound & vibration > Phone ringtone**.

Adjusting other sounds

All other sounds that are related to dial pad, screen locking, charging and tap & click can be adjusted to by doing the following:

Go to **Settings > Sound & vibration**.

3.7 Digital Wellbeing & parental controls

- Go to **Settings** and touch **Digital Wellbeing & parental controls** to find out how much time you have spent on the phone and even on each app. You can customize the time limit for using the phone.
- In addition, parents can restrict their children's usage time and manage their browsing habits.

3.8 Gestures

You can change the system navigation by going to **Settings > System > Gestures > Navigation mode**, then choose one type of navigation.

Gesture navigation

Touch **Gesture navigation** to enable different interfaces access by swiping the phone screen.

- Go to recent apps interface: swipe up from the bottom of the screen, and hold.
- Go home: swipe up from the bottom of the screen.
- Go back: swipe from either the left or right edge of the screen.

3-button navigation

Touch **3-button navigation** to display the following buttons on the bottom of the screen.

■ Recent Apps button

- Touch to view recently used applications. Swipe up on the screen to remove a specific thumbnail from the list, or scroll all the way to the left and touch **Clear all** to remove all thumbnails from the list.
- Pressing the Recent Apps button will also allow access to **Screenshot**. Touch **Screenshot** to immediately capture what is on the screen.

● Home button

- From any application or screen, touch to return to the Home screen.

- Touch and hold to launch Gemini, with which you can search for information online, open apps on your phone, or send messages.

◀ Back button

Touch to go back to the previous screen, or to close a dialog box, options menu, or the Notification panel.

3.9 Multiple users

You can share your phone with other users by going to **Settings > System > Users**. then turn on . And you will see the following choices.

- You (Owner): Touch it and you can set your profile information.
- Add user: Touch it to add new user and allow him to set up his space.
- Add guest: Touch it to create new guest and finish other settings.

Note: Touch **Add users from lock screen** to allow user adding in lock screen.

3.10 Backup & Factory Reset

- To transfer data from your device to another one, go to **Settings > System > Backup**, then you need click **Add account** to set your backup account.
- To wipe all data in your device, go to **Settings > System > Reset options > Erase all data (factory reset) > Erase all data > Erase all data**.

4 Applications


4.1 Call

Calling

- To make a call, touch **Phone**  .
- Suggested numbers are displayed as you enter numbers on the dial pad.
- Enter the desired number from the dial pad and touch  to place the call. You can also select a contact from **Favorites** ☆ , **Recents** ⌚ , **Contacts** 👤 , **Voicemail** ☎ by touching the tabs..
- The number you entered can be saved to Contacts by touching **Create new contact**.
- If you make a mistake, you can delete the incorrect digits by touching .
- To hang up a call, touch .

International call

To make an international call, touch and hold  to enter +, then enter the

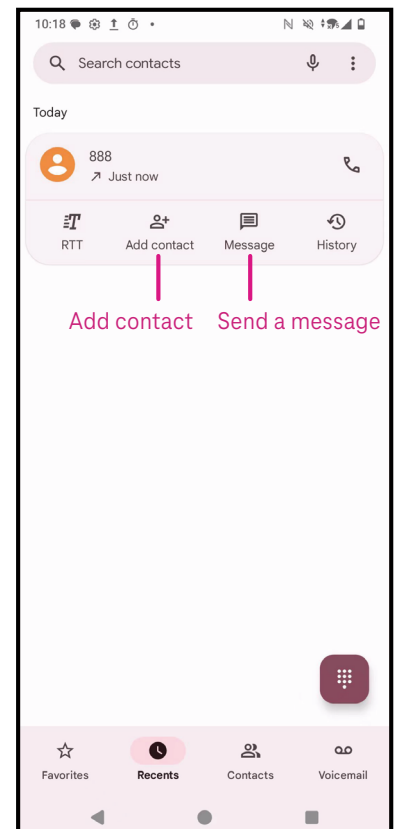

international country prefix followed by the full phone number and touch .

Emergency call

If your phone has network coverage, dial the emergency number and touch .

This works even without a SIM card and without typing the PIN code.

Answering or rejecting a call

When you receive a call:


- Slide  up to answer.
- Slide  down to reject.
- Touch  to reject the call by sending a preset message.
- To mute the ringtone of an incoming call, press the Volume key.

Voicemail

Your voicemail works like an answering machine for your missed calls.

- To access your voicemail, touch and hold 1.
- To set your voicemail number: touch **Phone**  and go to  > **Settings** > **Voicemail** > **Advanced Settings** > **Setup** > **Voicemail number**.
- If you receive a voicemail,  appears in the Status bar. Open the Notification panel and touch **Voicemail**.

Touch and hold to access voicemail

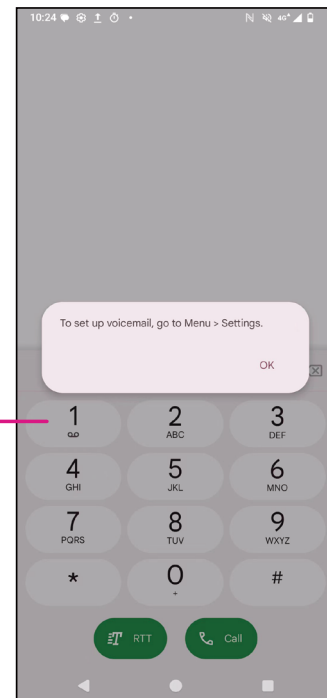

Real-time text (RTT)

RTT assists caller who are deaf, hard of hearing, have a speech disability, or need more than voice alone.


- Touch **Phone**  and go to  > **Settings** > **Accessibility** > **Real-time text (RTT)** to set up Real-time text (RTT).
- After enabling RTT, the dialer interface will display  clicking it activates the text input box during a call.

4.2 Contacts

Contacts enables quick and easy access to the contact you want to reach.

To access this function, touch **Contacts**  from the Apps menu.

You can view and create contacts on your phone and synchronize them with your Gmail contacts or other applications on the web or on your phone.

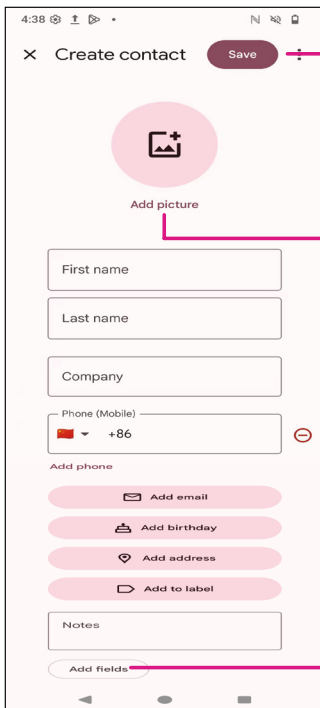

When finished, touch **Save**

Select a picture or take a photo for the contact

Touch to open available labels

Adding a contact

- Touch  in the contact list to create a new contact.
- Enter the contact's name and other contact information. By scrolling the screen up and down, you can move from one field to another.
- When finished, touch **Save**.
- To exit without saving, you can touch  and then touch **Discard**.


Editing your contacts

Touch  in the contact details screen to edit. When finished, touch **Save**.

Add to/remove from Favorites

Touch a contact to view details then touch  to add the contact to favorites.

Touch  again to remove a contact from favorites.

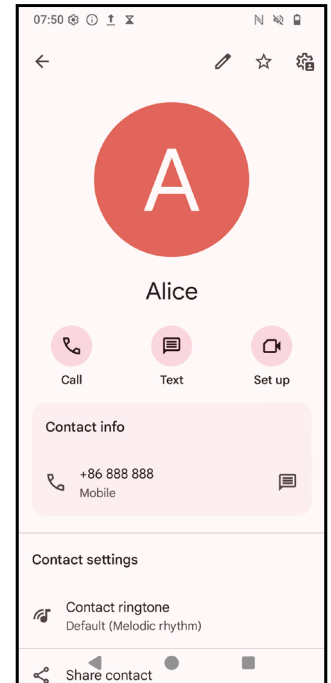

Add to label

- Touch  to add a label for grouping contacts.

Deleting a contact

From the contact list screen:

- Touch and hold the contact you want to delete, then touch  and **Delete** to delete.
- Mark the checkbox of all contacts, then touch  and **Delete** to delete all contacts.

From the contact details screen:

- Touch  then select **Delete**. Select **Delete** when prompted to confirm.



The contact you have deleted will also be removed from other applications on the phone or web the next time you synchronize your phone.

Sharing a contact

You can share a single contact with others by sending the contact's vCard to them via Quick Share, Bluetooth, Gmail, Messages, and Drive. Select a contact you want to share, touch and hold the contact and tap on .

Available options

From the contact list, you may also make further adjustments by touching **Organize**.

Organize

Contact ringtones

Touch to Set up ringtones for specific contacts.

Manage SIM

Tap to select contacts which you want to **Import** or tap on  to delete.

Import/Export

Choose accounts to Import or Export.

Blocked numbers

Add numbers here so that you won't receive the calls or texts from them.

 
Settings:

- Your info Touch to set up your profile.
- Accounts Touch to add account and configure related info.
- Sort by Touch to sort the list by the first name or last name.
- Name format Touch to choose whether to display first name first or last name first.
- Theme Touch to change into light or dark theme.
- Default account for new contacts Touch to choose the default place to save a new contact.
- Phonetic name Touch to choose display or hide phonetic name.

4.3 Messages

Use the messaging app  to send and receive text (SMS) and multimedia (MMS) messages.

Creating a message

On the Messaging list screen, touch  to write text/multimedia messages.

Sending a text message

- Enter the name, phone number or email of the recipient in the **To** bar or touch  **Creat group** to add recipients.
- Touch the **Text message** bar to enter the text of the message.
- Touch  to access emoticons.
- When finished, touch  to send the text message.

An SMS message of more than 160 characters will be charged as several SMS. A counter will be on the right of the ext box to remind you how many characters can be entered in one message.



Specific letters (accented) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, audio and vCard to other compatible mobiles and e-mail addresses.


- Enter the recipient's phone number in the **To** bar.
- Touch the **Text message** bar to enter the text of the message.
- Touch  to attach a gallery, files, your location, contacts or schedule send; Touch  to choose a picture or video.
- When finished, touch  to send the multimedia message.

Managing messages

When receiving a message,  will appear in the Status bar as a notification. Drag down the Status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open it.

Type the text message

Insert emotions

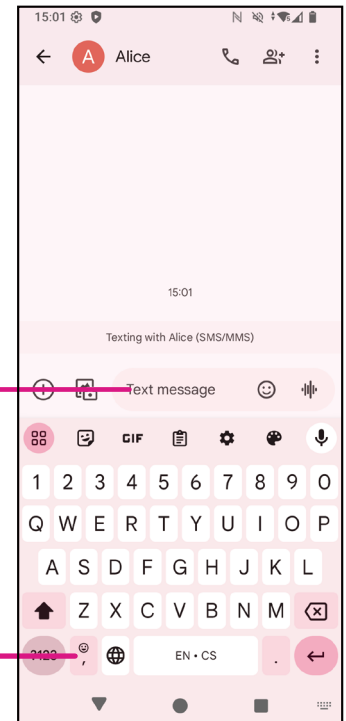

Messages are displayed as a conversation.

Touch a message to enter the message composing screen:


- Touch  to call the number.
- Touch  to save the number to contacts or view the contact details if the number has been saved.
- To reply to a message, enter the text. When finished, touch .
- If you touch and hold a message, the following options will be available:  Copy text ,  Delete,  Star message,  Share or View details.

4.4 Gmail


Setting up Gmail

To set up your email account, swipe up from the Home screen, then select Gmail.

- Select  to add an email address.
- An email setup process will guide you through the steps to set up an email account.
- Select the type of email account that you have and enter the email address and password of the account you want to set up.
- If the account you entered is not provided by your service provider in the device, touch **Other** and enter the email address, touch **NEXT** to select an account type and enter password of your email, then correctly fill in server and port in both Incoming server settings and Outgoing server settings interfaces. Touch **Finish** to complete setup.
- To add another email account, click **+ Add an email address**. Choose Other from the set up email options. Or you can touch the account name on the upper right corner and select **Add another account** to implement this function (this is unavailable when not log in Google).

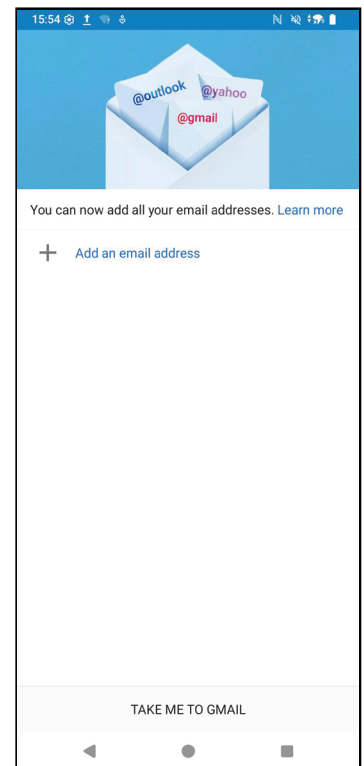

Sending an email

 - Touch  from the Inbox screen.
- Enter recipient(s) email address(es) in the **To** field.
- If necessary, touch  > **Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Touch  to add an attachment.
- If you do not want to send the mail right away, you can touch  and **Save draft** or touch the Back key to save a copy.
- Touch  to send.
- If you do not want to send or save the email, you can touch  and then select **Discard**.

- To add a signature that will appear on all of your emails, touch  and select **Settings**, then choose the account that you want to create or modify the signature, touch **Mobile signature** to edit.

Note: If you are seeing a “password incorrect” error when setting up your Gmail Account in the Gmail app, please review the following option:

Option : Generate an App password

An App password is a 16-digit passcode that gives an app or device permission to access your Google Account. If you use 2-Step-Verification and are seeing a “password incorrect” error when trying to access your Google Account, an App password may solve the problem.

To generate an App password.

- Visit your App passwords page <https://myaccount.google.com/security/signinoptions/two-step-verification>. You may be asked to sign in to your Google Account.
- Return back to security interface, swipe down to choose **App passwords**.
- Set the following options: **Select app; Select device**.
- Select **Generate**.
- Follow the instructions to enter the App password (the 16-character code in the yellow bar) on your device.
- Select **FINISH/DONE**.
- Once you are finished, you won’t see that App password code again. However, you will see a list of apps and devices you’ve created App passwords for.

4.5 Chrome

Enjoy surfing the Web using the Chrome browser.

To access this function, touch Chrome  from the Home screen.


4.6 Calendar

You can use Calendar to keep track of important meetings, appointments, and more.

To access the function, swipe up from the Home screen, then touch **Calendar**.

Viewing calendars

You can display the Calendar in Schedule, Day, 3 days, Week or Month view. Touch  and select your desired calendar view.

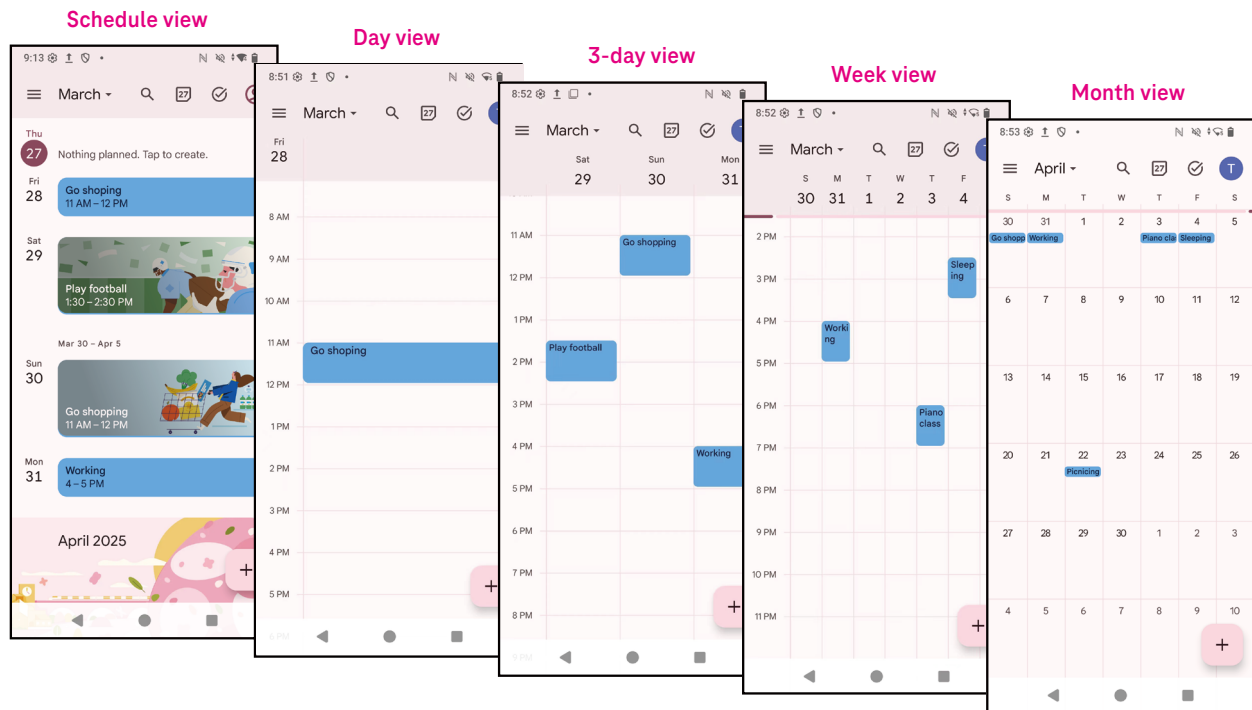

Creating a new event

You can add new events from any Calendar view.

- Touch .
- Fill in all required information for this new event. If it is a whole-day event, you can turn  on to All-day.
- Invite guests to the event. Enter the email addresses separated by commas of the guests you want to invite to separate. The guests will receive an invitation from Calendar and Email.
- When finished, touch **Save** from the top of the screen.

To quickly create an event from the Day, 3 Day, or Week views, touch an empty spot to select a target area which will then turn into , and touch the icon to create the new event.

Deleting or editing an event

- To delete or edit an event, touch the event to enter its details screen, then touch  to edit the event.
- Touch  and Delete to remove the event, or **Duplicate** to copy the event.

Event reminder

If a reminder is set for an event, the upcoming event will appear in the home screen.

- Touch an event name to view the Calendar notification list.

4.7 Camera

Accessing the camera

From the Home screen, touch **Camera**.

Taking a picture

- Position the object or landscape in the viewfinder, and touch the screen to focus if necessary.
- Touch  to take the picture which will be automatically saved.
- To take burst shots, touch and hold .

1 Select the options for Flash mode:
Off, Auto, On, Always

2 Select the countdown

3 Select HDR mode to select HDR mode: **Off, Auto**

4 Select a filter

5 Select the shot size

6 Access more options

7 Switch between front and main camera

8 Take a photo

9 View photos/videos taken

AI Scene optimizer

You can access more options to select the AI scene optimizer which is a new function.


- Automatically optimize camera setting such as color, contrast and brightness to make scenes look more vivid.

Making a video

- Touch VIDEO to enter the Video mode.
- Touch  in the center of the screen to start video recording.
- You can also touch  to take a picture during video recording.
- Touch  to pause recording.
- Touch  to resume recording.
- Touch  to stop recording. The video will be automatically saved.

Viewing, Editing, & Sharing

- Touch  then choose a way like Messages to share the photo or video.
- Touch  to edit the photo or video.
- Touch  to search what you see with Google Lens.
- Touch  to delete.
- Touch  to go back to Camera mode.

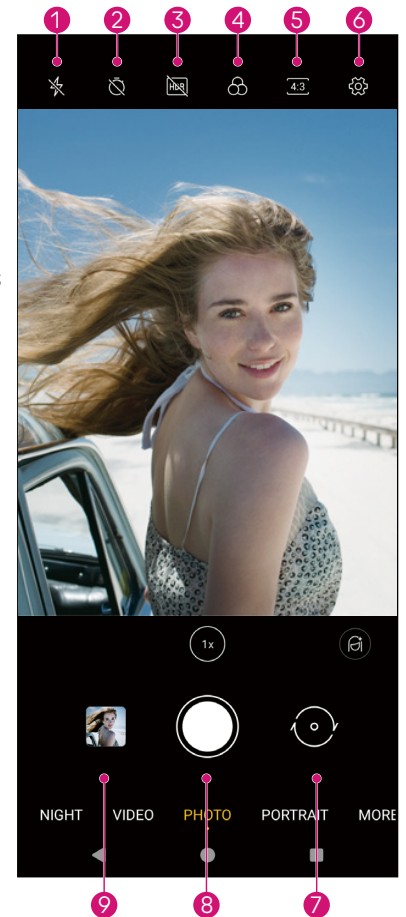

4.8 Photos

Photos acts as a media player for you to view photos and play videos.

Pictures and videos are displayed by moments and albums in Photos.

- Touch the picture/video directly to view or play.
- Swipe left/right to view previous or next pictures/videos.


Working with photos

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as a contact photo or wallpaper, etc.

- Locate the picture you want to work on and touch the picture in the full screen picture view.
- Touch  to share the picture, or touch  to delete the picture. Touch  and select **Use as** to set the picture as Contact photo or Wallpaper.

Tap  to enter editing screen.

 Suggestions	Choose Enhance, Warm, or Cool to adjust the picture color.
Crop	Select between  ,  ,  , and Reset.
Adjust	Manage Brightness, Contrast, and more.
Filters	Choose between a variety such as Vivid, Playa, Honey, and more.
Markup	Personalize your picture by drawing on it or adding words to it.

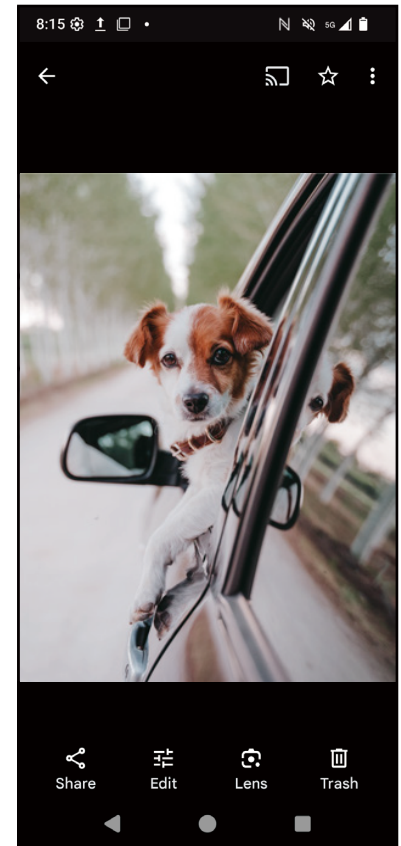

4.9 Clock

To access Clock, swipe up from the Home screen, then touch **Clock**.

Setting world clocks

- Touch  on the clock screen.
- Touch  to add a time zone.

Setting alarms

Touch  on the clock screen.

Turn on  to enable existing alarm, or touch  to add a new alarm. The following options will appear:

 Add label	Touch to set a name for the alarm.
 Pause alarm	Touch to select the dates to pause your alarm.
 Default (Magenta_Voyage)	Touch to select a ringtone for the alarm.
 Vibrate	Mark the checkbox to activate vibration.
 Google Assistant Routine	Touch to enter Google Assistant Routine.

Dismiss

Touch to dismiss the alarm.



Delete

Touch to delete the alarm.

Setting timer

- Touch  on the clock screen.
- Enter time in the sequence of seconds, minutes, and hours.
- Touch  to activate the Countdown.
- Touch  to add another timer in panel.
- Touch  to deactivate the Countdown.
- Touch  to activate the Countdown.
- Touch  to delete current countdown timer.

Setting stopwatch

- Touch  on the clock screen.
- Touch  to activate the stopwatch.
- Touch  to show a list of records according to the updated time.
- Touch  to deactivate the stopwatch.
- Touch  to clear all new stopwatches.

Bedtime

Set a bedtime to silence your phone and choose to listen to soothing sounds. Set a wakeup time to receive alerts again.

5 Google applications

Google apps are preinstalled on your phone to improve work efficiency and provide an enjoyable user experience. This manual briefly introduces the apps. For detailed features and user guides, refer to related websites or the introduction provided in the apps.

Register with a Google Account to enjoy full functionality.



Google

Your bookmarks, browsing history, and settings across all devices on which the browser is installed can be synchronized with your Google Account.



Gmail

As Google's web-based email service, Gmail is configured when you first set up your phone. With this application, you can send and receive emails, manage emails by labels, archive them, and more. Emails can be automatically synchronized with your Gmail account.



Maps

Google Maps offers satellite imagery, street maps, 360° panoramic views of streets, real-time traffic conditions, and route planning for traveling by foot, car, or public transportation. By using this application, you can find your own location, search for a place, and get suggested route planning for your trips.



YouTube

YouTube is an online video-sharing application where users can upload, view, and share videos. Available content includes video clips, TV clips, music videos, and other content such as video blogging, short original videos, and educational videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the internet.



Drive

A file storage and synchronization service created by Google, which allows users to store files in the cloud, share and edit files. Files in Drive are kept secure and can be accessed from any device by logging in to your Google Account. Files or folders can be shared privately with other Google Account users.



Meet

This is a video chat mobile app that allows users to make video calls to people in their contact list once their phone numbers are verified.



Photos

Google Photos stores and backs up your photos and videos. It also automatically analyzes photos and organizes them into groups so that you can quickly find the photos you need.



Google TV

Google TV is a smart TV platform and app developed by Google, designed to streamline and enhance the way users discover, organize, and enjoy streaming content. Launched in 2020 as a successor to Android TV, it combines live TV, streaming services, and personalized recommendations into a unified interface, offering a seamless entertainment experience.



Google One

Google One is a subscription-based cloud storage and membership service developed by Google, designed to enhance your experience across Google's ecosystem while offering expanded storage, exclusive features, and premium support. Launched in 2018, it replaces the older Google Drive storage plans and provides added benefits beyond just cloud space.



Home

Home is a central control hub developed by Google to manage and automate smart home devices, including Google Nest products, third-party gadgets, and services. Originally designed to set up Google Home speakers, it has expanded into a comprehensive platform for creating a connected,

voice-controlled smart home ecosystem.



Find Device

Find Device is an official app developed by Google to help users locate, secure, or erase their lost Android smartphones, tablets, wearables (e.g., smartwatches), or other linked devices. It serves as a critical tool for safeguarding personal data and ensuring device recovery.



YT Music

YT Music Downloader is a Windows program that simplifies downloading videos and music from YouTube. YT Music Downloader lets you download videos and/or audio from YouTube. The program is geared toward music, so you can save music videos (or any videos) or convert those videos to just music, and the app will automatically save them in the MP3 format. Provided an appropriate YouTube link, the program is very fast at converting and saving these items to file, and once done, you have access to this music offline and via any other devices to which you transfer these files.

6 More applications

Swipe up from the bottom of the screen to access these other apps.



Play Store

Serves as the official app store for the Android operating system, allowing users to browse and download applications and games. Applications are either free of charge or at a cost.



Files

Files displays all data stored on the phone, including both external SD card and internal storage, such as applications, media files downloaded from Google Play Store, YouTube or other locations; videos, pictures or audio you have captured; other data transferred via Bluetooth, USB cable, etc.

7 Accessibility

Live Transcribe

Live Transcribe shows speech as text on your screen so you can participate in conversations around you more easily.

- Go to **Settings > Accessibility > Live Transcribe** to set up this function.
- Enable the **Live Transcribe shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Sound Notifications

Get notified about important sounds around you, like when a smoke alarm beeps or baby cries.

- Go to **Settings > Accessibility > Sound Notifications** to set up this function.
- Enable the **Sound Notifications shortcut** to display a quick-access button on the right side of the screen, letting

you launch it instantly with a single tap.

Voice Access

Voice Access lets you control your Android device hands-free. Use voice commands to open apps, tap buttons, scroll, type, and more. Currently available in English, French, Italian, German and Spanish only.

- Go to **Settings > Accessibility > Voice Access** to set up this function.
- Enable the **Voice Access shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

TalkBack

TalkBack provides spoken feedback so that you can use your device without looking at the screen. TalkBack can be helpful for people who have difficulty seeing the screen.

- Go to **Settings > Accessibility > TalkBack** to set up this function.
- Enable the **TalkBack shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Select to speak

Tap specific items on your screen to hear them read or described aloud.

- Go to **Settings > Accessibility > Select to speak** to set up this function.
- Enable the **Select to speak shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Display size and text

Adjust font size, display size, bold text, and high contrast settings to improve readability and optimize visual accessibility.

- Go to **Settings > Accessibility > Display size and text** to set up this function.
- You can also Go to **Settings > Display > Display size and text** to set up this function.

Color and motion

This feature helps users customize visual elements and motion effects on their device to improve comfort, reduce distractions, and enhance accessibility for those with visual or motion sensitivity. Options include enabling color correction, color inversion, dark theme, and remove animations.

- Go to **Settings > Accessibility > Color and motion** to set up this function.

Extra dim

Extra Dim allows the screen brightness to be reduced below the default minimum level, enhancing comfort in low-light environments and minimizing eye strain.

- Go to **Settings > Accessibility > Extra dim** to set up this function.
- Enable the **Extra dim shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Magnification

Quickly zoom in on the screen to make content larger.

- Go to **Settings > Accessibility > Magnification** to set up this function.
- Enable the **Magnification shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Accessibility Menu

The accessibility Menu provides a large on-screen menu to control your device. You can lock your device, control volume and brightness, take screenshots, and more.

- Go to **Settings > Accessibility > Accessibility Menu** to set up this function.
- Enable the **Accessibility Menu shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Switch Access

Switches can help you control your Android device if it's difficult to directly interact with the touchscreen. A switch can be externally connected to your device, like a keyboard or large button.

- Go to **Settings > Accessibility > Switch Access** to set up this function.
- Enable the **Switch Access shortcut** to display a quick-access button on the right side of the screen, letting you launch it instantly with a single tap.

Timing controls

Timing Controls let users adjust touch & hold delay, time to action (Accessibility timeout), and autoclick (dwell timing), tailoring interaction pacing for enhanced accessibility.

- Go to **Settings > Accessibility > Timing controls** to set up this function.

System controls

System Controls let users customize navigation mode, power button ends call, and auto-rotate screen, enhancing device usability and adaptability.

- Go to **Settings > Accessibility > System controls** to set up this function.

Vibration & haptics

Vibration & Haptics enables adjustment of vibration intensity and tactile feedback strength, providing haptic cues to help users with visual or auditory impairments intuitively perceive interactions and confirmations.

- Go to **Settings > Accessibility > Vibration & haptics** to set up this function.

Live caption

Live caption detects speech on your device and automatically generates captions.

- Go to **Settings > Accessibility > Live caption** to set up this function.

Caption preferences

Caption preferences customize caption size and style to make them easier to read.

- Go to **Settings > Accessibility > Caption preferences** to set up this function.

Audio description

Audio Description provides voice narration of on-screen content for visually impaired users, describing essential visual information not directly conveyed in supported movies and shows.

- Go to **Settings > Accessibility > Audio description** to enable this function.

Flash notifications

Flash the camera light or the screen when you receive notifications or when alarms sound.

- Go to **Settings > Accessibility > Flash notifications** to set up this function.

Hearing devices

Set up and manage ASHA and LE Audio hearing aids, cochlear implants, and other amplification devices.

- Go to **Settings > Accessibility > Hearing devices** to set up this function.
- You can also go to **Phone**   **> Settings > Accessibility > Hearing aids** to turn on hearing aid compatibility.

Audio adjustment

Audio Adjustment lets users customize audio settings such as mono audio and audio balance for optimal listening experiences.

- Go to **Settings > Accessibility > Audio adjustment** to set up this function.

Accessibility shortcuts

Quickly access accessibility features from any screen.

- Go to **Settings > Accessibility > Accessibility shortcuts** to set up this function.

Text-to-speech output

Text-to-Speech Output converts on-screen text into spoken audio for accessibility needs, allowing customization of voice engine, language, and speech parameters like speed/pitch.

- Go to **Settings > Accessibility > Text-to-speech output** to set up this function.

8 Security & privacy

8.1 Screen lock

From the Home screen, access **Settings** in the control center or from the search apps list. Go to **Security & privacy > Device unlock > Screen lock**.

Screen lock allows you to secure your phone from being used by others without your permission. Activate the following security options: Pattern, PIN, or Password. Whoever turns on your phone will be required to unlock the screen in order to access your device. Your device can be unlocked by anyone if you select None or Swipe.

8.2 Fingerprint sensor

Use your Fingerprint to unlock the screen.

Access **Settings > Security & privacy > Device unlock > Fingerprint & Face Unlock** to activate this function.

Note: you need to set a pattern, PIN, or password before using Fingerprint sensor.

8.3 Face Unlock

Access **Settings > Security & privacy > Device unlock > Fingerprint & Face Unlock** to activate this function.

Face unlock allows you to unlock your device with your facial data. Set it according to the on-screen steps. Make sure you are facing the phone screen when using face recognition.

Note: you need to set a pattern, PIN, or password before using face unlock.

8.4 Extend Unlock

This function is inactive by default; you need to set a screen lock to activate it. If Smart lock is turned on, your device remains unlocked when it is safe with you.

8.5 Encryption & credentials


Under More security & privacy, touch to view your device encryption status and the credentials items. You can modify and clear all of the stored credentials.

8.6 EID

The EID (Embedded Identity Document), also known as eUICCID, is the identification number of your T Phone 3 Pro eSIM, which consists of 32 digits. You can find the EID in device information or on the packaging of your phone.

To locate the EID of your T Phone 3 Pro through the menu, follow these steps:

- Go to the Home screen. To open the menu, swipe up on the screen.
- Choose Settings.
- Scroll down. Choose About phone.
- Scroll down. Choose EID.
- Under EID, the EID is displayed. Return to the Home screen.

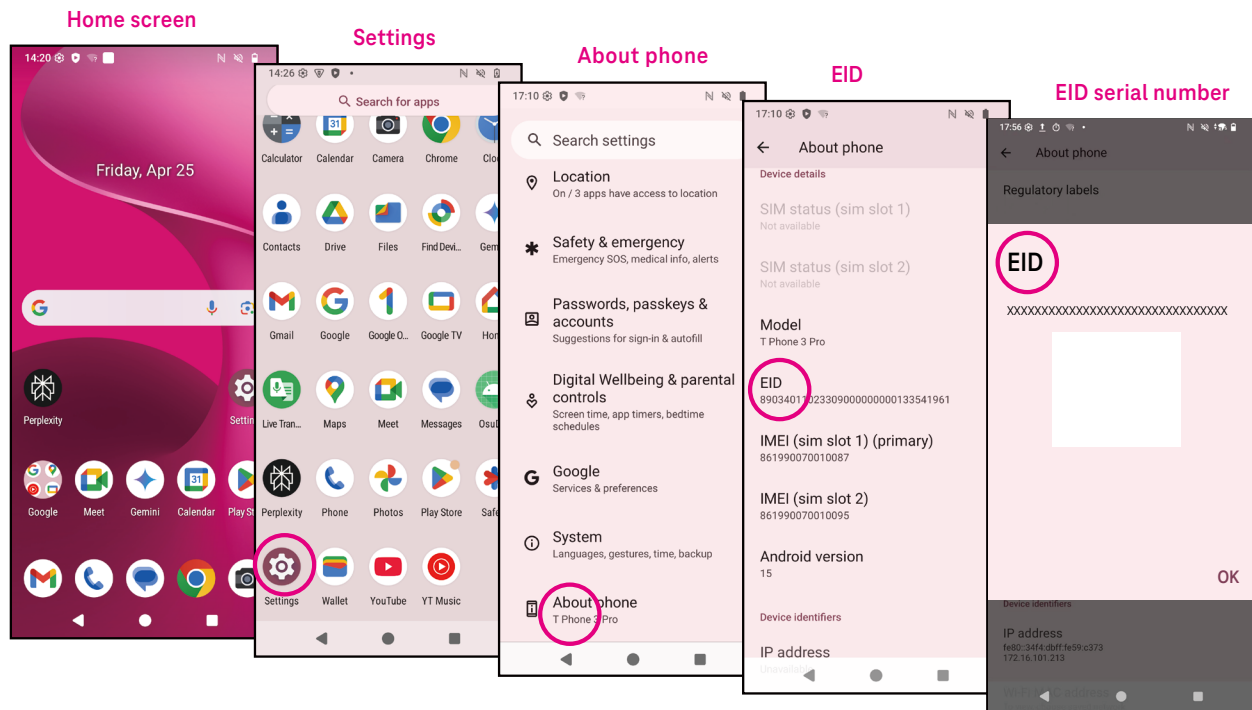

9 Account

9.1 Account information

You can also access account information from your phone.

- Go to **Settings** > **About phone**.

9.2 Software update

To access Software Updates, follow the steps below:

- Connect your device to a Wi-Fi network and make sure it has a strong data connection.
- Ensure your battery is fully charged before starting the software update. Your device's current battery level can be found on your device under **Settings** > **Battery**.
- Go to **Settings** > **System** > **System updates**.
- If you want to update the system, tap **Check for update** and when that's finished, your phone will have the latest version of the software.

10 Safety & regulatory information

Read this chapter carefully before using your mobile device.

Safety and Use

The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use

contrary to the instructions contained herein. Use of connected devices subject to T-Mobile's Terms and Conditions.

Traffic Safety

Always obey the local laws and regulations addressing the use of wireless mobile devices and their accessories in the areas where you drive. The use of mobile devices while driving may be prohibited or restricted in certain areas.

Conditions of Use

Remember to abide by local authority rules of mobile device use on aircrafts.

Operational Warnings

Only use your mobile device in accordance with local laws and regulations and obey all posted notices in public areas.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

- It is recommended to have proper supervision while small children use your mobile device.
- Do not attempt to disassemble your mobile device. If you disassemble your mobile device, the warranty will not apply.
- Always handle your mobile device with care and keep it in a clean and dust-free place.
- Do not allow your mobile device to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is 0°C (32°F) to +40°C (104°F).

Note: The max value depends on the device condition, materials around it and the housing paint and texture.

- At over 40°C (104°F), the legibility of the mobile device's display may be impaired, though this is temporary and not serious.
- Do not open or attempt to paint or repair your mobile device.
- Do not drop, throw or try to bend your mobile device.
- Do not use the mobile device if the screen is damaged, cracked or broken to avoid any injury.
- Use only batteries, battery chargers, and accessories which are recommended by device manufacturer and its affiliates and are compatible with your mobile device model. Device manufacturer and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Please check local laws and regulations in your jurisdiction to learn how to best dispose of your mobile device.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Privacy

Please note that you must respect the laws and regulations of your jurisdiction or other jurisdiction(s) where you will use your mobile device regarding taking photographs and recording sounds with your mobile device. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile device (including the operator) disclaim any liability which may result from the improper use of the mobile device.

Legal Information

In order to provide you with better access to this important information, we've made the materials accessible from the phone's Settings menu. Review these materials prior to using your mobile device. To access the materials on your mobile device, swipe up from the home screen, and tap **Settings > About phone > Legal information**, and select a topic.

Regulatory Information (e-label)

Your mobile device uses an electronic label (e-label) that provides regulatory information about your device. To view the regulatory information for this device on the device, swipe up from the home screen, then tap **Settings > About phone > Regulatory labels**.



This smartphone has been tested and rated for use with hearing aids for some of the wireless technologies that the smartphone uses. However, other wireless technologies may be used in this smartphone that have not been tested for use with hearing aids. It is important to try the different features of your smartphone thoroughly and in different locations to determine if you hear any

interfering noise when using this smartphone with your hearing aid or cochlear implant. Consult your wireless service provider about its return and exchange policies, and for information about hearing aid compatibility. Your device includes a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) set by the CONFORMITE EUROPEENNE(CE). The RF exposure limits set by the CE for wireless mobile devices utilize a unit of measurement referred to as Specific Absorption Rate (SAR), which is a measure of the amount of RF energy absorbed by the body when using a mobile device. The CE limit for public exposure from cellular telephones is a SAR level of 2.0 watts per kilogram (2.0 W/kg). And the highest SAR value for this device when tested at the head was 0.94 W/kg*(10 g), when tested at the body was 1.40 W/kg*(10 g), and when tested at the limb was 2.99 W/kg*(10 g).

This device complies with CE radiation exposure limits set forth for an uncontrolled environment. To ensure compliance with the RF exposure guidelines, the device must be used at least 5mm from your body.

To view additional SAR information on your phone, swipe up from the home screen, then tap > **Settings > About phone > Legal information > RF Exposure**.

Battery and Accessories

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not disassemble or cause a short-circuit in the battery.
- Do not burn or dispose of a used battery in household garbage or store it at temperatures above 35° C.
- Do not disassemble, open, crush, bend, deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

To optimize battery lifespan and performance:

- Avoid extreme heat and frequent fast charging. Prolonged exposure to high temperatures or repeated fast

charging accelerates degradation. Prioritize standard charging for long-term health.

- Disable unused wireless connections. Turn off inactive Wi-Fi/Bluetooth to minimize power drain.
- Enable Adaptive Charging. Activate via **Settings > Battery > Adaptive Battery** to intelligently adjust charging patterns.

Products that have the below symbol must be taken to collection points at the end of their life:



- Municipal waste disposal centers with specific bins for these items of equipment.
- Collection bins at points of sale.


You can learn more about how to recycle your mobile device by visiting the CTIA website at www.ctia.org/news/how-to-recycle-your-mobile-device.

CAUTION: IF BATTERY IS REPLACED BY AN INCORRECT TYPE, DEVICE MIGHT EXPLODE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



Recycling Information

Call Recycle Customer Support at 1-855-368-0829 for recycling instructions or just mention this: In the United States you may learn more about CTIA's Recycling Program at <http://www.recyclewireless-phones.com>.

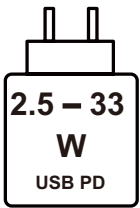

- The power delivered by the charger must be between min 2.5 Watts required by the radio and max 33 Watts in order to achieve the maximum charging speed.
- This device supports the USB PD fast charging.

Chargers

For environmental reasons this package does not include a charger. Use only a certified USB Type-C charger that is compatible with the device. Incompatible chargers may cause damage or affect performance.

Home A.C./Travel chargers will operate within the temperature range of: 0°C (32°F) to 45°C (113°F).

Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

This product should be operated with the recommended power supply unit(s).

Travel charger: Input: 100 - 240V~ 50/60Hz 0.9A

Output: PD3.0: 5V 3A or 9V 3A, 11V 3A, PPS: 5~11V 3A

Licenses



microSD logo is a trademark of SD-3C, LLC.



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by device manufacturer and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

11 Specification

Funkstandard	Frequenz	Ausgangsleistung
GSM	B3	30.0dBm+/-1dB
	B8	33.0dBm+/-1dB
WCDMA	B1	24.0dBm+/-1dB
	B8	24.0dBm+/-1dB
LTE	B1	24.0dBm+/-1dB
	B3	24.0dBm+/-1dB
	B7	23.0dBm+/-1dB
	B8	24.0dBm+/-1dB
	B20	24.0dBm+/-1dB
	B28	24.0dBm+/-1dB
	B38	26.0dBm+/-1dB
	B40	24.0dBm+/-1dB
	B41	26.0dBm+/-1dB
NR	N1	24.0dBm+/-1dB
	N3	24.0dBm+/-1dB
	N7	23.0dBm+/-1dB
	N28	24.0dBm+/-1dB
	N38	26.0dBm+/-1dB
	N41	26.0dBm+/-1dB
	N75	RX
	N77	26.0dBm+/-1dB
	N78	26.0dBm+/-1dB
WIFI CH0		
2.4G WiFi	2412MHz-2472MHz	18.0dBm+/2dB
5G WiFi	5150MHz-5250MHz	18.5dBm+1.5/-2dB
	5250-5350MHz, 5470MHz-5725MHz	18.5dBm+1.5/-2dB
	5725MHz-5850MHz	17.0dBm+/-2dB
6G WiFi	5925MHz-6425MHz	15.0dBm+/-2dB
B T	2402MHz-2480MHz	13.5dBm+/-3dB
NFC	13.56MHz	42 dBuA/m @ 10 m
WIFI CH1		
2.4G WiFi	2412MHz-2472MHz	18.0dBm+1.5/-2dB

Funkstandard	Frequenz	Ausgangsleistung
5G WiFi	5150MHz-5250MHz	17.0dBm+1.5/-2dB
	5250-5350MHz, 5470MHz-5725MHz	17.0dBm+1.5/-2dB
	5725MHz-5850MHz	17.0dBm+1.5/-2dB
6G WiFi	5925MHz-6425MHz	15.0dBm+1.5/-2dB

Frequency band: 5150 - 5250 MHz:

Indoor use: Inside buildings only. Installations and use inside road vehicles and train carriages are not permitted. Limited outdoor use: If used outdoors, equipment shall not be attached to a fixed installation or to the external body of road vehicles, a fixed infrastructure or a fixed outdoor antenna. Use by unmanned aircraft systems (UAS) is limited to within the 5170 - 5250 MHz band.

Frequency band: 5250 - 5350 MHz:

Indoor use: Inside buildings only. Installations and use in road vehicles, trains and aircraft are not permitted. Outdoor use is not permitted. Operation of WAS/RLAN installations in large aircraft (excluding multi-engined helicopters) is permitted until 31 December 2028.

Frequency band: 5470 - 5725 MHz:

Installations and use in road vehicles, trains and aircraft and use for unmanned aircraft systems (UAS) are not permitted. Operation of WAS/RLAN installations in large aircraft (excluding multi-engined helicopters), except in the frequency band 5600 - 5650 MHz, is permitted until 31 December 2028.

12 Troubleshooting

Review some of these common issues and their solutions.

My phone can't receive incoming calls

- Make sure that your phone is switched on and connected to a network.
- Check for overloaded or unavailable network.
- Check your subscription status.
- Make sure that you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your phone is not in airplane mode.

The caller's name/number doesn't appear when a call is received

- If the caller is not in your contact list, you have the option to subscribe to NameID.
- Your caller may have concealed his name or number.

I can't find my contacts

- Make sure that your SIM card is not broken.

- Make sure that your SIM card is inserted properly.
- Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- Adjust the volume during a call by pressing the Volume key.
- Check the network strength. Move to a location with stronger signal strength.
- Make sure that the receiver, connector or speaker on your phone is clean.

I can't use the features described in the manual

- Check to make sure that your subscription includes this service.
- Make sure that this feature doesn't require any additional accessory.

When I select a number from my contacts, the number can't be dialed

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country code when calling an international number.

My phone can't connect to a network or "No service" is displayed

- Try connecting to the network by moving to another physical location.
- Verify the network coverage in your current area.
- Check that your SIM card is valid.
- Make sure your phone's setting is not in airplane mode.
- If you are away from your T-Mobile network, you may need to enable roaming in the phone's settings to connect to another network. Roaming charges may apply.

My phone can't connect to the internet

- Make sure that Cellular Data internet service is available in your wireless service plan.
- Check your phone's settings. Make sure Cellular Data is enabled or Wi-Fi connected.
- Make sure that you are in a place with network coverage for cellular data or Wi-Fi internet connection.
- Try connecting at a later time or from another location.

Invalid SIM card

- Make sure that the SIM card has been correctly inserted (see "Inserting Nano SIM card").
- Make sure that the chip on your SIM card is not damaged.
- Make sure that the service of your SIM card matches the network you're on.

My phone can't make outgoing calls

- Make sure that you have dialed a valid number and have touched Call on your phone.

- For international calls, check the country and area codes.
- Make sure that your phone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status.
- Make sure that you have not barred outgoing calls.

My phone can't be switched on

- If the phone can't be switched on, charge for at least 10 minutes to ensure the minimum battery power needed. Then switch it on again.

My phone has not responded for several minutes

- If your phone doesn't respond, turn off your phone by pressing and holding the Power key until it turns off and then restart it again.

My phone turns off by itself

- If your phone turns off by itself, make sure that the Power key is not accidentally pressed.
- Check the battery charge level.
- If it still doesn't work, Factory reset the phone via the Reset options in the phone's Settings. Make sure you have backed up your data.

My phone can't charge properly

- Make sure that your battery is not completely discharged; if the battery power has been discharged for a long time, it may take around 10 minutes to display the battery charging indicator on the screen.
- Make sure that charging is carried out under normal conditions (0°C (32°F) to 45°C (113°F)).

I can't add a contact

- Make sure that your SIM card contact list are not full; delete some files or save the files to the phone.

My callers can't leave messages on my voicemail

- Contact your network carrier to check service availability.
- Set up your voicemail so that your caller can leave a message.

I can't access my voicemail

- Make sure that T-Mobile's voicemail number is correctly entered in "Voicemail number".
- Try later if the network is busy.

I can't send and receive MMS

- Check your phone storage as it might be full.

- Contact customer care to check service availability and MMS parameters.
- Verify the server center number or your MMS profile with customer care.
- The server center may be swamped. Try again later.
- Start a new Messaging string. Your messaging string may have reached its limit.

SIM card PIN locked

- Contact customer care to obtain the PUK (Personal Unblocking Key) code.

I can't connect my phone to my computer

- Install Smart Suite.
- Check that your USB driver is installed properly.
- Open the Notification panel to check if the Smart Suite Agent has been activated.
- Check that you have marked the USB debugging checkbox.
- Check that your computer meets the requirements for Smart Suite installation.
- Make sure that you're using the right cable from the box.

I can't download new files

- Make sure that there is enough phone storage space for your download.
- Select the microSD card as the location to store downloaded files.
- Check your subscription status.

The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your phone is visible to other users.
- Make sure that the two devices are within Bluetooth's detection range.

The battery drains too fast

- Make sure that you follow the complete charge time (minimum 2.3 hours).
- After a partial charge, the battery level indicator may not be exact.
- Wait for at least 10 minutes after removing the charger to obtain an exact indication.
- Adjust the brightness of screen as appropriate.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information manually or increase their auto-check interval.
- Exit background-running applications if they are not being used for extended periods of time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

The phone becomes warm following prolonged calls, game playing, internet surfing or running other complex applications

- This heating is a normal consequence of the CPU handling excessive data. Ending the above actions will make your phone return to normal temperature.

After Factory data reset is performed, I can't use my phone without entering Google Account credentials

- After reset is performed, you must enter the original Google Account credentials that were used on this phone.
- If you don't remember your Google Account credentials, complete Google Account recovery procedures.

The phone doesn't ring when a call or message arrives

- Make sure that Do Not Disturb mode (go to **Settings > Sound & vibration > Do Not Disturb**) is not activated.
- Press the Volume key to adjust volume.